

Options



Three-phase monitor

Three-phase monitor

Should one phase fail, a relay contact will be switched and the 24 V current loop of the CeaGuard 48 cover will be interrupted. Thereby, the connected emergency luminaires are switched over to battery operation.


Simultaneously, the potentialfree indicator contact of the three-phase monitor provides the possibility to exactly localize the voltage failure. If more than one subsidiary distribution board is to be monitored, it is possible to interlink several three-phase monitoring modules.

Technical data

Dimensions (mm) (h x w x d)	85 x 52.5 x 65
Enclosure	Plastic
Connection terminals	2.5 mm ² rigid and flexible
Type of mounting	DIN rail
Contact 1, 2, 3, S, S	0.5 A/24 V AC DC

Ordering details

Type	Scope of supply	Order No.
Three-phase monitor	Module	4 0071 343 430

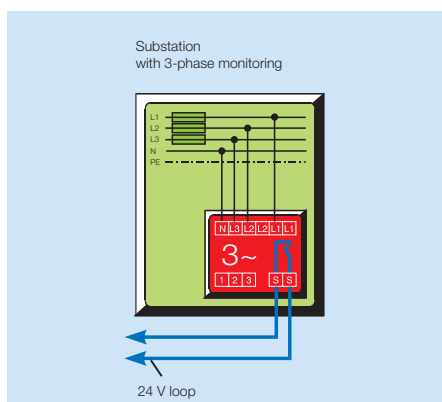

Substation with 3-phase monitoring

24 V loop



F3 remote indication

F3 remote indication

The CEAG F3 remote indication indicates the status of a CeaGuard 48 cover. The following is indicated via three potentialfree indicator contacts:

- mains operation
- battery operation
- system failure

Backed up by an own battery supply of the CeaGuard 48 cover, these indicators are also displayed in a mains fail condition.

The connected CeaGuard 48 cover can be put out of operation by means of a built-in key-operated switch.

Technical Data

Connection terminals	2.5 mm ² rigid and flexible
Switching capacity of the contacts	11/12, 21/22, 31/32 0.5 A/24 V AC/DC
Dimensions (mm) (h x w x d)	180 x 80 x 55

Ordering details

Type	Scope of supply	Order No.
F3 remote indication	Module	4 0071 338 497

