



**Montage- und Betriebsanleitung**  
**Mounting and Operating Instructions**

Style 55011,-021 CG-S  
Style 55011,-021

Zielgruppe: Elektrofachkraft  
Target group: Skilled electricians



## Inhaltsverzeichnis


<b>1 Aufbau und Maßbilder</b> .....	3
1.1 Aufbau der einseitigen Leuchten.....	3
1.2 Aufbau der zweiseitigen Leuchten.....	4
1.3 Maßbilder.....	5
<b>2 Sicherheitshinweise</b> .....	6
<b>3 Normenkonformität</b> .....	6
<b>4 Technische Daten</b> .....	6
4.1 Kurzbeschreibung / Verwendungsbereich.....	6
<b>5 Installation</b> .....	7
5.1 Montage.....	7
5.2 Montagezubehör.....	7
5.3 Adressierung (nur STYLE 550.. CG).....	8
<b>6 Instandhaltung / Wartung</b> .....	8
<b>7 Recycling</b> .....	8

## Table of Contents

<b>1 Construction and dimensional drawings</b> .....	3
1.1 Construction of the single-sided luminaire.....	3
1.2 Construction of the two-sided luminaire.....	4
1.3 Dimensional drawings.....	5
<b>2 Safety instructions</b> .....	9
<b>3 Conformity with standards</b> .....	9
<b>4 Technical Data</b> .....	9
4.1 Brief description / Field of application.....	9
<b>5 Installation</b> .....	10
5.1 Mounting.....	10
5.2 Mounting accessories.....	10
5.3 Addressing (only STYLE 550.. CG).....	11
<b>6 Servicing / Maintenance</b> .....	11
<b>7 Recycling</b> .....	11

# 1.1 Aufbau der einseitigen Leuchte


## 1.1 Construction of the single-sided luminaire

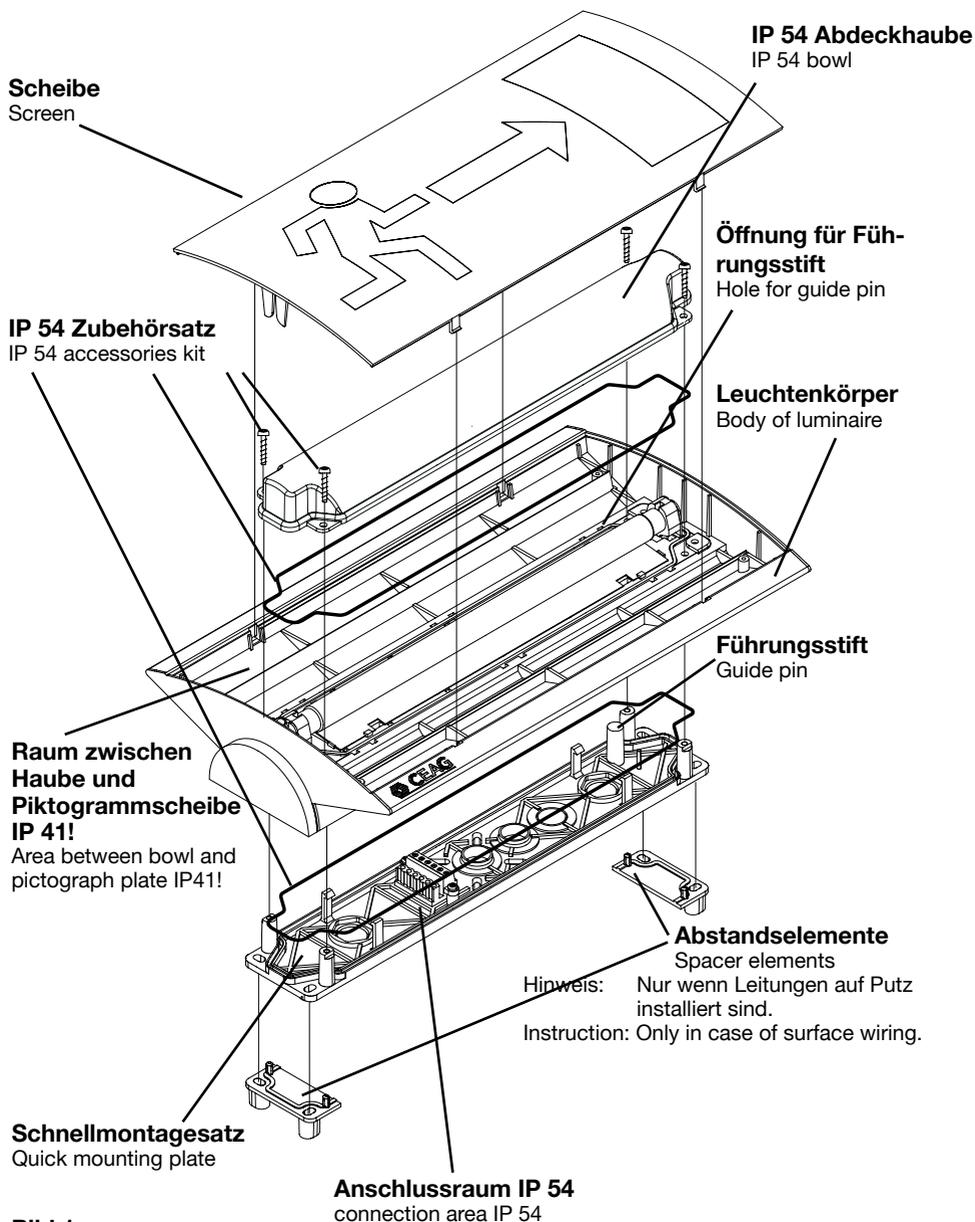

**Bild 1**  
Fig. 1


## 1.2 Aufbau der zweiseitigen Leuchte

## 1.2 Construction of the two-sided luminaire

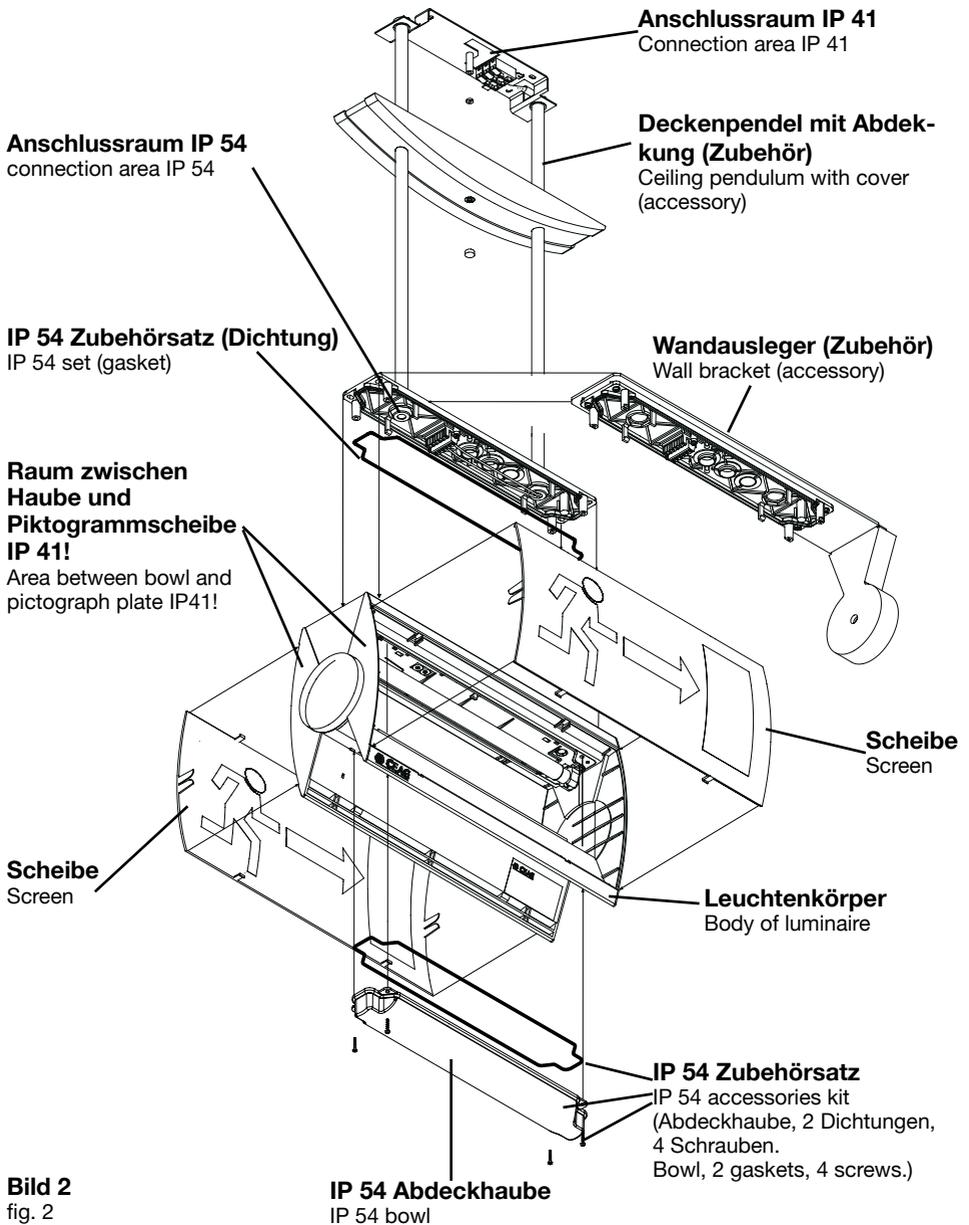


**Bild 2**  
fig. 2


# 1.3 Maßbilder 1.3 Dimensional Drawings

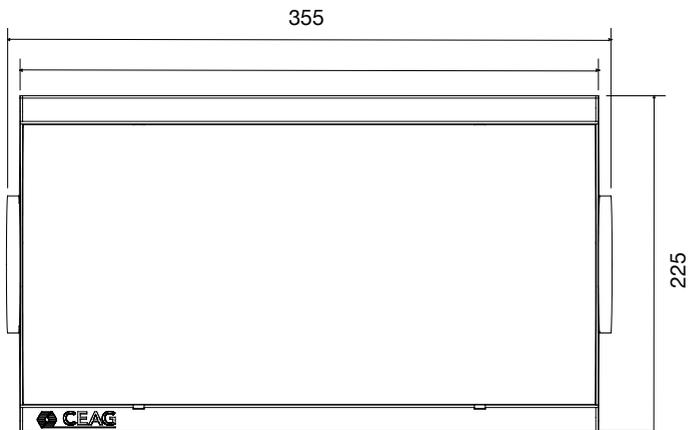

Typ: 55011    Typ: 55021

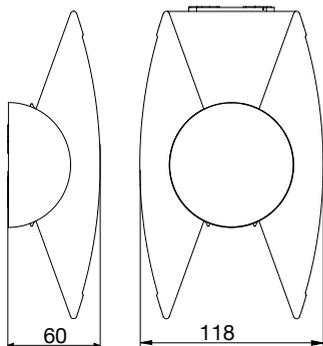

## Schnellmontagesatz / Quick mounting plate

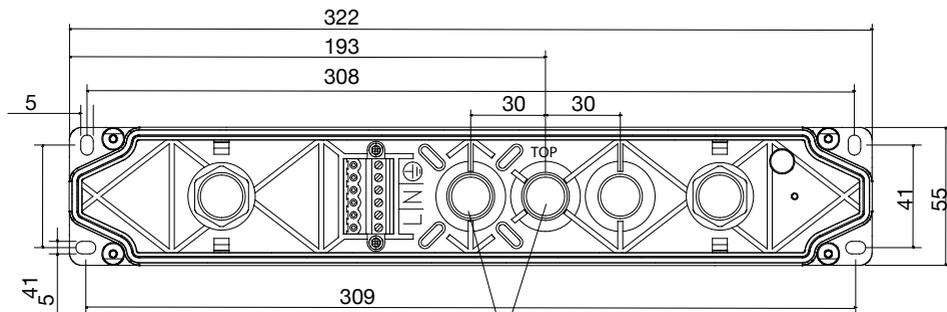

**Bild 3**  
fig. 3

## 2. Sicherheitshinweise



- Die Leuchte ist bestimmungsgemäß in unbeschädigtem und einwandfreiem Zustand zu betreiben!
- Als Ersatz dürfen nur Originalteile von CEAG verwendet werden!
- Bei Durchführung von Arbeiten an der Notleuchte ist erst die Anlage zu blockieren, der Batteriekreis zu unterbrechen und dann das Netz abzuschalten. Bild 4 zeigt das Hinweisschild auf der Notleuchte.
- Vor der ersten Inbetriebnahme muss die Leuchte entsprechend den im Abschnitt Installation genannten Anweisungen geprüft werden!
- Die Notleuchtenkennzeichnung vornehmen: Stromkreis und Leuchtennummer zuordnen und eintragen.
- Die Protokollführung gemäß der nationalen Vorschriften ist durchzuführen (entfällt bei automatischer Protokollierung)!
- Alle Fremdkörper müssen vor der ersten Inbetriebnahme aus dem Gerät entfernt werden!
- Beachten Sie bei allen Arbeiten an dem Gerät die nationalen Sicherheits- und Unfallverhütungsvorschriften und die nachfolgenden Sicherheitshinweise in der Betriebsanleitung, die mit einem  versehen sind!



Bild 4

## 3. Normenkonformität

Leuchte für Notbeleuchtung gem. EN 60 598-2-22, zum Anschluss an Sicherheitsbeleuchtungsanlagen gem. DIN VDE 0100-718, EN 50 172 und E DIN VDE 0108-100. Verwendetes EVG konform mit: EN 60 929, EN 61 347-2-3 und EN 61 347-2-4. Gemäß ISO 9001 entwickelt, gefertigt und geprüft.

## 4. Technische Daten

Anschluss- spannung:	220-240 V DC 50/60 Hz 176 - 275V DC
Standby Verlustleistung:	<0,5W
Leistungsfaktor:	0,6
Einschaltstoßstrom:	3A/ms
Betriebsfrequenz:	44kHz
Stromaufnahme (AC):	60 mA
Leistungsaufnahme (AC):	max. 15 VA
Stromaufnahme (DC):	30 mA
Lampe:	8 W nach 81-IEC-1040-1
Nennlichtstrom der Lampe:	450 lm
Bemessungs- lichtstrom:	75 % ( $\Phi_{\text{Netz}}$ )
Schutzklasse:	II
Schutzart nach EN 60529:	IP 41
Option:	IP 54
Umgebungs- temperatur:	-10 °C .. +40 °C
Netzanschluss- klemmen:	3 x 2 x 2,5 mm <sup>2</sup>
Gewicht:	0,85 kg (eins.) 1,0 kg (zweis.)
Abmessungen:	siehe Maß- bilder S. 6

### 4.1 Kurzbeschreibung /

#### Verwendungsbereich

Rettungs- oder Sicherheitsleuchten für den Betrieb an CEAG Sicherheitsbeleuchtungsanlagen mit Einzelleuchtenüberwachung (**C**ewa-**G**uard-Technologie) und/oder mit programmierbarer Schaltbarkeit im Endstromkreis (**S**TAR-Technologie) geeignet. Die Leuchten Style 55011,-021 sind ohne Überwachungselektronik ausgerüstet und somit weder adressierbar, noch schaltbar.

## 5. Installation



Halten Sie die für das Errichten und Betreiben von elektrischen Betriebsmitteln geltenden Sicherheitsvorschriften und das Gerätesicherheitsgesetz sowie die allgemein anerkannten Regeln der Technik ein!

### 5.1 Montage

Nach Befestigung des Schnellmontagesatzes gemäß zugehöriger Anleitung ist die Netzverbindung (L(U), N(0), PE) herzustellen (Bild 5). Achten Sie auf den festen Sitz der Klemmschrauben! Nichtbenutzte Einführungen sind mit montiertem Verschlussstopfen zu belassen (IP-Schutz).

Zur Montage der Leuchte ist die Öffnung im Leuchtenkörper auf den Führungsstift (Bild 1) des Schnellmontagesatzes aufzusetzen. Alle vier Ecken am unteren Teil des Leuchtenkörpers sind bis zum deutlichen Rasten auf den Schnellmontagesatz aufzudrücken (Schnapphaken rasten am Schnellmontagesatz). Bei Installation der Leuchte in IP 54 Schutzart ist der IP 54 Zubehöratz mit 4 Schrauben zu befestigen.

Zum Lampenwechsel oder der Adressierung sind Schnapphaken der Scheibe mit einem Schlitzschraubendreher zu lösen (Bild 6).

Zum Lösen des Leuchtenkörpers vom Schnellmontagesatz ist ein Schlitzschraubendreher in die seitliche Aussparung am Reflektor zu stecken (Bild 7) und der Schnapphaken durch seitliche Hebelwirkung in Richtung Außenkante zu lösen. Mit leichtem Ziehen innen am Leuchtenkörper löst sich selbiger vom Schnellmontagesatz.

Nachdem alle vier Schnappverbindungen gelöst sind, kann der Leuchtenkörper vom Schnellmontagesatz getrennt werden; bei IP 54 müssen zusätzlich die 4 Schrauben gelöst werden.

### 5.2 Montagezubehör

#### Pendelaufhängung (CEAG Nr. 400 71 345 972)

Zur abgehängten Montage von ein- und zweiseitigen Leuchten kann als Zubehör ein Pendelpaar eingesetzt werden. Die beifügte Montageanleitung ist zu beachten.

#### Wandausleger (CEAG Nr. 400 71 345 974)

Zur Wandmontage von ein- und zweiseitigen Leuchten kann als Zubehör ein Wandausleger eingesetzt werden. Der Wandausleger kann auch zur senkrechten Deckenmontage einer einseitigen Leuchte eingesetzt werden. Weitere Montagemöglichkeiten sind möglich. Die beifügte Montageanleitung ist zu beachten.

#### Schnellmontagesatz (CEAG Nr. 400 71 345 980)

Der Schnellmontagesatz wird an Wänden, Decken oder sonstigen Trägern befestigt. Der Leuchtenkörper wird mit Schnapphaken auf den Schnellmontagesatz aufgeschnappt. Die beifügte Montageanleitung ist zu beachten.

#### IP 54 Zubehöratz (CEAG Nr. 400 71 345 985)

Mit Hilfe des IP 54 Zubehörsatzes kann der Anschlussraum und der Raum unter der zusätzlichen Haube über dem Leuchtmittel der Systemleuchtenserie von der Schutzart IP41 auf die Schutzart IP 54 erhöht werden. Die beifügte Montageanleitung ist zu beachten. Eine Sonderausführung für die Pendelbefestigung mit der Schutzart IP 54 ist unter der CEAG Nr. 400 71 345 944 erhältlich.

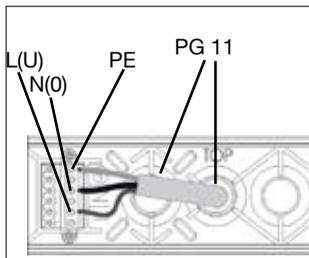


Bild 5

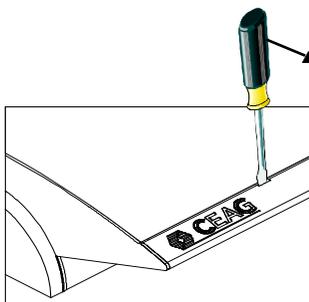


Bild 6

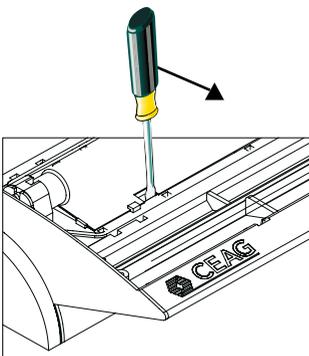


Bild 7

**Kettenbefestigung  
(CEAG Nr. 400 71 345 973)**

Die Kettenbefestigung enthält ein Blechelement zur Deckenmontage einschließlich des notwendigen Zubehörs und dem Schnellmontagesatz. Die Kette selbst ist nicht Bestandteil des Lieferumfangs. Die beigefügte Montageanleitung ist zu beachten.



**Ballschutzkorb  
(CEAG Nr. 400 71 345 911)**

Der Ballschutzkorb wird mit beigefügten Schellen vor die Lichtaustrittfläche der Leuchten geschraubt. Der feste Halt des Ballschutzkorbes ist zu prüfen!

**5.3 Adressierung  
(nur STYLE 550.. CG)**

Vor Montage der Scheibe muss die individuelle Leuchtenadressierung eingestellt werden. Hierzu ist mit einem geeigneten Schraubendreher die gewünschte Adresse (1 - 20) am Adressschalter einzustellen (Pfeil auf Zahl, Bild 8). Soll die Leuchte nicht überwacht werden, ist immer die Stellung 0/0 einzustellen.

Die Leuchten STYLE 55011 und 55021 sind nicht mit einer Überwachungselektronik ausgerüstet und sind nicht adressierbar.

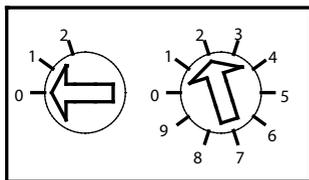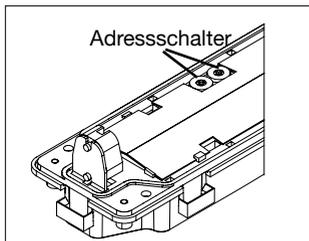

Schalter 1                      Schalter 2

**6. Wartung /  
Instandhaltung**

Halten Sie die für Instandhaltung, Wartung und Prüfung von elektrischen Betriebsmitteln geltenden Bestimmungen ein! Bei sachgerechtem Betrieb und unter Beachtung der Montagehinweise und Umgebungsbedingungen ist keine ständige Wartung erforderlich.

**7. Entsorgung /  
Recycling**

Beachten Sie bei der Entsorgung defekter Geräte die gültigen Vorschriften hinsichtlich Recycling und Entsorgung. Kunststoffmaterialien sind mit entsprechenden Symbolen gekennzeichnet.

Adressschalter 1	Adressschalter 2	Leuchtenadresse
0	0	Überwachung aus
0	1	1
0	2	2
...	...	...
1	0	10
1	1	11
...	...	...
...	...	...
2	0	20
2	1	nicht zulässig
...	...	...
2	9	nicht zulässig

Bild 8 Adressschalter

- Technische Änderungen vorbehalten -

## 2. Safety Instructions



- The device shall only be used for its intended purpose and in undamaged and perfect condition!
- Only genuine CEAG spare parts may be used for replacement and repair!
- When working on the emergency luminaire first the system must be blocked, battery operation must be interrupted and mains must be cut off. Fig. 4 shows the indication label on the emergency luminaire.
- Prior to its initial operation, the luminaire will have to be checked in accordance with the instructions as per section Installation!
- Carry out the marking of the emergency luminaire: Assign the circuit and the luminaire No. and enter them.
- Recording in the minutes shall be performed in compliance with the national regulations (is deleted in case of automatic recording).
- Any foreign matter shall be removed from the luminaire prior to its initial operation!
- While undertaking any servicing on the luminaire, the national safety rules and regulations for prevention of accidents shall be observed as well as the safety instructions included in these operating instructions marked with a

## 3. Conformity with standards

Luminaire for emergency lighting acc. to EN 60 598-2-22 for connection to safety luminaire systems acc. to DIN VDE 0100-718, EN 50 172 and E DIN VDE 0108-100. Used ECG is conform to:

EN 60 929, EN 61 347-2-3 and EN 61 347-2-4.

Designed, manufactured and tested according to DIN EN ISO 9001.

## 4. Technical data

Power input:	220-240 V AC
	50/60 Hz
	176 - 275 V DC
Standby power loss:	< 0.5W
Power factor:	0.6
Inrush current:	3A/ms
Operating frequency:	44 kHz
Rated current (AC):	60 mA
Power consumption (AC):	max. 15 VA
Rated current (DC):	30 mA
Lamp:	8 W acc. to 81-IEC-1040-1
Rated luminous flux of the lamp:	450 lm
Rated luminous flux for emergency operation:	75 % ( $\phi_{\text{mains}}$ )
Insulation class:	II
Protection category acc. to EN 60529:	IP 41
At option:	IP 54
Perm. ambient temperature:	- 10 °C ..+ 40°C
Supply terminals:	3 x 2 x 2.5 mm <sup>2</sup>
Weight:	0.85 kg (single side) 1.0 kg (two-sid.)
Dimensions:	see dimensional drawing in page 6

### 4.1 Brief description /

#### Scope of application

Exit or safety luminaire, suitable for operation on CEAG safety lighting systems with single luminaire monitoring (**CewaGuard-Technology**) and/or with programmable switching mode in the outgoing circuit (**STAR-technology**).

The Style 55011,-021 is not fitted with monitoring electronic and so neither addressable nor switchable.



Fig. 4

## 5. Installation



For the mounting and operation of electrical apparatus, the respective national safety regulations (e. g. ElexV, equipment safety law for Germany) as well as the general rules of engineering will have to be observed.

be removed from the quick mounting plate; in case of the IP 54 version the 4 screws will have to be unscrewed.

### 5.2 Mounting accessories

#### Pendulum set

**(CEAG No. 400 71 345 972)**

A pendulum set is available for suspended mounting of single- or two-sided luminaires. The attached mounting instructions have to be observed.

#### Wall bracket

**(CEAG No. 400 71 345 974)**

For wall mounting of single- or two-sided luminaires, a wall bracket is available as accessory. This wall bracket can also be used for vertical ceiling mounting of a single-sided luminaire. Further possibilities of mounting are given. The attached mounting instructions have to be observed.

#### Quick mounting plate

**(CEAG No. 400 71 345 974)**

The quick mounting plate is used for fixing the body of luminaire and is snapped by means of snap hooks. The attached mounting instructions have to be observed.

#### IP 54 accessories kit

**(CEAG No. 400 71345 975)**

By means of the IP 54 accessories kit the protection class of the connection area and the additional area under the cover above the illuminant series can be extended from IP 41 to IP 54. The attached mounting instructions have to be observed!

A special version for pendulum suspension with IP 54 protection is available under the CEAG  
**No. 400 71 345 944.**

### 5.1 Mounting

After fixing the quick mounting plate in accordance with the respective instructions, the mains connection (L (U), N (0), PE) is to be established (fig. 5). Pay attention to a tight fit of the terminal screws! Unused cable entries are left with their locking plug fitted (IP protection).

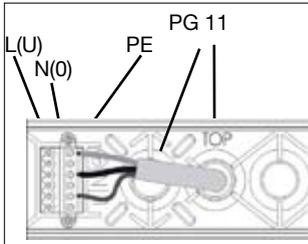


Fig. 5

In order to fix the luminaire, the opening in the body of the luminaire is placed on the guide pin (fig. 1) of the quick assembly plate. Then all four corners of the body of the luminaire are pushed down until they distinctly lock in on the quick mounting plate (the snap hooks engage in the quick mounting plate). When installing the luminaire with IP 54 protection, the IP 54 accessories kit is to be fixed with 4 screws.

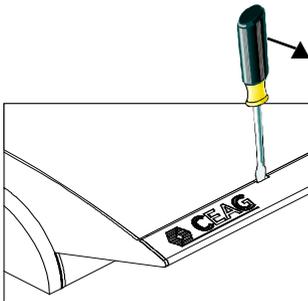


Fig. 6

For lamp replacement or addressing, the snap hooks of the screen are detached with a slotted screw driver (fig. 6).

In order to detach the body of luminaire from the quick mounting plate, a slotted screw driver is inserted into the lateral recess on the reflector (fig. 7). Through a slight lateral lever action towards the outer edge, the snap hook is released. When slightly pulling the body of luminaire from the inside, it disengages from the quick mounting plate. After having released all four snap connections, the body of luminaire can

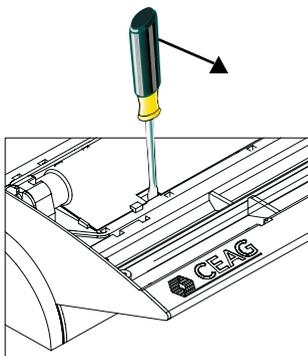


Fig. 7

**Chain suspension  
(CEAG No. 400 71 345 973)**

The chain suspension includes a sheet steel strap for ceiling mounting, including the necessary accessories and the quick mounting plate. The chain is not included in our standard delivery. The attached mounting instructions have to be observed.



**Wire guard  
(CEAG No. 400 71 345 911)**

The wire guard is screwed before the light outlet of the luminaire by means of the attached clamps. Check the firm hold of the wire guard!

**5.3. Addressing only  
STYLE 55.. CG)**

Before fitting the screen or bowl, the addressing of the individual luminaires will have to be performed. To do so, the desired address (1 - 20) is set on the address switch by means of a suitable screw driver (Arrowhead to No., fig. 8). If the luminaire should not be monitored the code 0/0 has to be selected.

The luminaire STYLE 55011 and 55021 are not equipped with monitoring circuit and will not be addressable.

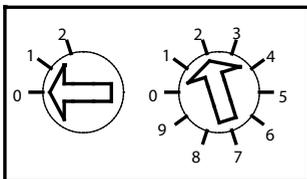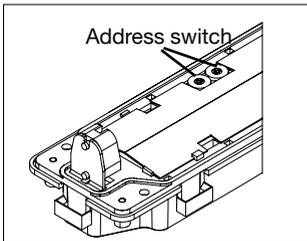

Switch 1                      Switch 2

fig. 8 Address switch

**6. Servicing /  
Maintenance**

Observe the relevant national regulations which apply to the maintenance, servicing and check of electrical apparatus (in Germany DIN VDE 0105, part 9)! On condition of an appropriate operation and of observing the mounting instructions and environmental conditions, no permanent servicing will be required.

**7. Disposal /  
Recycling**

When a defective apparatus is disposed of, the respective national regulations on waste disposal and recycling will have to be observed. Plastic parts have been provided with respective symbols.

-We reserve the right to carry out technical changes!-

Address switch 1	Address switch 2	Luminaire address
0	0	Monitoring off
0	1	1
0	2	2
...	...	...
1	0	10
1	1	11
...	...	...
...	...	...
2	0	20
2	1	not permissible
...	...	...
2	9	not permissible

**CEAG Notlichtsysteme GmbH**

Senator-Schwartz-Ring 26  
59494 Soest  
Germany

Tel: +49 (0) 2921/69-870  
Fax: +49 (0) 2921/69-617  
Web: [www.ceag.de](http://www.ceag.de)  
Email: [info-n@ceag.de](mailto:info-n@ceag.de)

**Cooper Safety**

Jephson Court  
Tancred Close  
Royal Leamington Spa  
Warwickshire CV31 3RZ  
United Kingdom

Tel: +44 (0) 1926 439200  
Fax: +44 (0) 1926 439240  
Web: [www.cooper-safety.com](http://www.cooper-safety.com)  
Email: [enquiries@cooper-safety.com](mailto:enquiries@cooper-safety.com)

300 80 001 612(G)/XXX/08.09/WK