

Mounting and Operating Instructions

Central Battery System ZB-S with STAR-Technologie

Target group, part 1: Qualified electrician acc. to DIN VDE 0105, part 1

Target group, part 2: Electrical instructed persons

COOPER Safety



Index

PART 1

| | | |
|----------|--|----------|
| 1 | General Information | 5 |
| 1.1 | Description of Symbols | 5 |
| 1.2 | Information regarding these Instructions | 5 |
| 1.3 | Further Applicable Documents | 5 |
| 1.4 | Liability and Guarantee | 5 |
| 1.5 | Copyright Protection | 6 |
| 1.6 | Spare Parts | 6 |
| 1.7 | Recycling | 6 |
| 2 | Safety | 6 |
| 2.1 | Intended Use | 7 |
| 2.2 | Contents of Operating Instructions | 7 |
| 2.3 | Changes and Modifications to the System | 7 |
| 2.4 | Responsibility of the Operator | 7 |
| 2.5 | Personnel Requirements | 7 |
| 2.6 | Operational Safety | 7 |
| 2.7 | Personal Protective Equipement | 7 |
| 3 | Technical Data | |
| 3.1 | Data Sheet for ZB-S/26 | 8 |
| 3.2 | Data Sheet for ZB-S/18 | 9 |
| 3.3 | Data Sheet for ZB-S/LAD | 10 |
| 3.4 | Data Sheet for ZB-S/10C | 11 |
| 3.5 | Data Sheet for ZB-S/10C6 | 12 |
| 3.6 | Data Sheet for ZB-S/18C6 | 13 |
| 3.7 | Data Sheet for ZB-S/26C6 | 14 |
| 3.8 | Data Sheet for ZB-S/18C3 | 15 |
| 3.9 | Data Sheet for ZB-S/10C30 | 16 |
| 3.10 | Data Sheet for ZB-S/2C3 | 17 |
| 3.11 | Data Sheet for US-S/36 | 18 |
| 3.12 | Data Sheet for US-S/28 | 19 |
| 3.13 | Data Sheet for US-S/21 | 20 |
| 3.14 | Data Sheet for US-S/13 | 21 |
| 3.15 | Data Sheet for US-S/5 | 22 |
| 3.16 | Data Sheet for ESF-E30/13S | 23 |
| 3.17 | Data Sheet for ESF-E30/13S-P | 24 |
| 3.18 | Data Sheet for ESF-E30/28S-56 | 25 |
| 3.19 | Data Sheet for ESF-E30/28S-P | 26 |
| 4 | Construction and Function | |
| 4.1 | Example of Control Cabinet-Construction | 28 |
| 4.2 | Description of Product | 29 |
| 4.3 | Operation Modes | 29 |
| 4.4 | Overview of Components | 30 |
| 4.4.1 | Control Module ZB-S | 30 |
| 4.4.2 | DC/DC Converter.2 | 34 |
| 4.4.2.1 | AC-Module | 34 |
| 4.4.3 | Charging Module LT.1 2,5 | 34 |

Index

| | | |
|----------|---|----|
| 4.4.4 | Overview of Circuit Change-Over Modules | 36 |
| 4.4.5 | Inverter SWR 150 | 40 |
| 4.4.5.1 | Determination of current consumption value from the battery | 44 |
| 4.4.6 | Event printer PD3 | 45 |
| 4.4.7 | Relay Modules CG IV and CG V | 46 |
| 4.4.8 | External TLS-Bus-Module | 47 |
| 4.4.9 | External DLS/3Ph-Bus-Module and ext. DLS/3Ph-Bus-Module inverse | 48 |
| 4.4.10 | Webmodule | 50 |
| 4.4.11 | Bus-Technology acc. to RS485 or CG-S-Bus | 51 |
| 4.4.12 | Batteries for Emergency Supply | 52 |
| 4.5 | Example of Installation | 53 |
| 4.6 | Label of ZB-S | 54 |
| 5 | Transport, Packaging and Storage | |
| 5.1 | Safety Notes | 56 |
| 5.2 | Transport Inspection | 56 |
| 5.3 | Packaging | 56 |
| 5.4 | Storage | 57 |
| 6 | Installation | |
| 6.1 | Safety Notes | 58 |
| 6.2 | Assembly | 59 |
| 6.3 | Installation | 59 |
| 6.4 | Connection to Mains | 60 |
| 6.4.1 | Connection to Mains Supply of a ZB-S Station | 60 |
| 6.4.2 | Connection to Mains of Substations US-S | 61 |
| 6.5 | Connection to Battery Power Supply | 61 |
| 6.5.1 | Connection to Battery Power Supply for a ZB-S Station | 62 |
| 6.5.2 | Connection to Battery Power Supply for a Substation US-S | 62 |
| 6.6 | Connection of Temperature Sensor | 63 |
| 6.7 | Connection and Installation of Internal Modules | 63 |
| 6.8 | Connection and Installation of External Modules | 64 |
| 6.8.1 | DLS/3Ph-Bus-Modules | 64 |
| 6.8.2 | TLS-Bus-Modules | 65 |
| 6.8.3 | CEAG 3-Phase-Monitors with 24-Current Loop | 65 |
| 6.8.4 | Completing Installation | 66 |
| 7 | Commissioning and Other Work | |
| 7.1 | Safety Notes | 67 |
| 7.2 | Checking All Connections | 67 |
| 7.3 | Voltage Measurements | 67 |
| 7.4 | Insulation Testing | 67 |
| 7.5 | Checking and Replacing of Fuses | 68 |
| 7.5.1 | Checking the Fuses of the Mains and/or Battery Power Supply | 68 |
| 7.5.2 | Checking the Fuses on the Charging Module LT.1 | 68 |
| 7.5.2.1 | The Setting of the Tripple Charge-Voltage | 69 |
| 7.5.3 | Checking the Fuses of SKU-Modules | 70 |
| 7.6 | Checking and Replacing Internal Modules | 71 |
| 7.7 | Checking and Replacing External Modules | 71 |
| 7.8 | Powering Up the System | 71 |

Index

PART 2

| | | |
|-----------|--------------------------------------|--------------|
| 8 | Operating | |
| 8.1 | Safety Notes | 72 |
| 8.2 | General Information about Operating | 72 |
| 8.3 | Controls and Displays on the Modules | 73 |
| 8.3.1 | Control Module ST-S | 73 |
| 8.3.2 | DC/DC-Converter | 73 |
| 8.3.3 | Charging Module | 73 |
| 8.3.4 | SKU's of the Final Circuits | 74 |
| 8.3.5 | Data Printer | 74 |
| 8.4 | Operating the Control Module ST-S | 74 |
| 8.4.1 | Menu 1 „Test & Status Menu“ | 78 |
| 8.4.2 | Menu 2 „Block, Reset“ | 80 |
| 8.4.3 | Menu 3 „Basic Settings“ | 81 |
| 8.4.4 | Menu 4 „DLS/TLS-Setup“ | 87 |
| 8.4.5 | Menu 5 „Circuit Setup“ | 88 |
| 8.4.6 | Menu 6 „Luminaire Setup“ | 91 |
| 8.4.7 | Menu 7 „Memory Card“ | 93 |
| 8.4.8 | Menu 8 „Send Service Pin Msg“ | 93 |
| 9 | Failures | |
| 9.1 | Interference Immunity by Screening | 94 |
| 9.1.1 | Cable Screens | 94 |
| 9.1.2 | Screen Connection | 95 |
| 9.1.3 | The Fail-Safe System | 95 |
| 10 | Maintenance / Checking | |
| 10.1 | Safety Notes | 96 |
| 10.2 | General Information to Maintenance | 96 |
| | Appendix | ab 97 |

Important Notes

1. General Information

1.1 Description of Symbols

Important safety notes are marked with symbols in these instructions. These stated notes have to be observed essentially.

 **WARNING! DANGER! RISK OF INJURY OR DEATH!**

Signifies notes which, when not observed, can cause impairment of health, (steady) injury or death.

 **ATTENTION! DAMAGE TO PROPERTY!**

Signifies notes which, when not observed, can cause damage to property and even the collapse of the system.

 **NOTE!**

Includes important hints and advice that is important for failure-free operation.

1.2 Information regarding these Instructions

These operating instructions show the safe and proper handling with the system. The stated safety notes and instructions as well as the local accident prevention- and safety regulations have to be observed. Before working with the system, the instructions have to be read carefully, especially the chapter „Safety Instructions“.

The figures and circuit diagrams contained in these assembly and operating instructions are in part intended only to illustrate the products which are described. In all cases where

- dimensionally accurate work is required, or
- accurate drawings or circuit diagrams that reflect the specifics of the site are required, the drawings and plans that have been created specially for the lighting system must be followed.

1.3 Further Applicable Documents

In the systems, components from other manufacturers are mounted. These purchasing-components are checked according to danger evaluation by the manufacturer. They declare the compliance of the construction with the European and national regulations.

1.4 Liability and Guarantee

All information and notes in these instructions are compiled according to the valid regulations, the state of the art, our long-standing knowledge and experience.

Keep the instructions near to the system, accessible for every person working with the system and at all times.

Read the instructions carefully before working on and with the system!

CEAG Notlichtsysteme GmbH can accept no liability and/or give no warranty in respect of any defects that may occur with the supply and installation of CEAG emergency lighting systems and luminaires on the basis of other standards and regulations which are mandatory in complete installation packages in conjunction with CEAG products.

You must also comply with all statutes, standards and directives of the country in which the system is installed and operated.

CEAG will give no warranty or accept any liability for damage or consequential damage caused as a result of

- improper use,
- failure to comply with regulations and codes of conduct for the safe operation of the system,
- unauthorised or inexperienced modifications to the connections and settings of the system, or to the programming of the system,
- operating proscribed or unsuitable devices or groups of devices in the ZB-S system.

Important Notes

1.5 Copyright Protection

All information from the contents, text, drawings, pictures and further representations are protected with regards to copyright.

1.6 Spare Parts

Only use original spare parts from the manufacturer

! ATTENTION!

Wrong or faulty spare parts can cause damage, failure or collapse of the system.

When using unapproved spare parts, all guarantee, service, damage and liability claims are forfeited.

1.7 Recycling



Packing materials are not refuse, they are valuable materials and should be re-used or recycled.

CEAG has been awarded the Recycling Certificate of INTERSEROH GmbH. The contract number is 85405. It guarantees that the packaging materials which it covers are properly recycled and that all the requirements of the German Packaging Code are complied with.

INTERSEROH collection points are required to dispose of CEAG packaging free of charge.

Batteries and electronic components contain materials that can damage health and the environment if not properly disposed of. Dispose of old batteries and electronic components in accordance with national guidelines and regulations.

2. Safety

The central battery system is designed and built in conformity with the latest technical rules at the time of its development and production, so it is safe to operate. Danger maybe presented by the device, if it will be used for other than the intended purpose and by unskilled personnel.



WARNING!

When planning a lighting system with a ZB-S system you first establish whether the proposed electrical installations satisfy local environmental conditions.

Special environmental conditions (e. g. areas subject to explosion hazards or areas with an aggressive atmosphere) call for special equipments and installations.

Only operate the system and parts connected to it when they are in a technically perfect condition, and comply with

- the safety and hazard information given in these assembly and operating instructions,
- the work and safety instructions issued by the operator of the system,
- the installation and operating data given in „3 Technical data“ and in the CEAG Catalogue.

Faults that can affect the operation or safety of the system must be reported immediately to the company officers and remediated.

2.1 Inteded Use

The ZB-S and US-S Central Battery Systems are exclusively designed to monitor and control a lighting system with general and emergency lighting.

Their operation is program controlled. They must be programmed and set up by engineers with specialist knowledge of the legal and technical requirements governing the assembly and operation of lighting systems.

The operating safety can only be guaranteed by intended use of the systems.

! ATTENTION!

Every use beyond or different than the intended purpose is prohibited, and therefore not in accordance with regulations!

Important Notes

2.2 Contents of Operating Instructions

Every person, ordered to work with the system, has to read the instructions carefully to understand them before work begins. This takes also place when the person has already worked with a similar kind of battery or was instructed by the manufacturer.

2.3 Changes and Modifications to the System

To avoid danger and to assure optimum performance, changes and modifications to the system are not allowed, except when the manufacturer has approved them.

Any work involved in extensions, conversions or repairs and which is not described in this manual must be carried out by specially trained technical and service personnel (of the manufacturer CEAG or of CEAG-authorized distribution and service contractors)!

2.4 Responsibility of the Operator

Keep the instructions near to the system, accessible for every person working with the system and at all times. The System must be in a proper and safe condition when using it. System has to be checked for intactness before using it.

Adhere to the information of the instructions completely!

2.5 Personnel Requirements

Only authorised and skilled personnel are allowed to work on and with the system. The personnel must have received instructions regarding the existing danger.

Skilled personnel refers to those with expert training, with knowledge and experience as well as knowledge of the relevant regulations. He should be able to evaluate his work and recognize the presence of danger.

Personnel without the necessary knowledge must

- have received qualified and proper training,
- get their tasks and activities by full description for complete understanding
- carry out the activities under the supervision and control of skilled and qualified personnel.

2.6 Operational Safety

Observing the stated safety instructions and regulations can avoid damage to property and people when working with the system.

However the following organisational measurements must be specified in writing and be kept:

- Duties of information and reporting (start, duration, end of the work)
- Safety measures while the work is being carried out: e. g. standby lighting, power supply isolation and lock-out (e. g. removing the fuses, key-operated switch, safety signage)
- Safety equipment for the personnel carrying out the work on the plant (s. chapter 2.7)
- Safety equipment providing protection from hazards caused by adjacent plant (e. g. safety grilles, barriers, making safe of roads)

Attend to the ESD-protection during working at the system!

The applicable work and safety regulations are set out in these assembly and operating instructions, and in

- the management's internal organisational instructions (example see above)
- and the general and specialist technical guidelines and accident prevention regulations.

2.7 Personal Protective Equipment

When working on and with the system it is necessary to wear:

Protective Clothes

Close fitting protective clothes (low tensile strength, no wide arms, no rings and further jewelry, etc).



Safety Boots

Boots electrostatic conductive acc. to EN 345 and to protect against heavy falling parts.



Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data

3. Technical Data

3.1 Data Sheet for ZB-S/26





| | |
|------------------------|---|
| Type of system | : ZB-S 26 |
| Construction | : Sheet steel cabinet with partial viewing window in the door |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 400 mm |
| Weight without battery | : approx. 180 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) : at the bottom (open bottom with propping tracks on the side) |
| Hinge | : right |

| | |
|---------------------------------------|---|
| Mains rated voltage | : 400V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8V/Z; +20°C) | : 23.3-354 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration of emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |

(please attend to the attached operating and installation instructions)


| | |
|---|--|
| Mains feed in (max. 50mm ²) | : Q1 |
| Battery feed in (max. 50mm ²) | : Q2 |
| Max. 80 circuits (max. 4 mm ²)* | : X1.1, X2.1, X3.1, X4.1 |
| Marshalling mains (max. 16mm ²) | : F10 - F15 |
| Marshalling battery (max. 16mm ²) | : F30 - F35, F50 - F55 |
| Addresses optional places DLS-3Ph, TLS (max. 2,5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max.4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max.4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

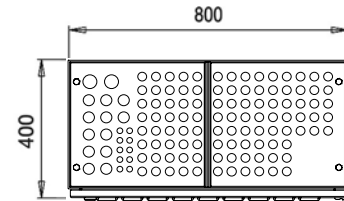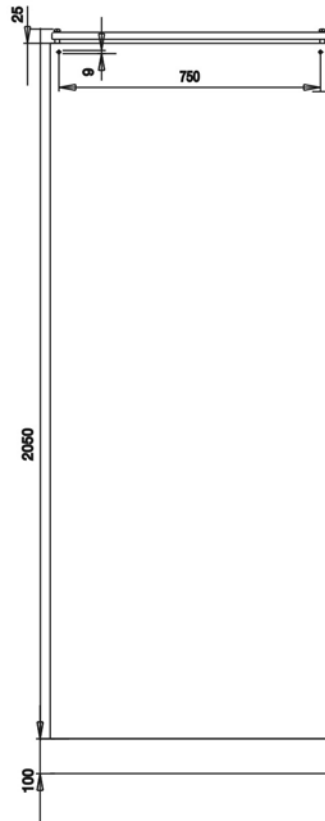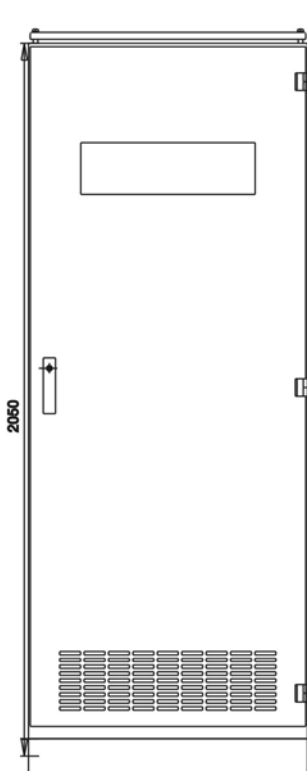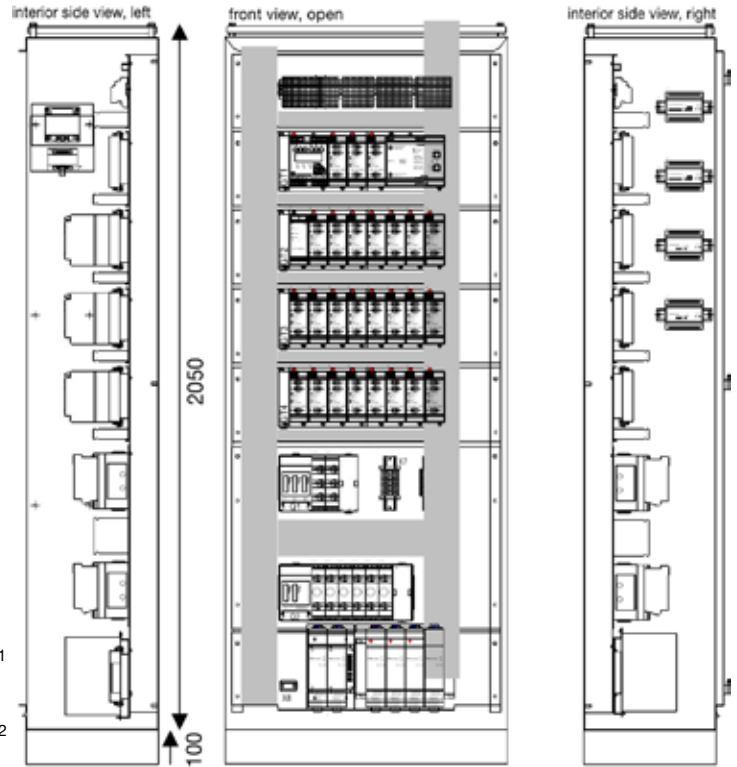


prepunched roof sheeting for:

- 12 x M16x1,5
- 112 x M20x1,5 / M25x1,5
- 12 x M32x1,5
- 2 x M32x1,5 / M40x1,5

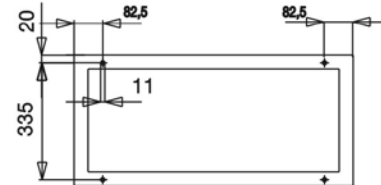

Cable entry from the bottom (l x w): 720 x 295mm
Bottom attachment electronic cabinet

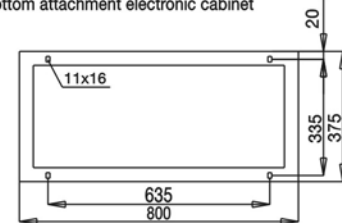

Top view socket

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data

3.2 Data Sheet for ZB-S/18

| | |
|------------------------|---|
| Type of system | : ZB-S 18 |
| Construction | : Sheet steel cabinet with partial viewing window in the door |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 400 mm |
| Weight without battery | : approx. 170 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) : at the bottom (open bottom with propping tracks on the side) |
| Hinge | : right |


| | |
|---------------------------------------|---|
| Mains rated voltage | : 400/230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8V/Z; +20°C) | : 23.3-240 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration of emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |

(please attend to the attached operating and installation instructions)


| | |
|---|--------------------------|
| Mains feed in (max. 50mm ²) | : Q1 |
| Battery feed in (max. 50mm ²) | : Q2 |
| Max. 68 circuits (max. 4mm ²)* | : X1.1, X2.1, X3.1 |
| Marshalling mains (max. 16mm ²) | : F10 - F15 |
| Marshalling battery (max. 16mm ²) | : F30 - F35, F50 - F55 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts(max.4mm ²):X1.1.12-14-11/22-24-21/32-34-31 | |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²) | : X1.1.+24V Out--24V Out |
| Connection to 24V analog input(max.4mm ²):X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 | |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.




Interior side view, left

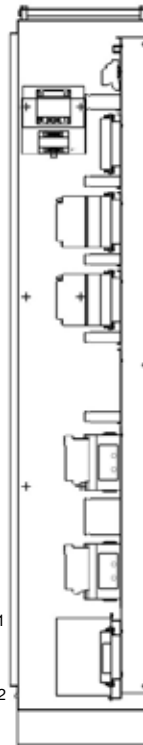


front view, open

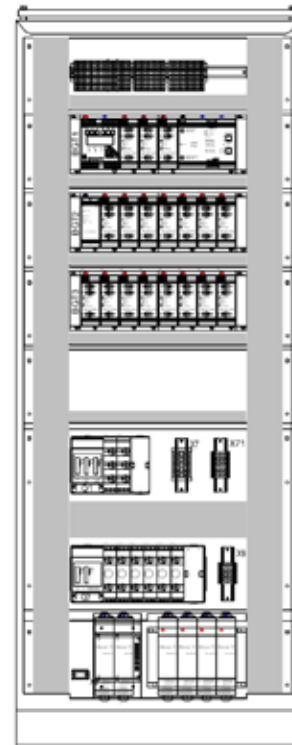


Interior side view, right

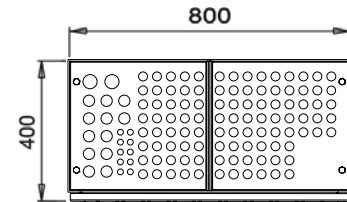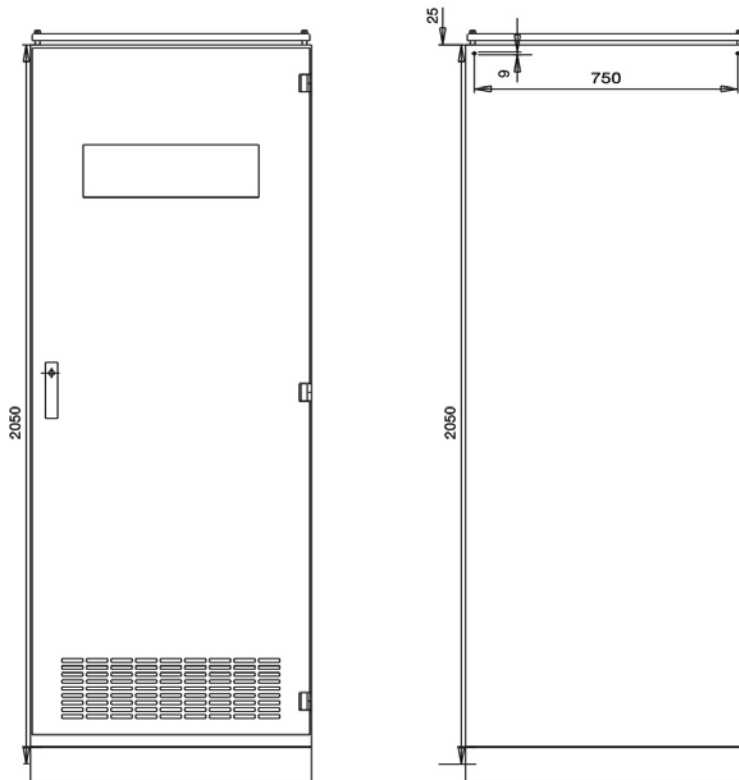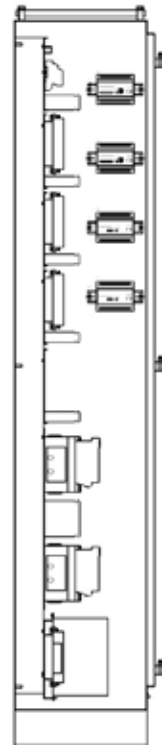

prepunched roof sheeting for:
12 x M16x1,5
112 x M20x1,5 / M25x1,5
12 x M32x1,5
2 x M32x1,5 / M40x1,5

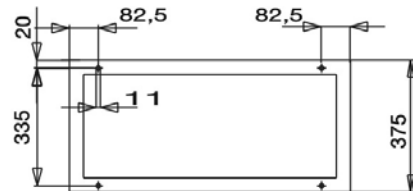

Cable entry from the bottom (l x w): 720x295mm
Bottom attachment electronic cabinet

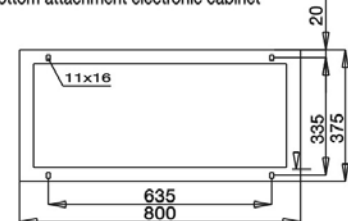

Top view socket

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data




3.3 Data Sheet for ZB-S/LAD

| | |
|------------------------|--|
| Type of system | : ZB-S LAD (Cable entry from top) |
| Construction | : Sheet steel cabinet with a door made of sheet |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 400 mm |
| Weight without battery | : approx. 170 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) : at the bottom (open bottom with propping : tracks on the side) |
| Hinge | : right |


| | |
|---|--|
| Mains rated voltage | : 400/230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8V/Z; +20°C) | : 23.3-240 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration of emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |
| (please attend to the attached operating and installation instructions) | |

| | |
|---|------------------|
| Mains feed in (max. 50mm ²) | : Q1, X7 |
| Battery feed in (max. 50mm ²) | : Q2, X9 |
| Max. 4 circuits (max. 4mm ²)* | : X11 |
| Marshalling mains (max. 16mm ²) | : F10 - F24, X71 |
| Marshalling battery (max. 16mm ²) | : F50 - F79, X9 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts(max.4mm ²):X1.1.12-14-11/22-24-21/32-34-31 | |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): X1.1.+24V Out--24V Out | |
| Connection to 24V analog input (max.4mm ²):X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 | |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

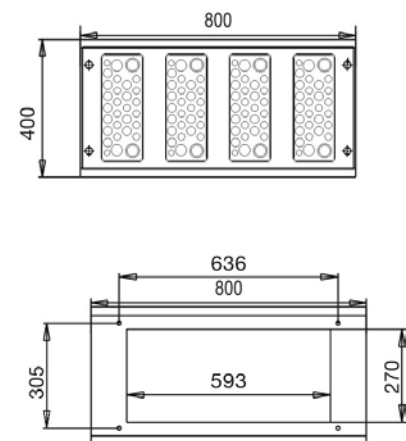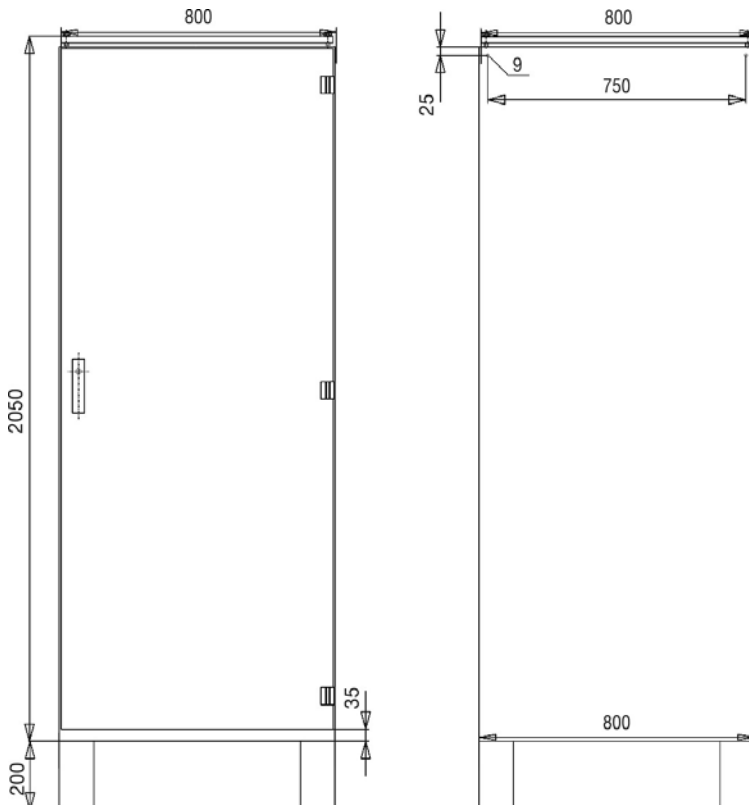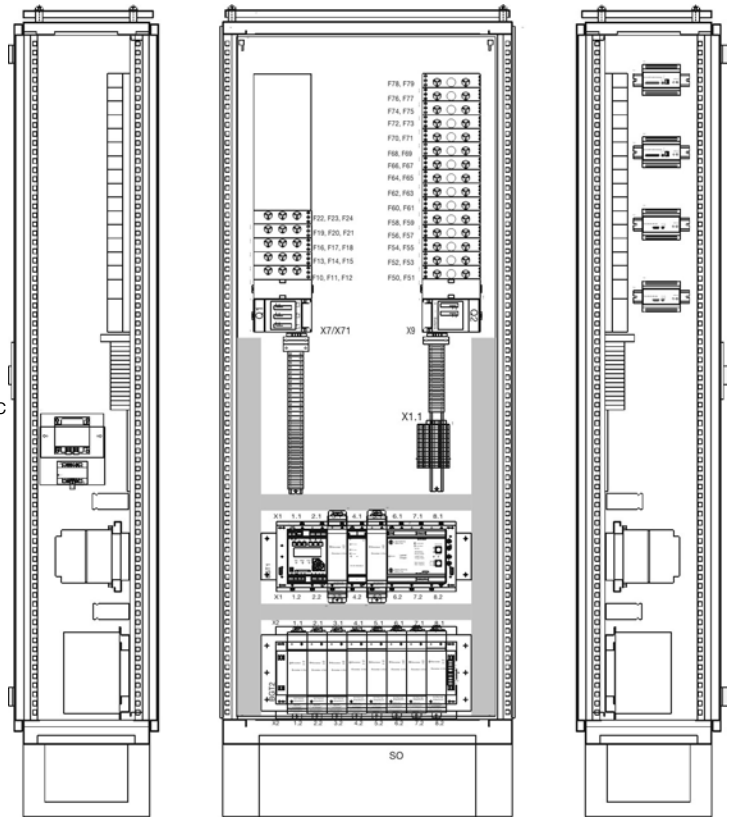

Bottom attachment 4x D 10,6

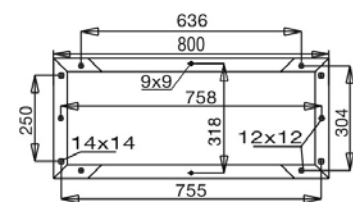

Bottom attachment socket

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data

3.4 Data Sheet for ZB-S/10C




| | |
|------------------------|---|
| Type of system | : ZB-S 10C |
| Construction | : Sheet steel compact cabinet with divided door |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 400 mm |
| Weight without battery | : approx. 155 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) |
| Cabinet construction | : one-piece, not divisible |
| Hinge | : right |

| | |
|--|---|
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8 V/Z; +20°C) | : 5.5-55 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration of emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient operation battery | : +20°C |


(please attend to the attached operating and installation instructions)

| | |
|---|------------------|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : Q2 |
| Max. 40 circuits (max. 4mm ²)* | : X1.1, X2.1 |
| Marshalling mains (max. 35mm ²) | : X7 |
| Marshalling battery (max. 35mm ²) | : X9 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts(max.4mm ²):X1.1.12-14-11/22-24-21/32-34-31 | |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): X1.1.+24V Out--24V Out | |
| Connection to 24V analog input (max.4mm ²):X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 | |


* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

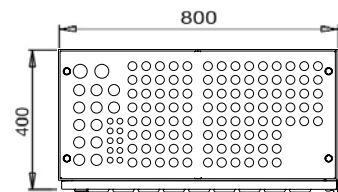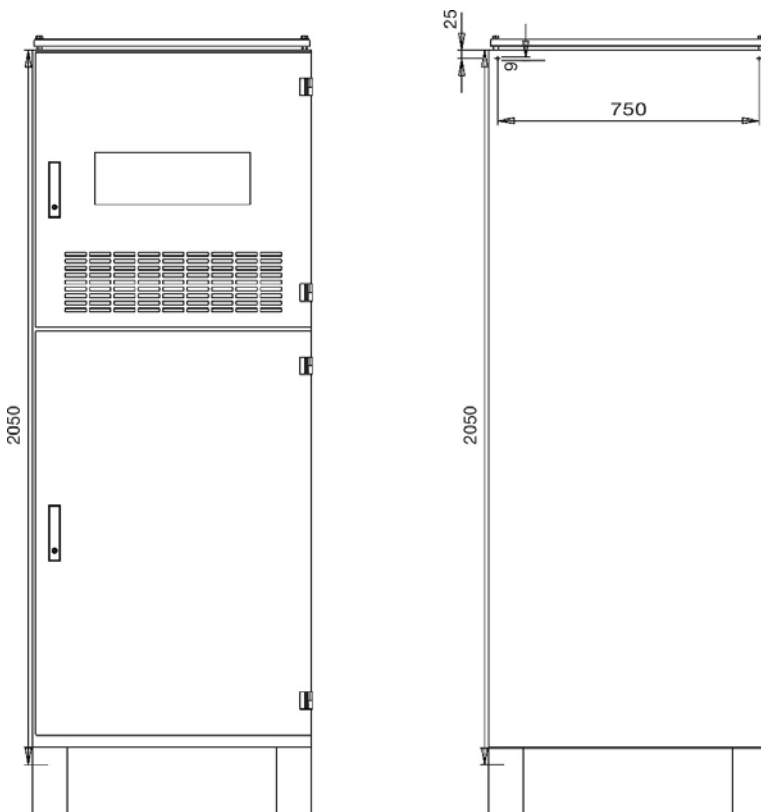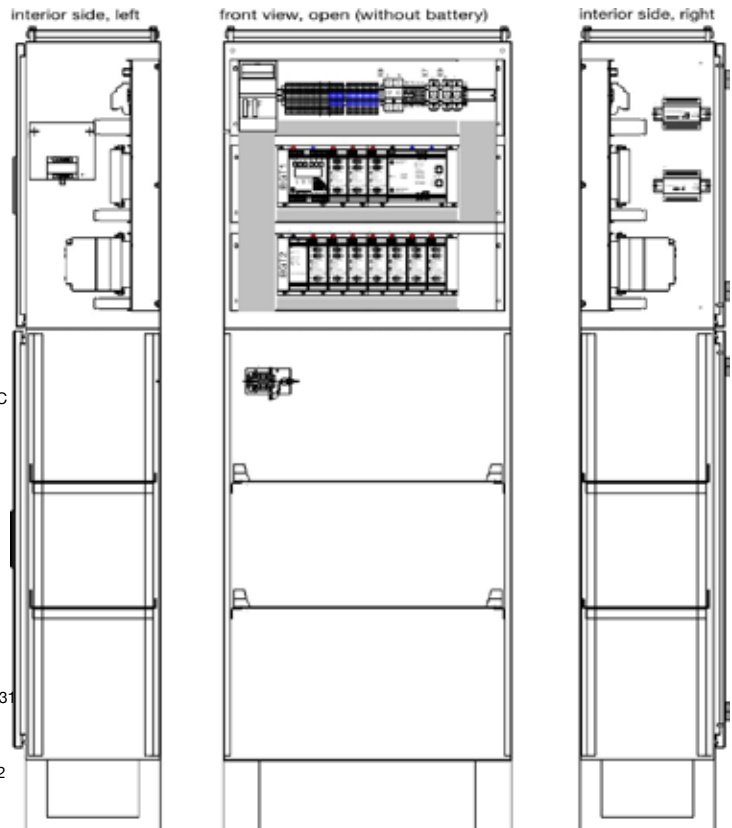

prepunched roof sheeting for:
12 x M16x1,5
112 x M20x1,5 / M25x1,5
12 x M32x1,5
2 x M32x1,5 / M40x1,5

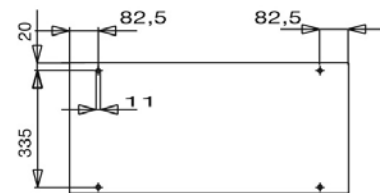

bottom attachment electronic cabinet

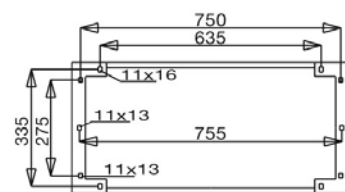

bottom attachment socket

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data


3.5 Data Sheet for ZB-S/10C6

| | |
|------------------------|---|
| Type of system | : ZB-S 10C6 |
| Construction | : Sheet steel compact cabinet with divided door |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 600 mm |
| Weight without battery | : approx. 205 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched flange plates) |
| Cabinet construction | : two parts, screwed together, divisible |
| Hinge | : right |



| | |
|--|---|
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8 V/Z; +20°C) | : 5.5-89.4 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration of emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |

(please attend to the attached operating and installation instructions)

| | |
|---|--|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : Q2 |
| Max. 40 circuits (max. 4mm ²)* | : X1.1, X2.1 |
| Marshalling mains (max. 35mm ²) | : X7 |
| Marshalling battery (max. 35mm ²) | : X9 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²): | X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts(max.4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max.4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

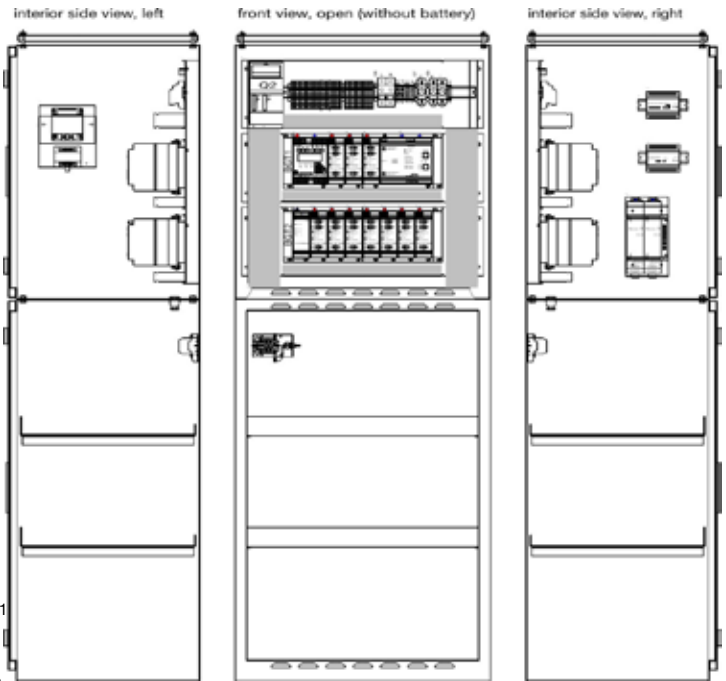

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

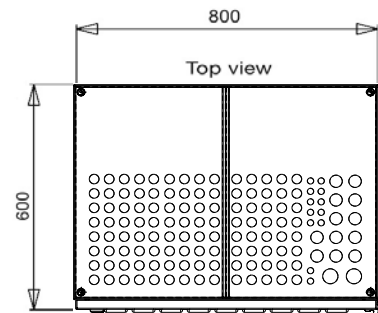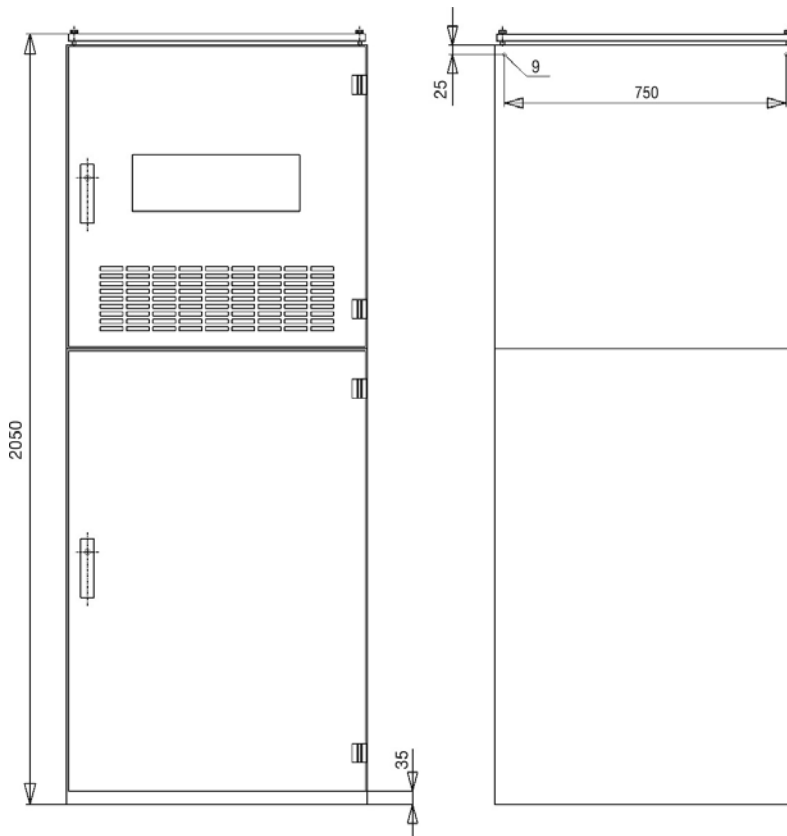

prepunched roof sheeting for:
 12 x M16x1,5
 112 x M20x1,5 / M25x1,5
 12 x M32x1,5
 2 x M32x1,5 / M40x1,5


Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology




Technical Data

3.6 Data Sheet for ZB-S/18C6

| | |
|---|---|
| Type of system | : ZB-S 18C6 |
| Construction | : Sheet steel compact cabinet with divided door |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 600 mm |
| Weight without battery | : approx. 205 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched flange plates) |
| Cabinet construction | : two parts, screwed together, divisible |
| Hinge | : right |
| | |
| Mains rated voltage | : 400V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8 V/Z; +20°C) | : 5.5-89.4 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration of emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |
| (please attend to the attached operating and installation instructions) | |
| | |
| Mains feed in (max. 16mm ²) | : Q1 |
| Battery feed in (max. 16mm ²) | : Q2 |
| Max. 40 circuits (max. 4mm ²)* | : X1.1, X2.1, X3.1 |
| Marshalling mains (max. 35mm ²) | : X7, F10-F11 |
| Marshalling battery (max. 35mm ²) | : X9, F20-F21, F30-F31 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts(max.4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²) | : X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max.4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

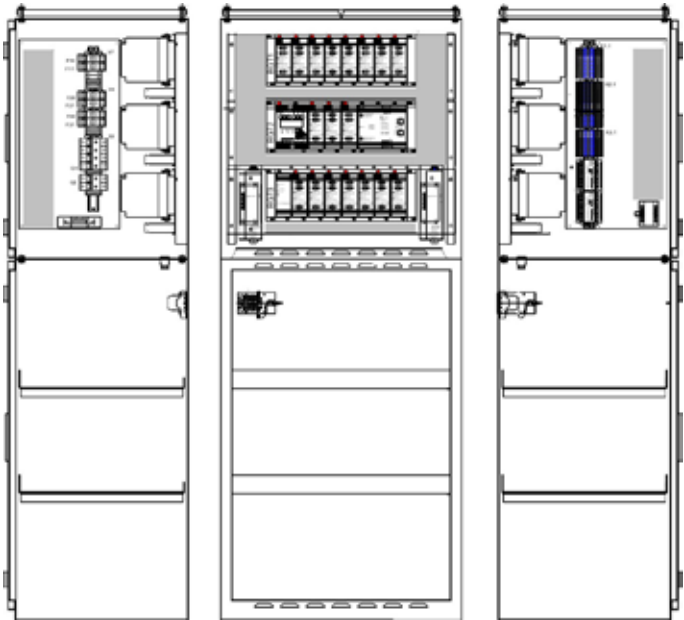

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

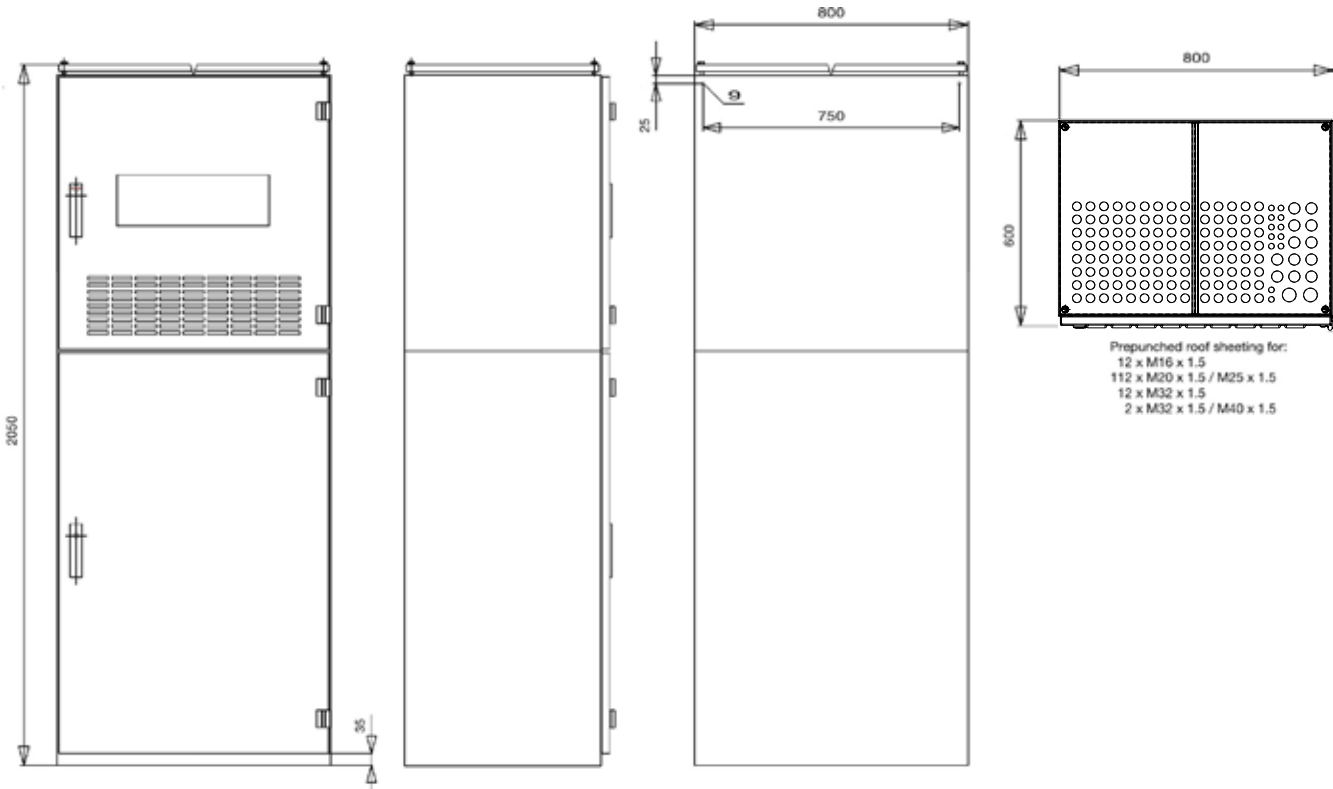


Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology




Technical Data

3.7 Data Sheet for ZB-S/26C6

| | |
|--|---|
| Type of system | : ZB-S 26C6 |
| Construction | : Sheet steel compact cabinet with divided door |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 600 mm |
| Weight without battery | : approx. 250 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) |
| Cabinet construction | : two parts, divisible |
| Hinge | : right |
| | |
| Mains rated voltage | : 400V/230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8 V/Z; +20°C) | : 5.5-89.4 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |
| (please attend to the attached operating and installation instructions) | |
| | |
| Mains feed in (max. 16mm ²) | : Q1 |
| Battery feed in (max. 16mm ²) | : Q2 |
| Max. 56 circuits (max. 4mm ²)* | : X1.1, X2.1, X3.1, X4.1 |
| Marshalling mains (max. 35mm ²) | : X7, F10-F11 |
| Marshalling battery (max. 35mm ²) | : X9; F20-F21, F30-F31 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max.4mm ²):X1.1.12-14-11/22-24-21/32-34-31 | |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): X1.1.+24V Out-24V Out | |
| Connection to 24V analog input (max.4mm ²): X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 | |

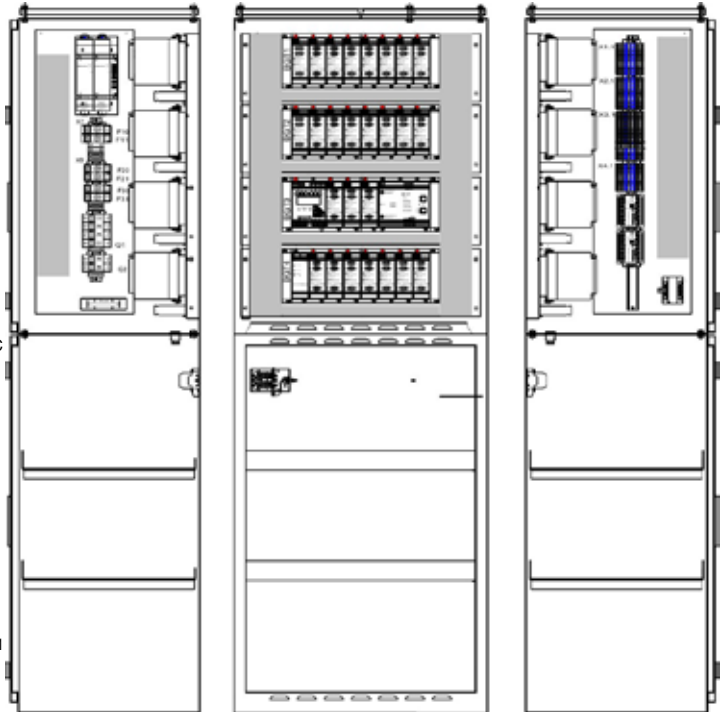

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

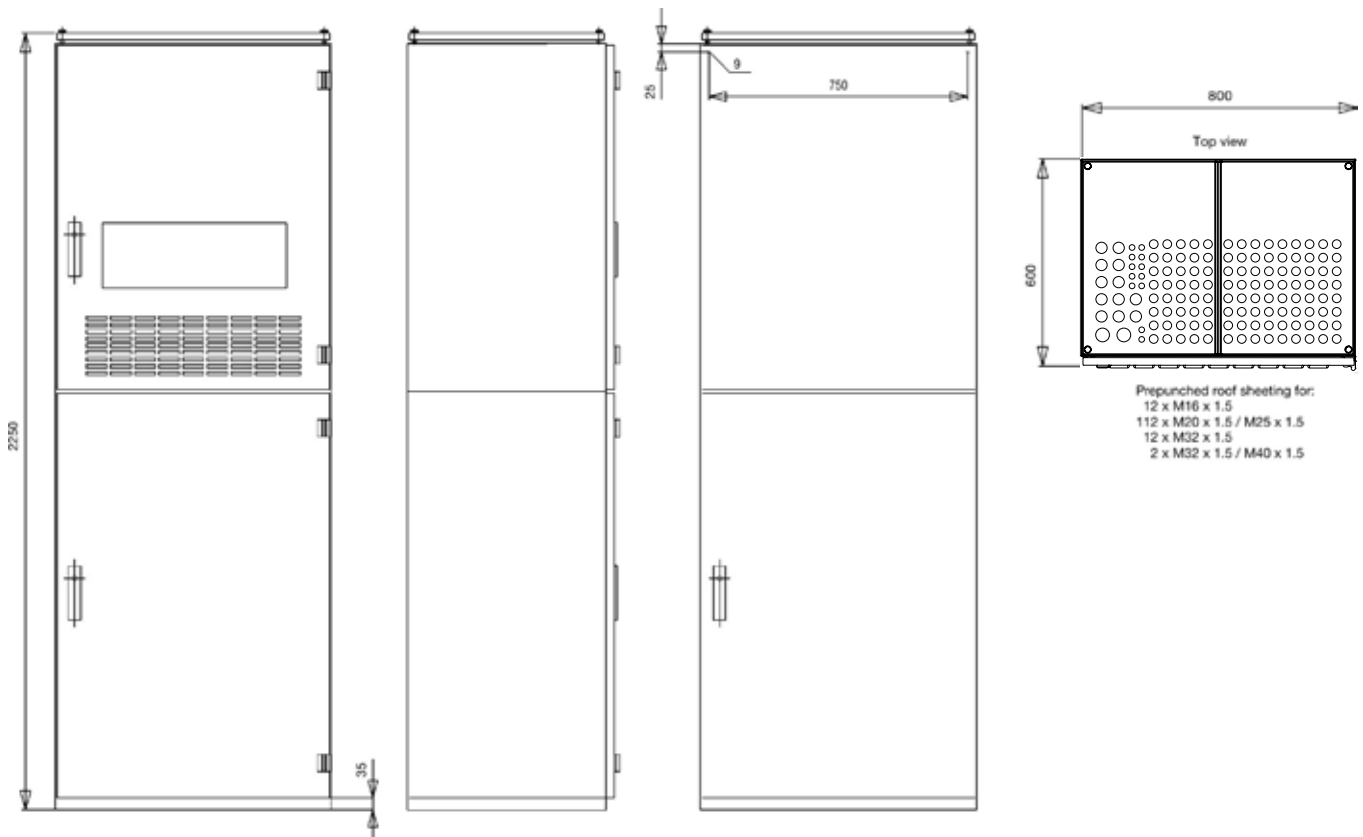

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data

3.8 Data Sheet for ZB-S/18C3

| | |
|------------------------|---|
| Type of system | : ZB-S 18C3 |
| Construction | : Sheet steel compact cabinet with divided door |
| Height | : 1800 mm |
| Width | : 600 mm |
| Depth | : 350 mm |
| Weight without battery | : approx. 120 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) |
| Cabinet construction | : one-piece, not divisible |
| Hinge | : right |


| | |
|--|---|
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8 V/Z; +20°C) | : 5.5-23.3 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |

(please attend to the attached operating and installation instructions)


| | |
|--|--------------------|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : Q2 |
| Max. 56 circuits (max. 4mm ²)* | : X1.1, X2.1, X3.1 |
| Marshalling mains (max. 35mm ²) | : X7 |
| Marshalling battery (max. 35mm ²) | : X9 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²): X1.1.12-14-11/22-24-21/32-34-31 | |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): X1.1.+24V Out--24V Out | |
| Connection to 24V analog input (max. 4mm ²): X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 | |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.





interior side view, left

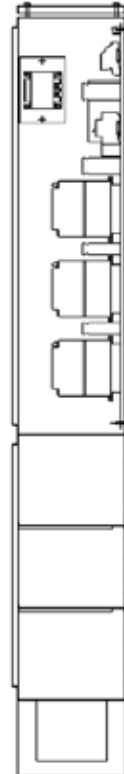


front view, open (without battery)

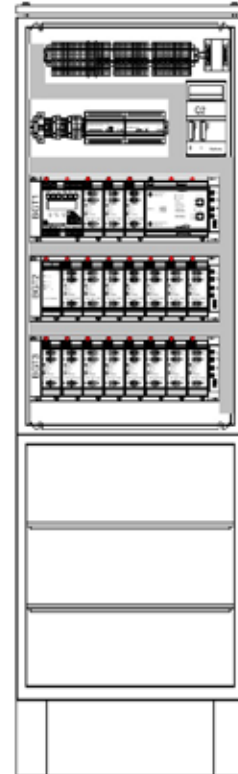


interior side view, right

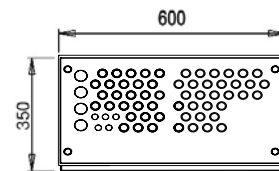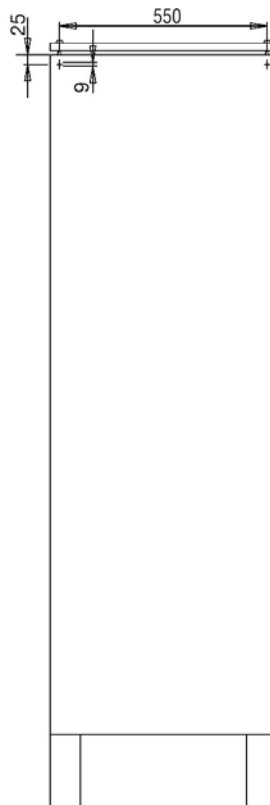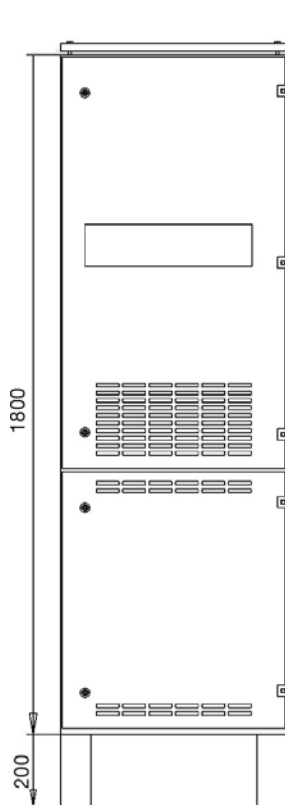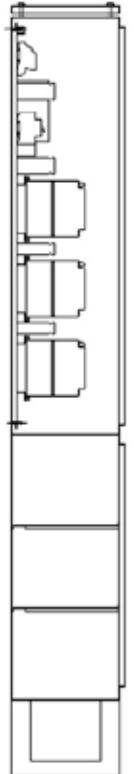

Cable entry from the top
prepunched cable flange plate:
4x M32
65x M20/M25
5x M16

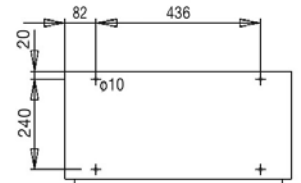

bottom attachment cabinet

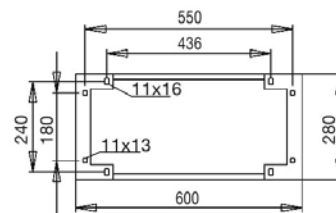

bottom attachment socket

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data

3.9 Data Sheet for ZB-S/10C3



| | |
|------------------------|---|
| Type of system | : ZB-S 10C3 |
| Construction | : Sheet steel cabinet with partial viewing window in the door |
| Height | : 1800 mm |
| Width | : 600 mm |
| Depth | : 350 mm |
| Weight without battery | : approx. 115 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) |
| Cabinet construction | : one-piece, not divisible |
| Hinge | : right |

| | |
|--|---|
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8 V/Z; +20°C) | : 5.5-23.3 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration of emergency lighting | : 1 h or 3 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |

(please attend to the attached operating and installation instructions)

| | |
|--|------------------|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : Q2 |
| Max. 40 circuits (max. 4mm ²)* | : X1.1, X2.1 |
| Marshalling mains (max. 35mm ²) | : X7 |
| Marshalling battery (max. 35mm ²) | : X9 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max.4mm ²):X1.1.12-14-11/22-24-21/32-34-31 | |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): X1.1.+24V Out--24V Out | |
| Connection to 24V analog input (max.4mm ²): X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 | |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

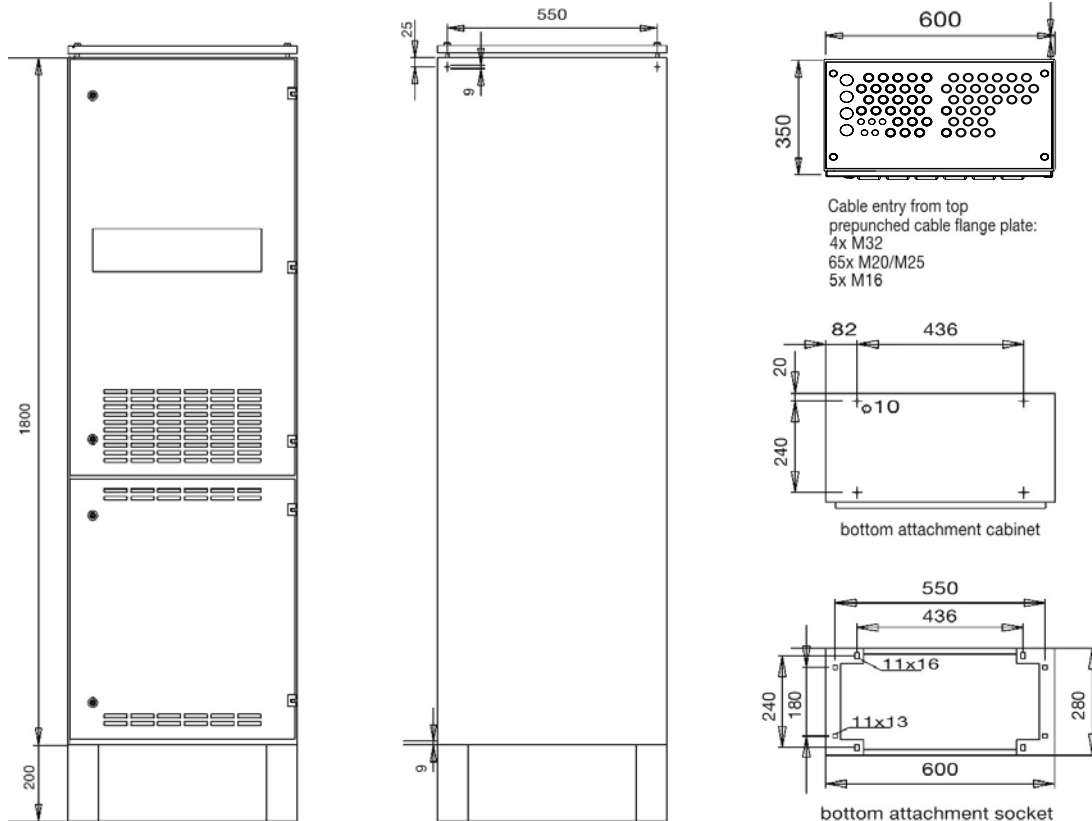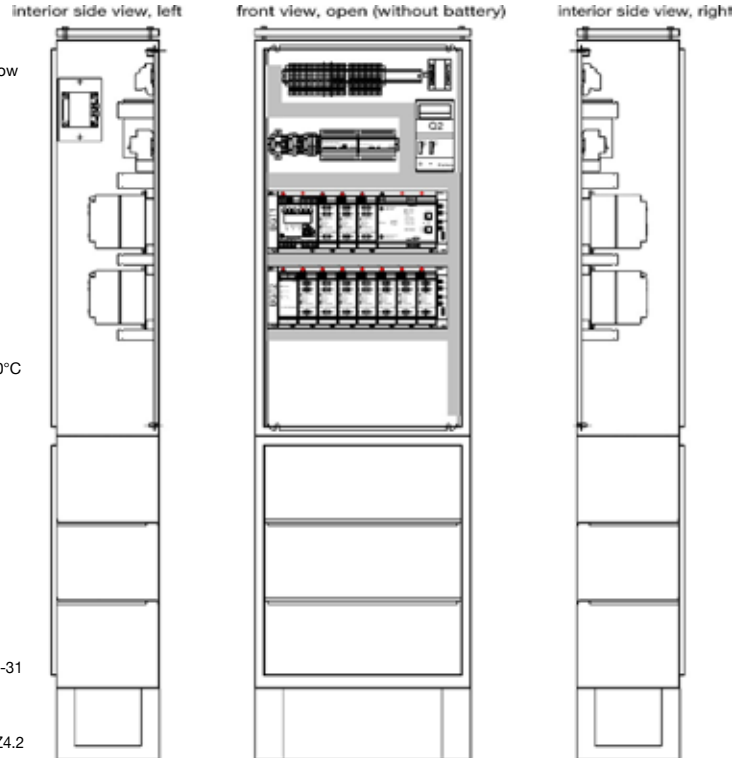

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology





Technical Data

3.10 Data Sheet for ZB-S/2C3

| | |
|---|---|
| Type of system | : ZB-S 2C3 |
| Construction | : Sheet steel cabinet with sheet steel door |
| Height | : 1000 mm |
| Width | : 600 mm |
| Depth | : 300 mm |
| Weight without battery | : approx. 50 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) |
| Cabinet construction | : one-piece, not divisible |
| Hinge | : right |
| | |
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity (C10; 1.8 V/Z; +20°C) | : 5.5-14 Ah |
| Type of battery | : Lead acid battery, 10 years service life at +20°C acc. to IEC 486 |
| Duration of emergency lighting | : 1 h |
| Recharging time | : 12 h acc. to DIN EN 50171 |
| Ambient temperature operation | : -5°C up to +35°C |
| Opt. ambient temperature battery | : +20°C |
| (please attend to the attached operating and installation instructions) | |

| | |
|---|-----------------------------------|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : X9 |
| Max. 8 circuits (max. 4mm ²)* | : X1.1 |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²) | : X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.CG.S.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²) | : X1.1.+24V --24V Out |
| Connection to 24V analog input (max. 4mm ²) | : X1.1.+24V Out --24V Out |
| Addresses of optional slots DLS-3Ph, TLS (max. 4mm ²) | : X1.1.Z1.1-Z1.2 -Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

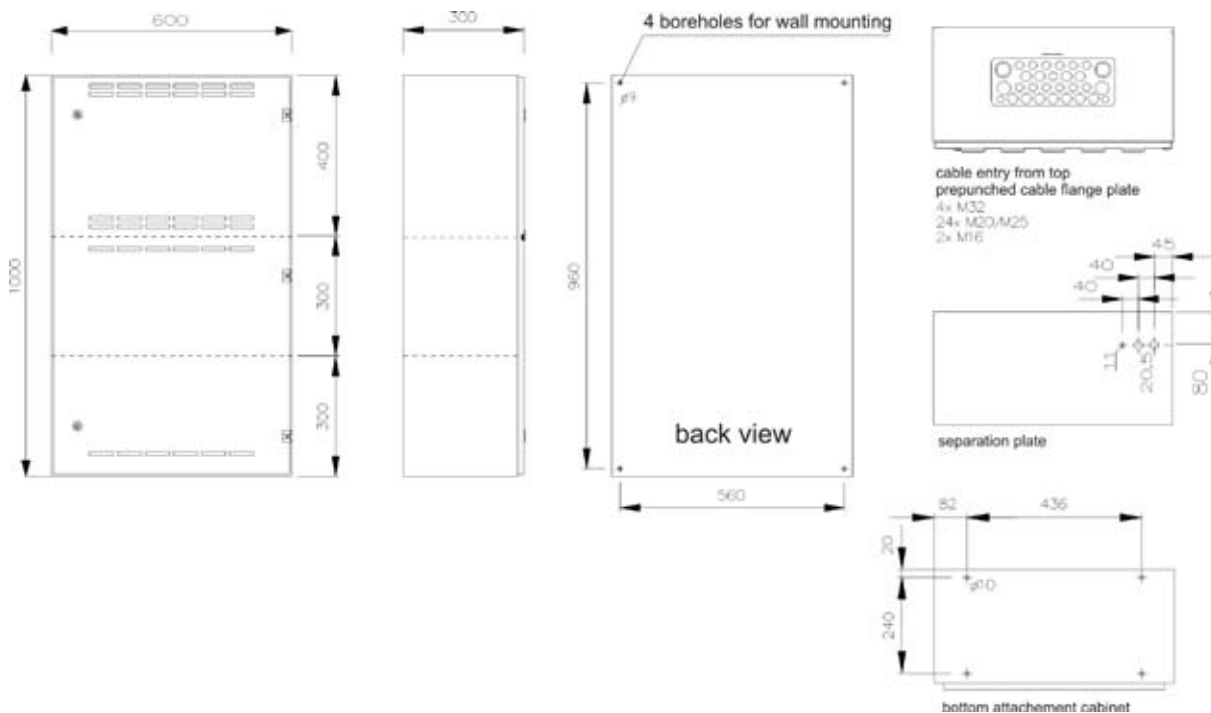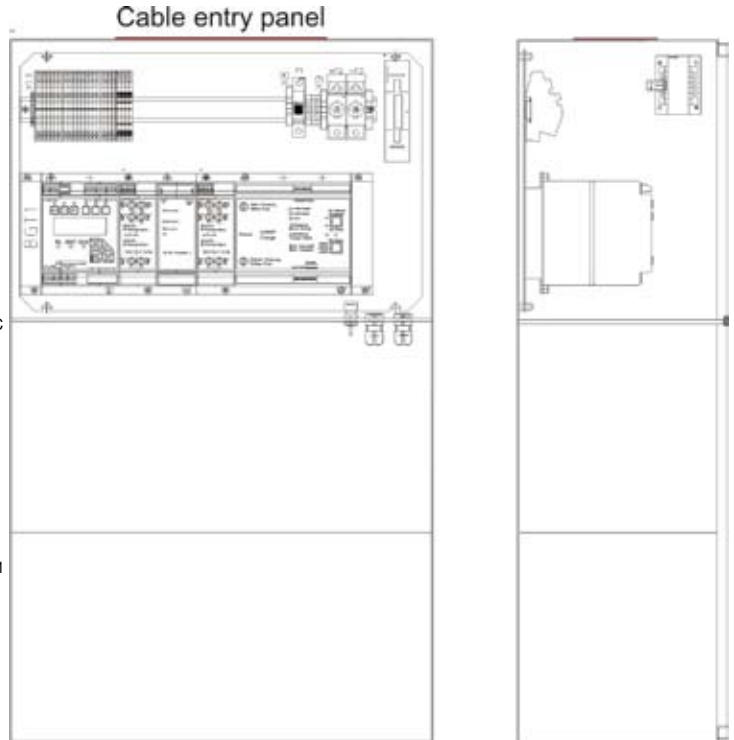

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data



3.11 Data Sheet for US-S/36

| | |
|------------------------|--|
| Type of system | : US-S/36 |
| Construction | : Sheet steel cabinet with partial viewing window in the door |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 400 mm |
| Weight without battery | : approx. 170 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) : at the bottom (open bottom) |
| Hinge | : right |

| | |
|--------------------------------|--------------------------|
| Mains rated voltage | : 400V/230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity | : |
| Type of battery | : |
| Duration of emergency lighting | : |
| Recharging time | : |
| Ambient temperature operation | : -5°C bis +35°C |

| | |
|--|--------------------------------|
| Mains feed in (max. 35mm ²) | : X8 |
| Battery feed in (max. 35mm ²) | : X8 |
| Max. 80 circuits (max. 4mm ²)* | : X1.1, X2.1, X3.1, X4.1, X5.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2,5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max.4mm ²):X1.1.12-14-11/22-24-21/32-34-31 | |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): X1.1.+24V Out--24V Out | |
| Connection to 24V analog input (max.4mm ²): X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 | |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

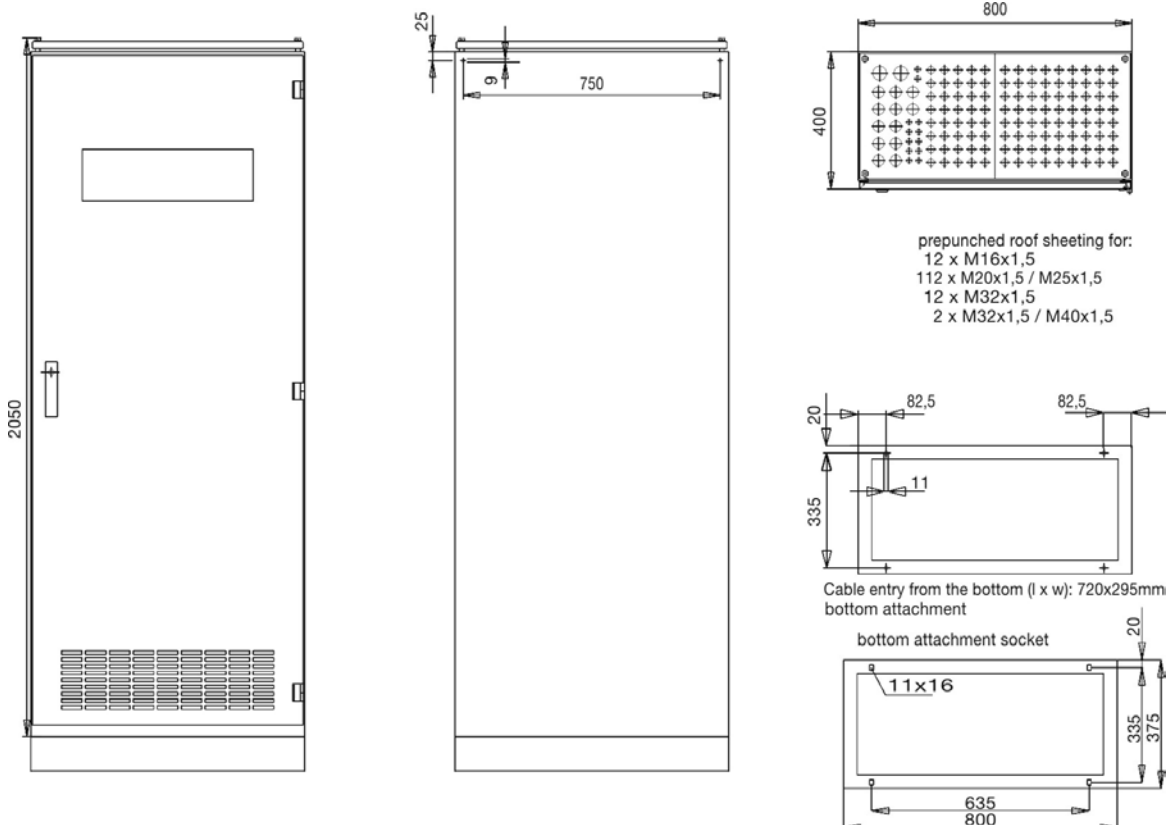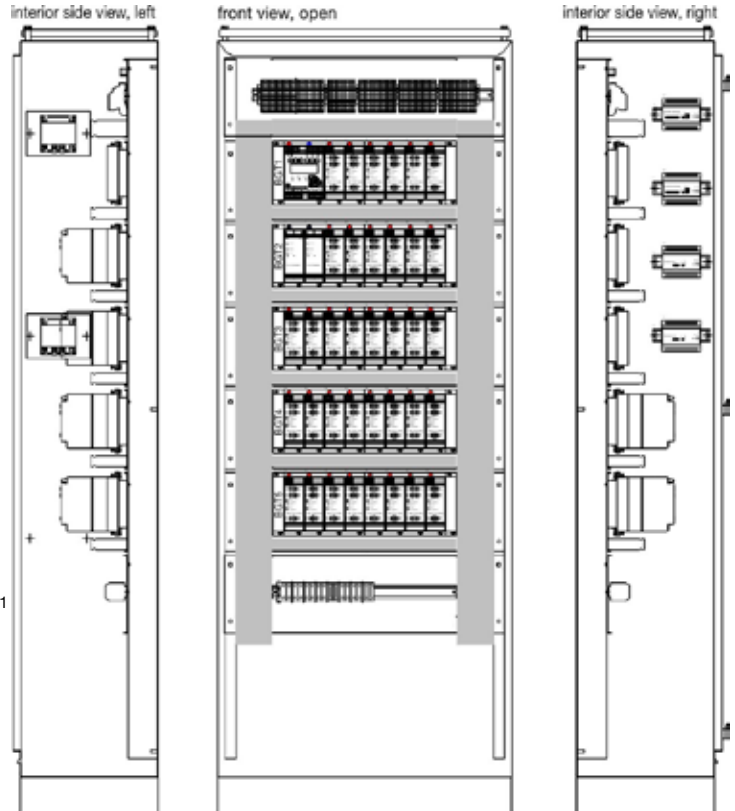

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data




3.12 Data Sheet for US-S/28

| | |
|------------------------|--|
| Type of system | : US-S/28 |
| Construction | : Sheet steel cabinet with partial viewing window in the door |
| Height | : 2050 mm |
| Width | : 800 mm |
| Depth | : 400 mm |
| Weight without battery | : approx. 165 kg |
| Insulation class | : I |
| Degree of protection | : IP 21 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) : at the bottom (open bottom) |
| Hinge | : right |


| | |
|--------------------------------|---------------------|
| Mains rated voltage | : 400V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity | : |
| Type of battery | : |
| Duration of emergency lighting | : |
| Recharging time | : |
| Ambient temperature operation | : -5°C bis +35°C |

| | |
|---|--|
| Mains feed in (max. 35mm ²) | : X8 |
| Battery feed in (max. 35mm ²) | : X8 |
| Max. 80 circuits (max. 4mm ²)* | : X1.1, X2.1, X3.1, X4.1, X5.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max. 4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |


* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

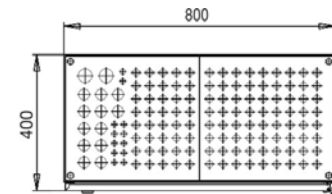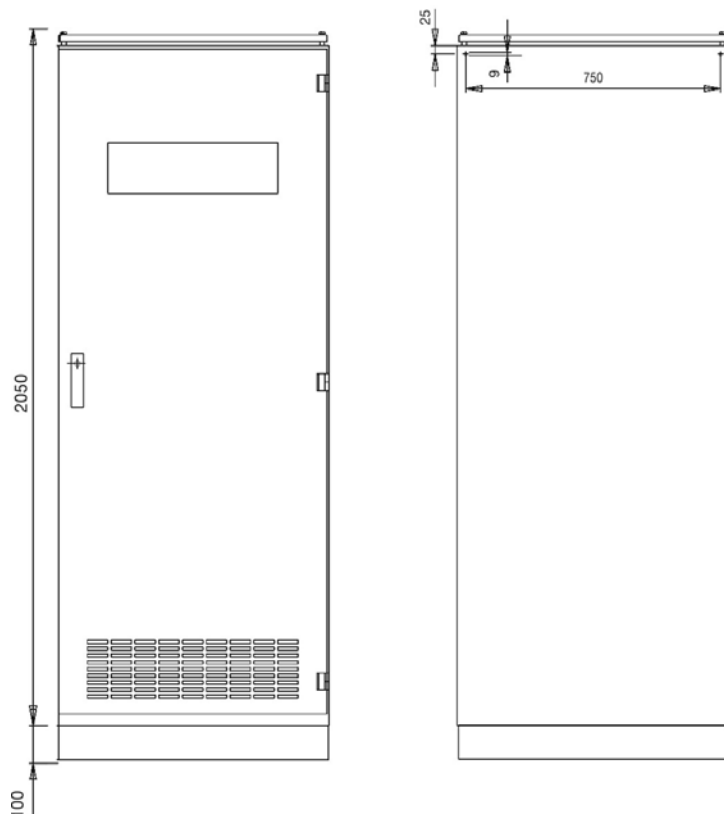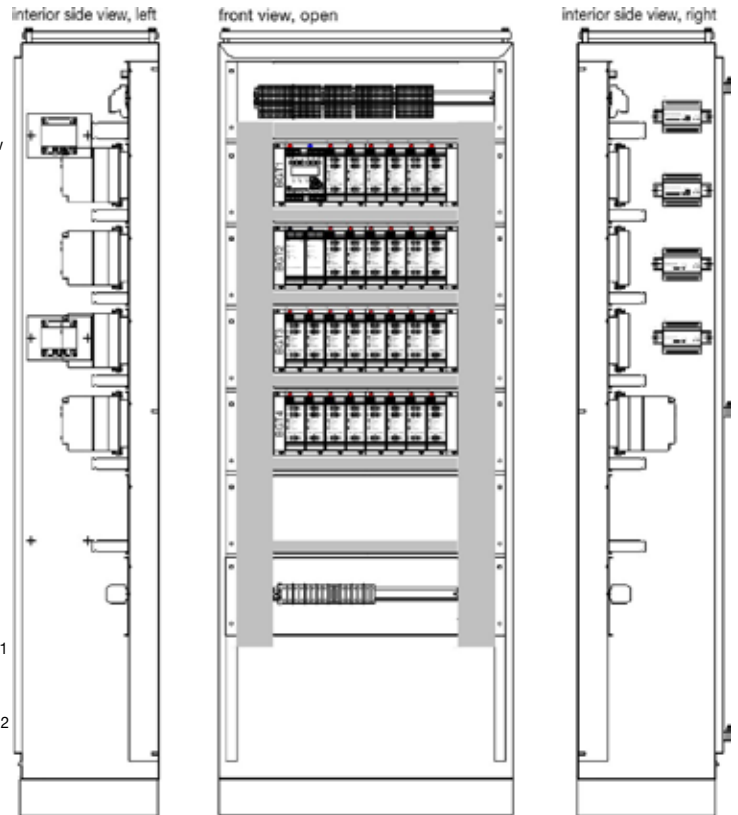

prepunched roof sheeting for:
12 x M16x1,5
112 x M20x1,5 / M25x1,5
12 x M32x1,5
2 x M32x1,5 / M40x1,5

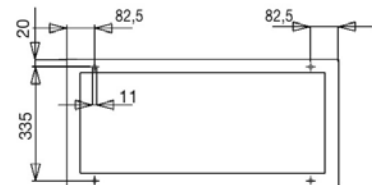

Cable entry from the bottom (l x w): 720x295mm
bottom attachment

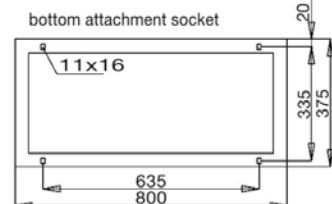

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data





3.13 Data Sheet for US-S/21

| | |
|------------------------|---|
| Type of system | : US-S/21 |
| Construction | : Sheet steel wall mounting cabinet with a door made of sheet |
| Height | : 1200 mm |
| Width | : 600 mm |
| Depth | : 300 mm |
| Weight without battery | : approx. 110 kg |
| Insulation class | : I |
| Degree of protection | : IP 54 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) |
| Hinge | : right |

| | |
|--------------------------------|---------------------|
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity | : |
| Type of battery | : |
| Duration of emergency lighting | : |
| Recharging time | : |
| Ambient temperature operation | : -5°C bis +35°C |

| | |
|---|--|
| Mains feed in (max. 35mm ²) | : X8 |
| Battery feed in (max. 35mm ²) | : X8 |
| Max. 52 circuits (max. 4mm ²)* | : X1.1, X2.1, X3.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max. 4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

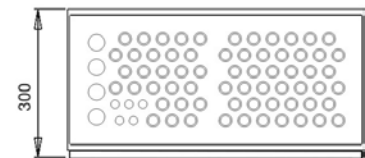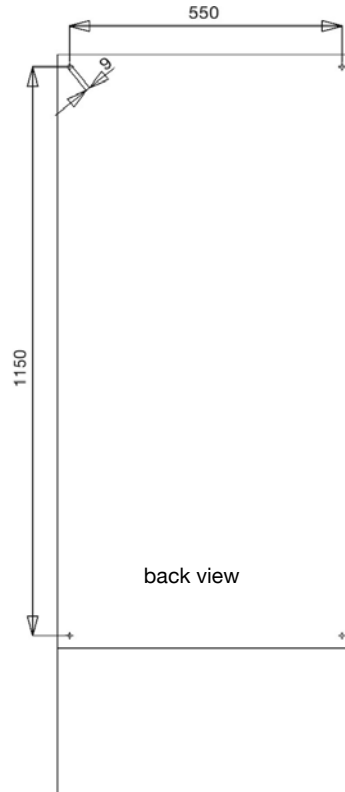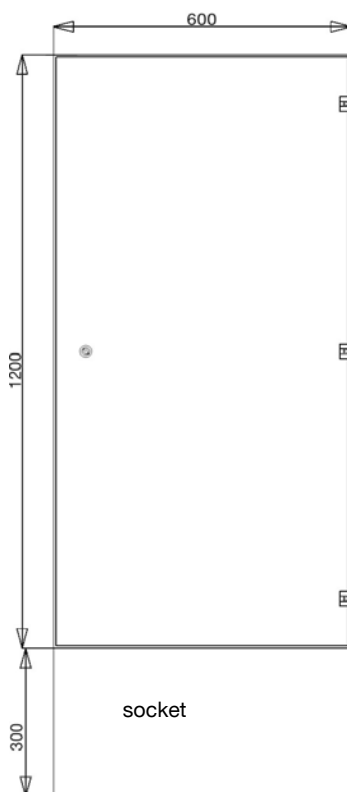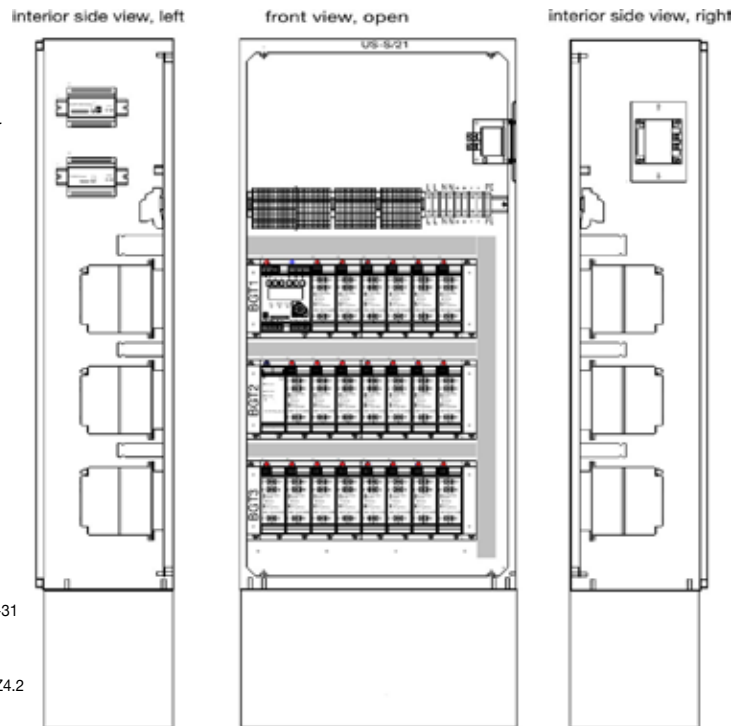

Cable entry from the top
prepunched cable flange plate
4x M32
65x M20/M25
5x M16

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data





3.14 Data Sheet for US-S/13

| | |
|------------------------|---|
| Type of system | : US-S/13 |
| Construction | : Sheet steel wall mounting cabinet with a door made of sheet |
| Height | : 800 mm |
| Width | : 600 mm |
| Depth | : 250 mm |
| Weight without battery | : approx. 75 kg |
| Insulation class | : I |
| Degree of protection | : IP 54 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched roof sheeting) |
| Hinge | : right |

| | |
|--------------------------------|---------------------|
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity | : |
| Type of battery | : |
| Duration of emergency lighting | : |
| Recharging time | : |
| Ambient temperature operation | : -5°C bis +35°C |

| | |
|---|--|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : X8 |
| Max. 24 circuits (max. 4mm ²)* | : X1.1, X2.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max. 4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

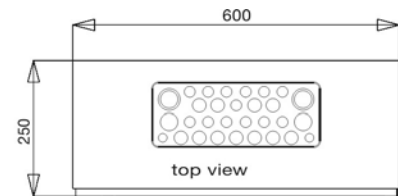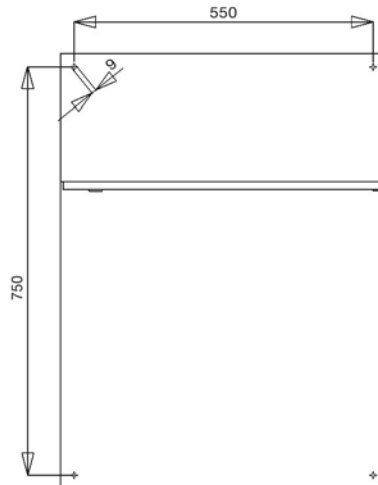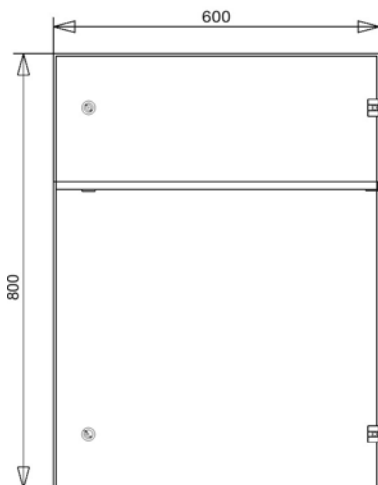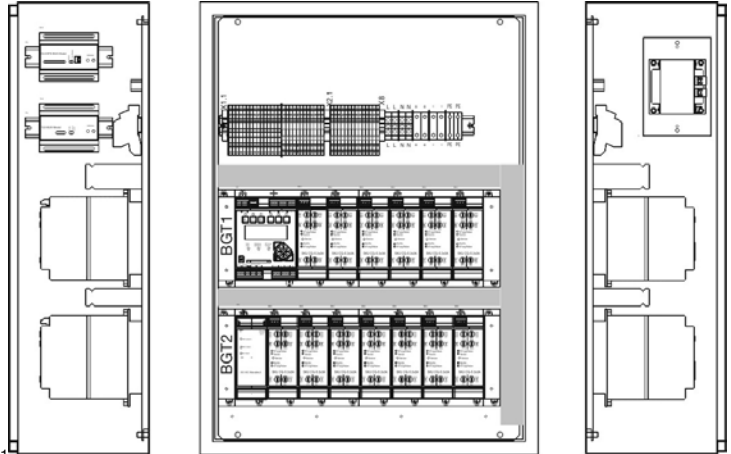

Cable entry from the top
1x prepunched flange plate for:
max. 2x M16
max. 13x M20
max. 11x M25
max. 2x M32
max. 2x M32 (M40)

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data



3.15 Data Sheet for US-S/5

| | |
|------------------------|---|
| Type of system | : US-S/5 |
| Construction | : Sheet steel wall mounting cabinet with a door made of sheet |
| Height | : 600 mm |
| Width | : 400 mm |
| Depth | : 250 mm |
| Weight without battery | : approx. 42 kg |
| Insulation class | : I |
| Degree of protection | : IP 54 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched flange plate) |
| Hinge | : right |

| | |
|--------------------------------|---------------------|
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity | : |
| Type of battery | : |
| Duration of emergency lighting | : |
| Recharging time | : |
| Ambient temperature operation | : -5°C bis +35°C |

| | |
|---|--|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : X8 |
| Max. 10 circuits (max. 4mm ²)* | : X1.1, X2.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2,5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max. 4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

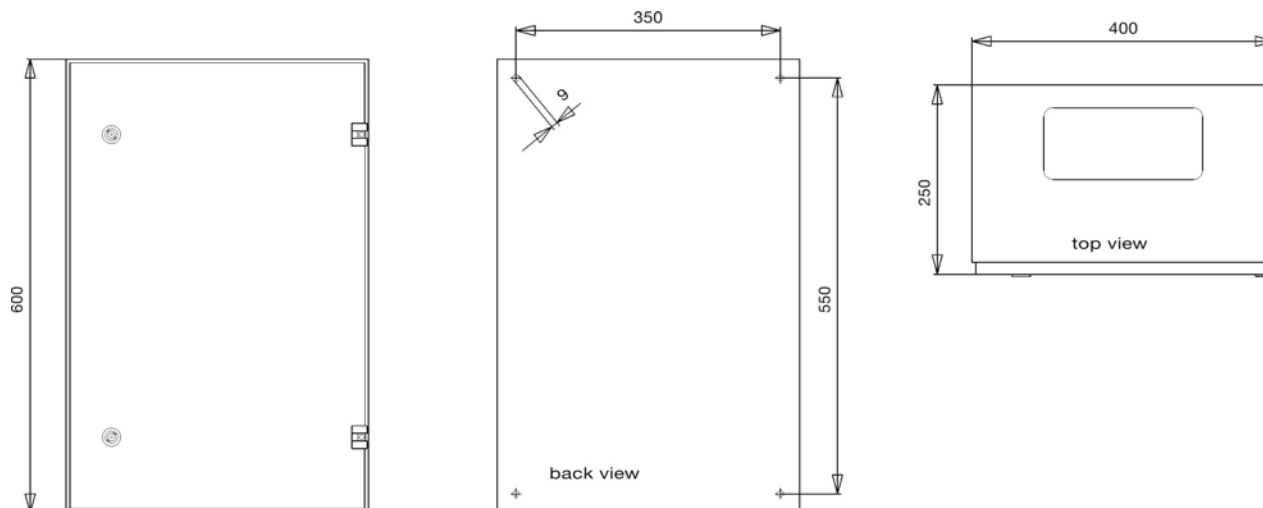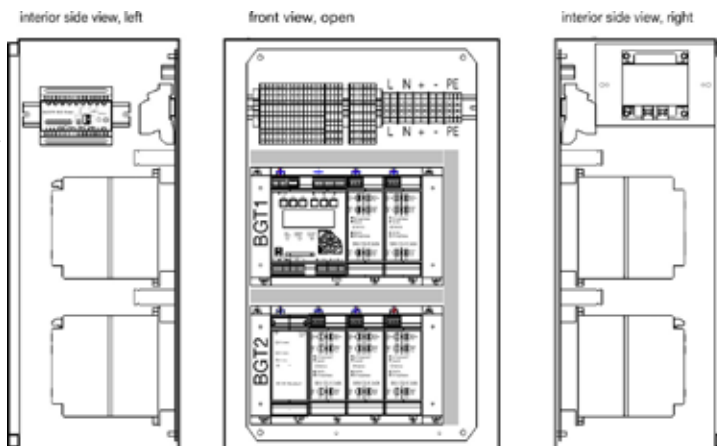

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data






3.16 Data Sheet for ESF-E30/13S

| | |
|------------------------|---|
| Type of system | : ESF-E30/13S |
| Construction | : Sheet steel wall mounting cabinet with a door made of sheet incl. cross point closing and a double-bit key cylinder |
| Permission | : ABZ Z-86.2-1 |
| Height | : 1150 mm |
| Width | : 885 mm |
| Depth | : 405 mm |
| Weight without battery | : approx. 235 kg |
| Insulation class | : I |
| Degree of protection | : IP 54 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched cable entry plate) |
| Hinge | : right |

| | |
|--------------------------------|---------------------|
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity | : |
| Type of battery | : |
| Duration of emergency lighting | : |
| Recharging time | : |
| Ambient temperature operation | : -5°C bis +35°C |

| | |
|---|--|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : X8 |
| Max. 26 circuits (max. 4mm ²)* | : X1.1, X2.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max.4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max. 4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

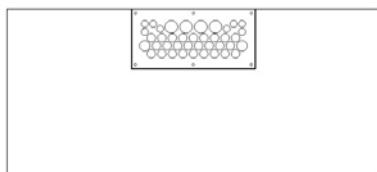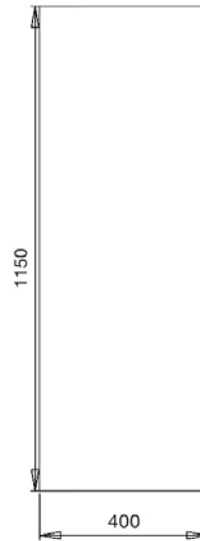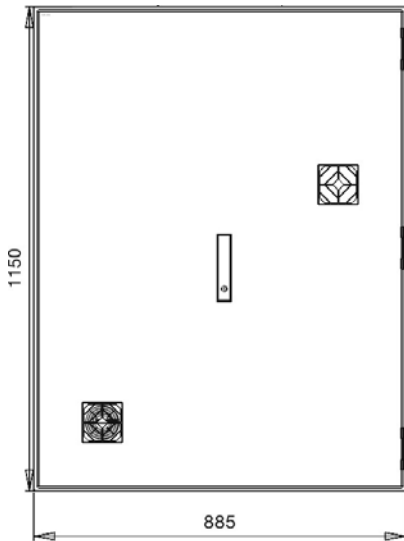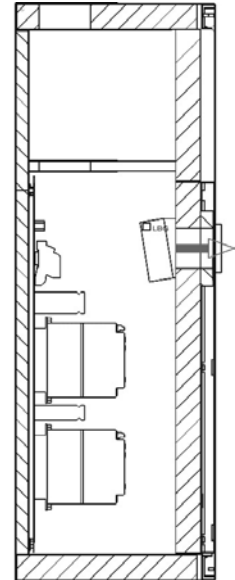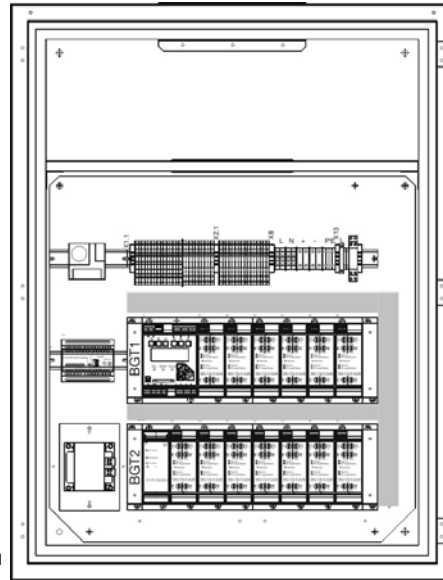

Cable entry with prepunched flange plate
4x M40
26x M25
8x M16

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology




Technical Data

3.17 Data Sheet for ESF-E30/13S-P

| | |
|---|---|
| Type of system | : ESF-E30/13S-P |
| Construction | : Wall-mounted cabinet |
| Permission: | : ABZ Z-86.2-8 |
| Height | : 824 mm |
| Width | : 824 mm |
| Depth | : 400 mm |
| Weight without battery | : approx. 235 kg |
| Insulation class | : I |
| Degree of protection | : IP 54 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (cable bundle entry) |
| Hinge | : right |
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Ambient temperature operation | : -5°C bis +35°C |
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : X8 |
| Max. circuits (max.4mm ²)* | : X1.1, X2.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max. 4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve
The final circuits get wired customised.

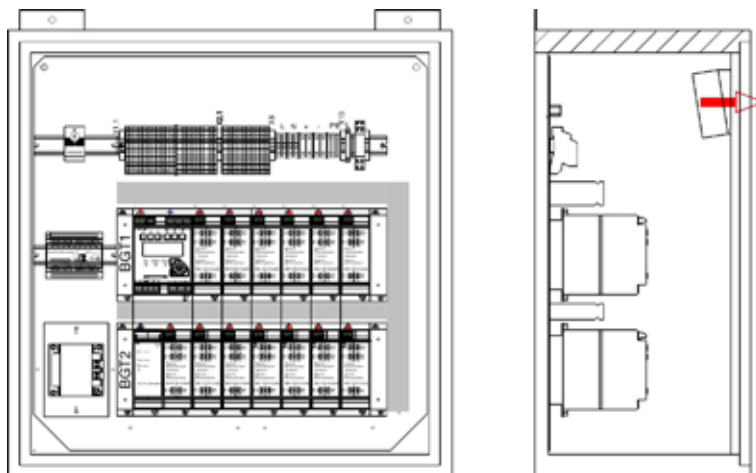

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Technical Data



3.18 Data Sheet for ESF-E30/28S

| | |
|------------------------|---|
| Type of system | : ESF-E30/28S |
| Construction | : Sheet steel wall mounting cabinet with a door made of sheet incl. cross point closing and a double-bit key cylinder |
| Permission: | : ABZ Z-86.2-1 |
| Height | : 2190 mm |
| Width | : 885 mm |
| Depth | : 405 mm |
| Weight without battery | : approx. 390 kg |
| Insulation class | : I |
| Degree of protection | : IP 54 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (prepunched cable entry plate) |
| Hinge | : right |

| | |
|--------------------------------|-------------------------|
| Mains rated voltage | : 400/230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Battery capacity | : |
| Type of battery | : |
| Duration of emergency lighting | : |
| Recharging time | : |
| Ambient temperature operation | : -5°C bis +35°C |

| | |
|---|--|
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : X8 |
| Max. 56 circuits (max. 4mm ²)* | : X1.1, X2.1, X3.1, X4.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max. 4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve. The final circuits get wired customised.

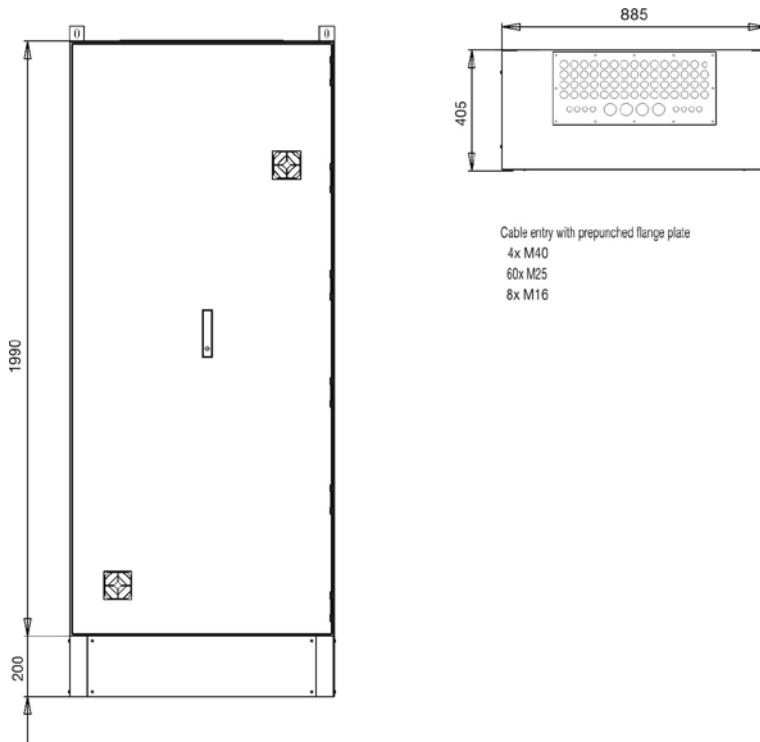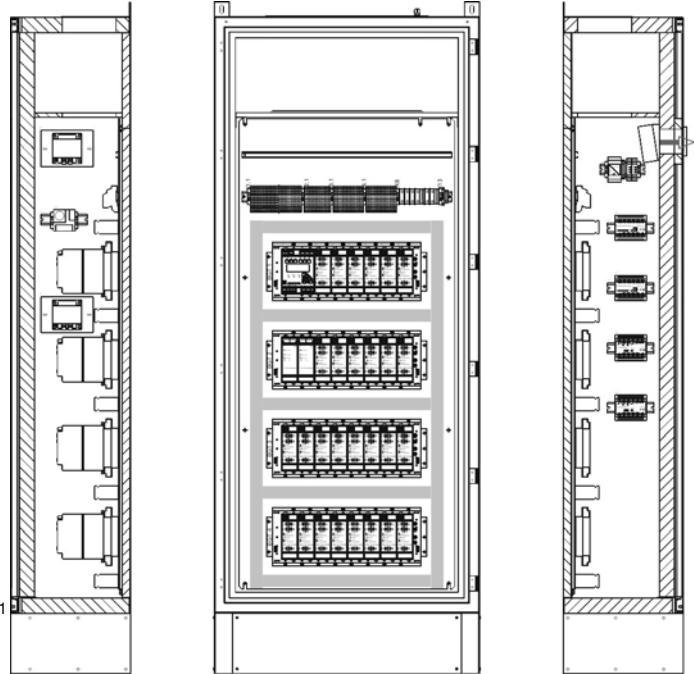

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology





Technical Data

3.19 Data Sheet for ESF-E30/28S-P

| | |
|---|---|
| Type of system | : ESF-E30/28S-P |
| Construction | : Wall-mounted cabinet |
| Permission: | : ABZ Z-86.2-8 |
| Height | : 1876 mm |
| Width | : 824 mm |
| Depth | : 400 mm |
| Weight without battery | : approx. 390 kg |
| Insulation class | : I |
| Degree of protection | : IP 54 |
| External painting | : Structure powder laquer RAL 7035 light grey |
| Cable entry | : at the top (cable bundle entry) |
| Hinge | : right |
| Mains rated voltage | : 230V AC, 50/60 Hz |
| Battery rated voltage | : 216V DC |
| Ambient temperature operation | : -5°C bis +35°C |
| Mains feed in (max. 16mm ²) | : X8 |
| Battery feed in (max. 16mm ²) | : X8 |
| Max. circuits (max. 4mm ²)* | : X1.1, X2.1 |
| Addresses optional places DLS-3Ph, TLS (max. 2.5mm ²): customised | |
| Connection to ext. control switch (max. 4mm ²) | : X1.1.S1-S2 |
| Connection to 24V current loop (max. 4mm ²) | : X1.1.S3-S4 |
| Connection to potential-free signal contacts (max. 4mm ²): | X1.1.12-14-11/22-24-21/32-34-31 |
| Connection to CG-S Bus (max. 4mm ²) | : X1.1.A-B |
| Connection to RS485 Bus (max. 4mm ²) | : X1.1.RS485.A-B |
| Connection to 24V analog output (max. 4mm ²): | X1.1.+24V Out--24V Out |
| Connection to 24V analog input (max. 4mm ²): | X1.1.Z1.1-Z1.2/Z2.1-Z2.2/Z3.1-Z3.2/Z4.1-Z4.2 |

* Max. 2.5mm² flexible with wiring sleeve
The final circuits get wired customised.

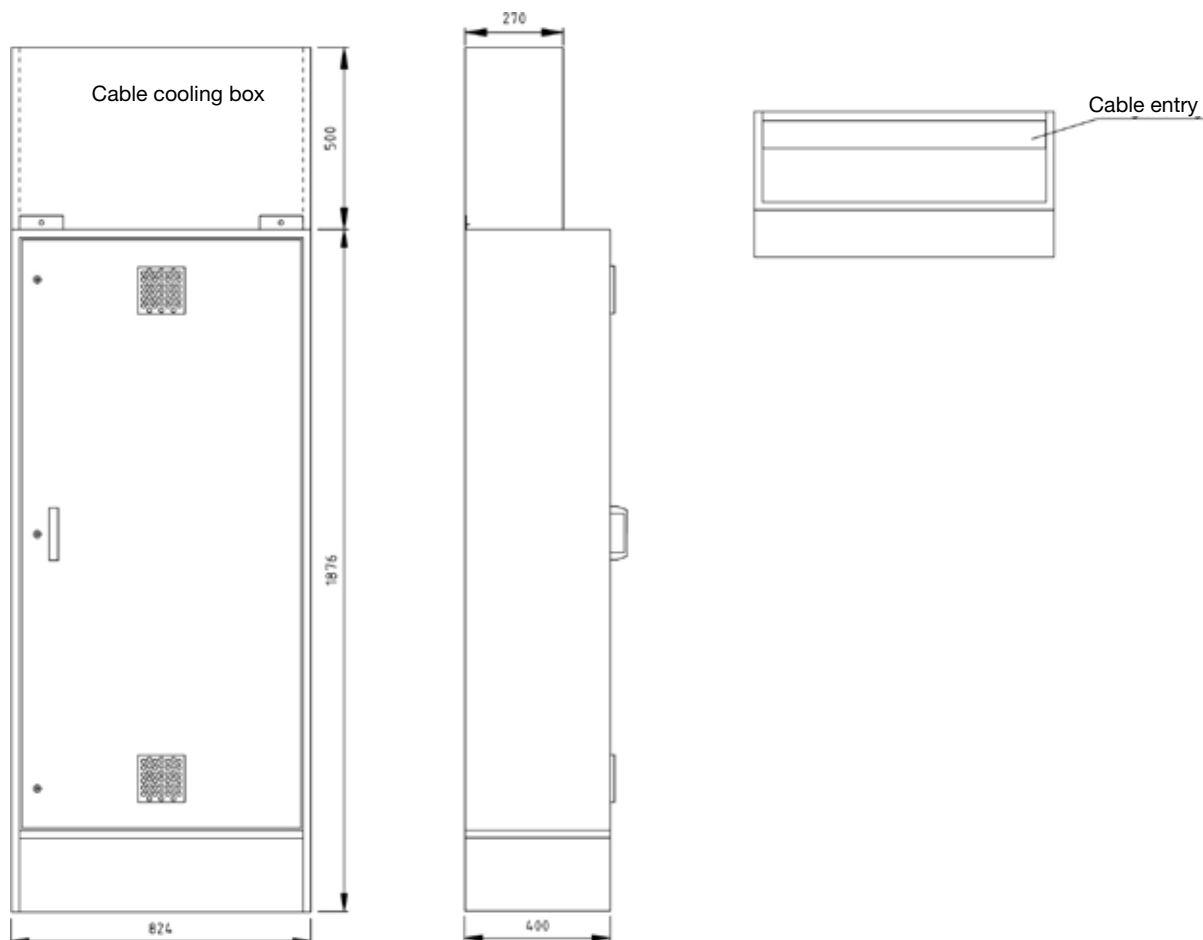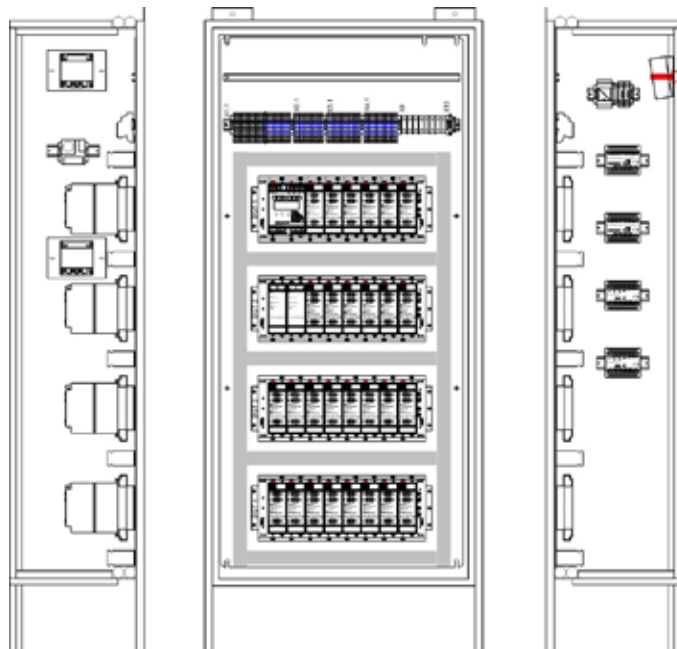

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology




Technical Data

Construction and Function

4. Construction and Function

4.1 Example of Control Cabinet-Construction (ZB-S/26)

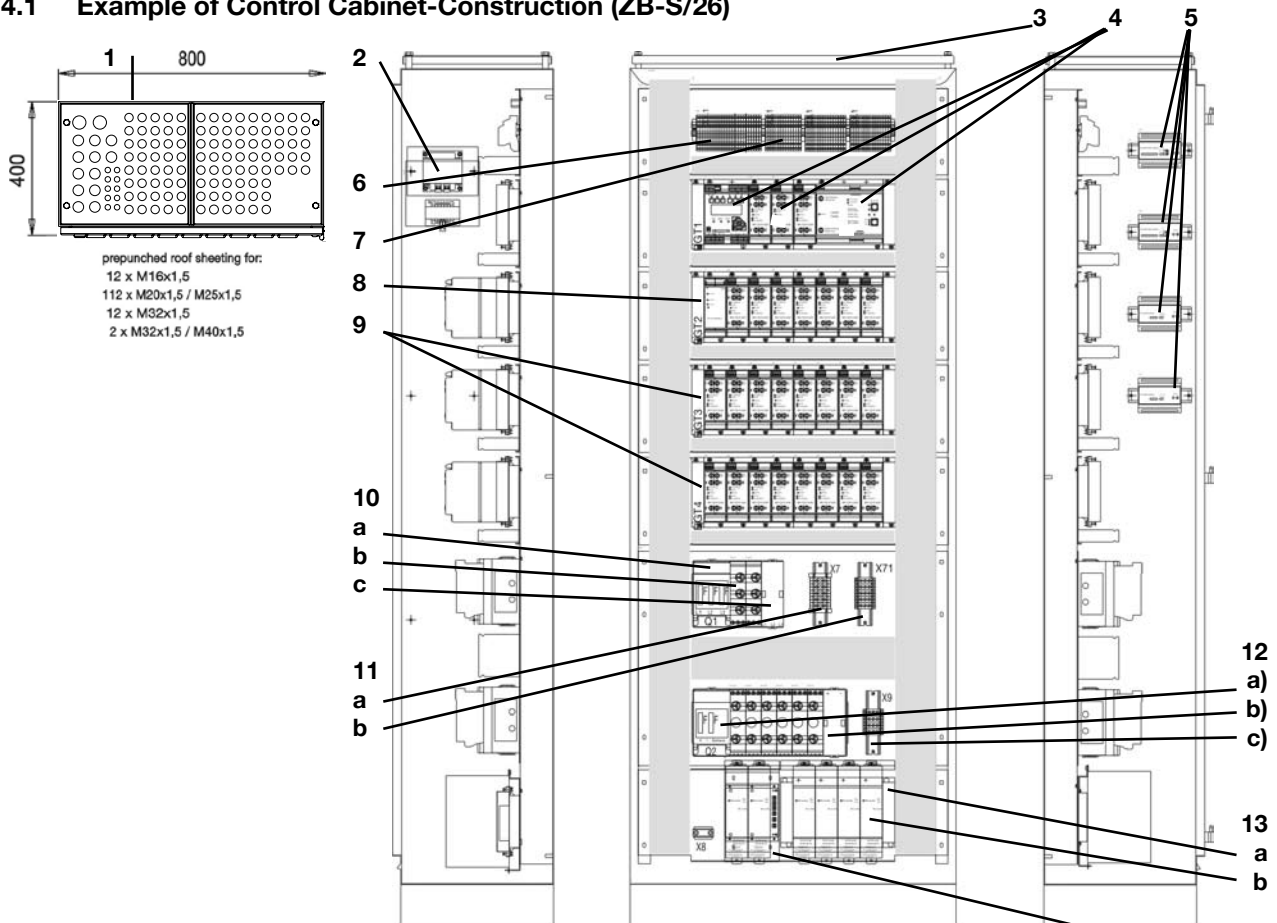

- 1: **Top cover panel with** ready perforated cable entries for M-type glands (e. g. for cables of the final circuits and/or for the supply of US-S slave stations)
- 2: **AC-Module**, external transformer-module AC/AC converter 240VA
- 3: **Control cabinet** with typical layout
- 4: **Control module**, 3 slots for **SKU CG-S** circuit changers and **charging module** (battery monitoring and charging controller).
- 5: **External DLS/3Ph- or TLS-bus-modules** (optional mounting on 35 mm DIN-rails in CEAG control cabinet, part number **400 71 347 125**)
- 6: **3-tier-terminal block** for (external) connections of control module, (DC/DC-converter) and charging module
- 7: **3-tier-installation terminal block with tension spring-connection and N-isolation** for connection of emergency lighting circuits according to customer's specification
- 8: **DC/DC converter** (for the internal supply of electronics) and **1 x 7 slots** for circuit change-over modules SKU CG-S (resp. CG)
- 9: **2 x 8 slots** for circuit change-over modules SKU CG-S (resp. CG)
- 10: **(a) Switch-disconnector/NH-fuses (mains)**, **(b) outgoing distribution board/ mains** optional for up to 6 US-S substations (1-phase) or up to 2 substations US-S (3-phase) and **(c) distribution board (mains)** for the ZB-S control cabinet
- 11: **Terminals for (a) N and (b) PE** for the mains supply and distribution
- 12: **(a) Switch-disconnector/NH-fuses (batt)**, **(b) outgoing distribution board (batt)** optional for up to 6 substations ZB-S and **(c) distribution board (batt)** for the ZB-S control cabinet
- 13: **(a) Subrack with (b) 4 charge boosters 2.5A**
- 14: **Booster rack** twice with 2 charge booster 2.5A

Construction and Function

4.2 Product Description

The Central Battery System ZB-S with the new STAR technology is a logical successor to the wellproven Central Battery System ZB 96. STAR stands for:

SWITCHING TECHNOLOGY ADVANCED REVISION

The main benefits of this technology include the fact that

- within a final circuit, the switching modes
 - Non-maintained light (Emergency lighting is switched on when the main lighting fails or when a function test or operating duration test is initiated manually or automatically)
 - Maintained light and (Emergency lighting is always on)
 - Switched maintained light (as non-maintained light with emergency lighting controlled by switch queries, e. g. from external DLS-modules)can be implemented in hybrid mode for each emergency luminaire.
- each safety and EXIT luminaire can be programmed without an extra data cable ,
- the switching modes can be later modified without the need to interfere in the existing luminaire installation.

The functions of the emergency luminaires are defined with a user-friendly parameter setup system.

The use of CG-S type ballasts/modules is a requirement.

All settings are stored in a nonvolatile memory and so are not lost even in a total shutdown situation (230V mains and battery supply).

Parameter settings and the names of circuits, luminaires and DLS/TLS-modules as well as test log entries can also be stored on a memory card. As well as archiving, this also allows (optional) external parameter setting and transfer to control modules of the ZB-S system.

Maintenance-free and closed batteries according to EN 60896-2 supply the power needed to operate the emergency lighting if the 230V mains supply should fail. During normal operation, the ZB-S system monitors the charge status of the batteries and charges them up gently if required.

The system ZB-S is designed and manufactured in compliance with the following EC directives:

- Low-voltage Directive 2006/95/EG
 - Directive 2004/108/EG on electromagnetic compatibility
- National (DIN-), European (EN-) and international (IEC-) standards which the system complies will be found in the system's CE Certificate of Conformity.

4.3 Operation Modes

Different system configurations are used depending on the requirements of the site. These standardised configurations have names like

- ZB-S/26 or ZB-S/18**
for operation with up to 26 or 18 SKU CG-S modules (resp CG) with 80 or 68 circuit terminals. Up to 6 substations US-S can be supplied with battery or mains power (up to 6 substations 1-phase, up to 2 substations 3-phase).
- ZB-S/LAD**
These are designed as charging and monitoring units for the mains and battery supply to a large number of substations US-S. Up to 4 circuits can be supplied and controlled.
- ZB-S/10C, ZB-S/10C6, ZB-S/18C6, ZB-S/26C6, ZB-S/10C3, ZB-S/18C3, ZB-S 2C3**
for operation with up to 10 or 18 SKU CG-S modules (resp. CG) with 40, 56 and 60 circuit terminals.
- US-S/36, US-S/28, US-S/21, US-S/13, US-S/5**
for operation with up to 5, 13, 21, 28 or 36 SKU CG-S modules (resp. CG) with 20, 24, 26, 52 and 80 circuit terminals. These substations do not have the charging technology of the connected battery standby supply; the battery and mains supply is provided by the ZB-S system.
- ESF-30/13S, ESF-E30/28S, ESF-E30/13S-P or ESF-E30/28S-P**
Mains distribution board with circuit integrity of 30 minutes in case of fire for operation with up to 13 or 28 SKU CG-S modules (resp. CG) with 26 or 56 circuit terminals.

Construction and Function


All devices and substations are constructed modularly. The technologies of charging, changing-over and of monitoring form a unit working independent from each other, so that interactions can be excluded.

Due to the modular construction and the pre-configured modules a flexible and high quality handling is ensured. The objective of the emergency lighting system is to supply the connected emergency luminaires when the main lightings fails. Another important function of the system is to secure the function standby of all connected emergency and EXIT luminaires by an automatic monitoring.

4.4 Overview over the Components

4.4.1 Control Module ZB-S

The terminal blocks on the module simplify assembly and dismantling; the connections are taken out to a 3-tier-installation-terminal with tension spring-connection. (s. fig on page 27)

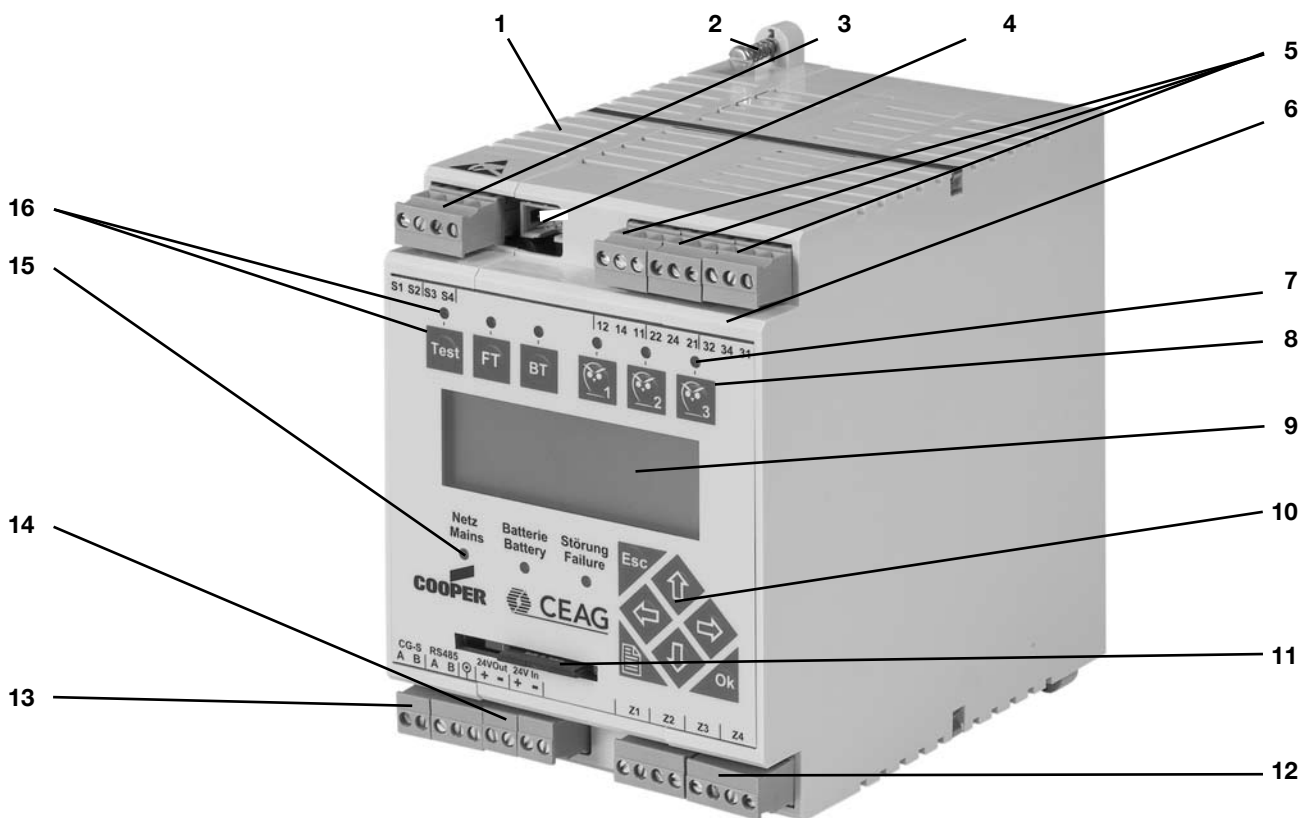

- | | | |
|---|---|--|
| <p>1: Housing of the control module</p> <p>2: Retaining screw for the plug-in control module</p> <p>3: 24V-interrogation contacts for disabling the system by remote switch (S1/S2) and emergency light request (S3/S4) e. g. with a (conventional) CEAG 3-phase-monitor, with differential line monitoring for short circuit/open circuit</p> <p>4: PC service connector for CEAG Customer Service</p> <p>5: Signalling relay contacts 1 ... 3, floating, with contact assignment. Normally open (NO) on (11/14), (21/24) and (31/34) or normally closed (NC) on (11/12), (21/22) und (31/32)</p> | <p>6: Contact designations for the signal relay contacts (see item 5),</p> <p>7: Indicator-LEDs for the</p> <p>8: Function keys 1 ... 3 (freely assignable, e. g. block/release system, manual reset etc.). Function key 3 is factory-set on FT without start-up time</p> <p>9: LC-display (4 x 20 characters, with backlighting) and</p> <p>10: Touch sensitive control buttons for system operation and parameter setting</p> <p>11: Slot for memory card</p> <p>12: 24V-analog inputs Z1 ... Z4 for controlling with external operator panels, programmable resolution of</p> | <p>control functions (e. g. block/release system, manual reset, etc.)</p> <p>13: Connections for CG-S bus lines and RS485 with cable shield</p> <p>14: 24V In/Out connections for a loop-through internal voltage supply in the control cabinet</p> <p>15: LEDs for the status display of the control module</p> <p>16: Function keys with indicator-LEDs for TEST (system and mains failure test), FUNCTIONSTEST FT with 300ms start-up time (luminaire test) and BATTERY DURATION TEST BT (battery test)</p> |
|---|---|--|

Construction and Function

Free programmable control

with a nonvolatile programm memory for programming and user-specific parameter setting.

Internal log book recording

the ST-S control module stores the test log (max. 360,000 entries) according to the specifications of DIN VDE 0108. An external reporting with a memory card is possible.

Operation

- Directly on the device
ST-S controller using
 - sealed keypad and
 - LC display (4 x 20 characters, with adjustable backlighting) (Compare chapter 9).
- Local switch
operation of combined main/emergency lighting can be achieved with DLS/3Ph and TLS bus modules.
- Service connector
for CEAG service engineers at the front of the device

Configuration

- At the front of the device
using keys and LC-Display. There are considerable possibilities for userdefined settings via a menu controlled parameterisation (compare chapter 9).
- Via data exchange
via memory card, e. g. for a transfer of the settings between similar cabinets.
- External configuration of the control module is possible with
 - a usual personal computer (PC) and
 - CEAG-software for the system ZB-S.

Communication and control

- Data exchange
with installed CG-S components and CG-S-compatible ballasts (using the cables of the final circuits)
- RS485 bus
allows data to be exchanged with external modules (DLS/3PH-bus-modules or TLS-bus-modules, (RS485 port on the control module, up to 25 devices).
- External CG-S bus port
(CEAG bus protocol) for data exchange with BMS.


Data Exchange and Storage

- Internal:
with non-volatile memory in the ST-S control module
- External:
with a memory card reader, type of the uses memory card:
SD-card / CEAG part no. 400 71 347 911 (preprogrammed)
- SD-adapter
enables data exchange and saving with usual PC under the CEAG-Software for the system ZB-S

Construction and Function

Connections

- 3-tier-installation terminal with tension spring
all connections are taken out to a 3-tier-installation terminal with tension spring, see page 29: detail view and Appendix A: „Connection Assignment“
- Pluggable screw terminal block
at the device enables a simple assembly and disassembly.
- Bus cables
4 x 2 x 0,8 mm, type: JY(ST)Y, Twistet Pair screened (minimum requirement). By using a pair of wires a data supply of more than 1,200 meters is possible.
- 3 signal-relay contact
over here the operating state can be recalled. For this the connection's capacity is max. 24 V AC/DC and 1A, the max. cable length is 1000m. The switching characteristic can be linked with different events.

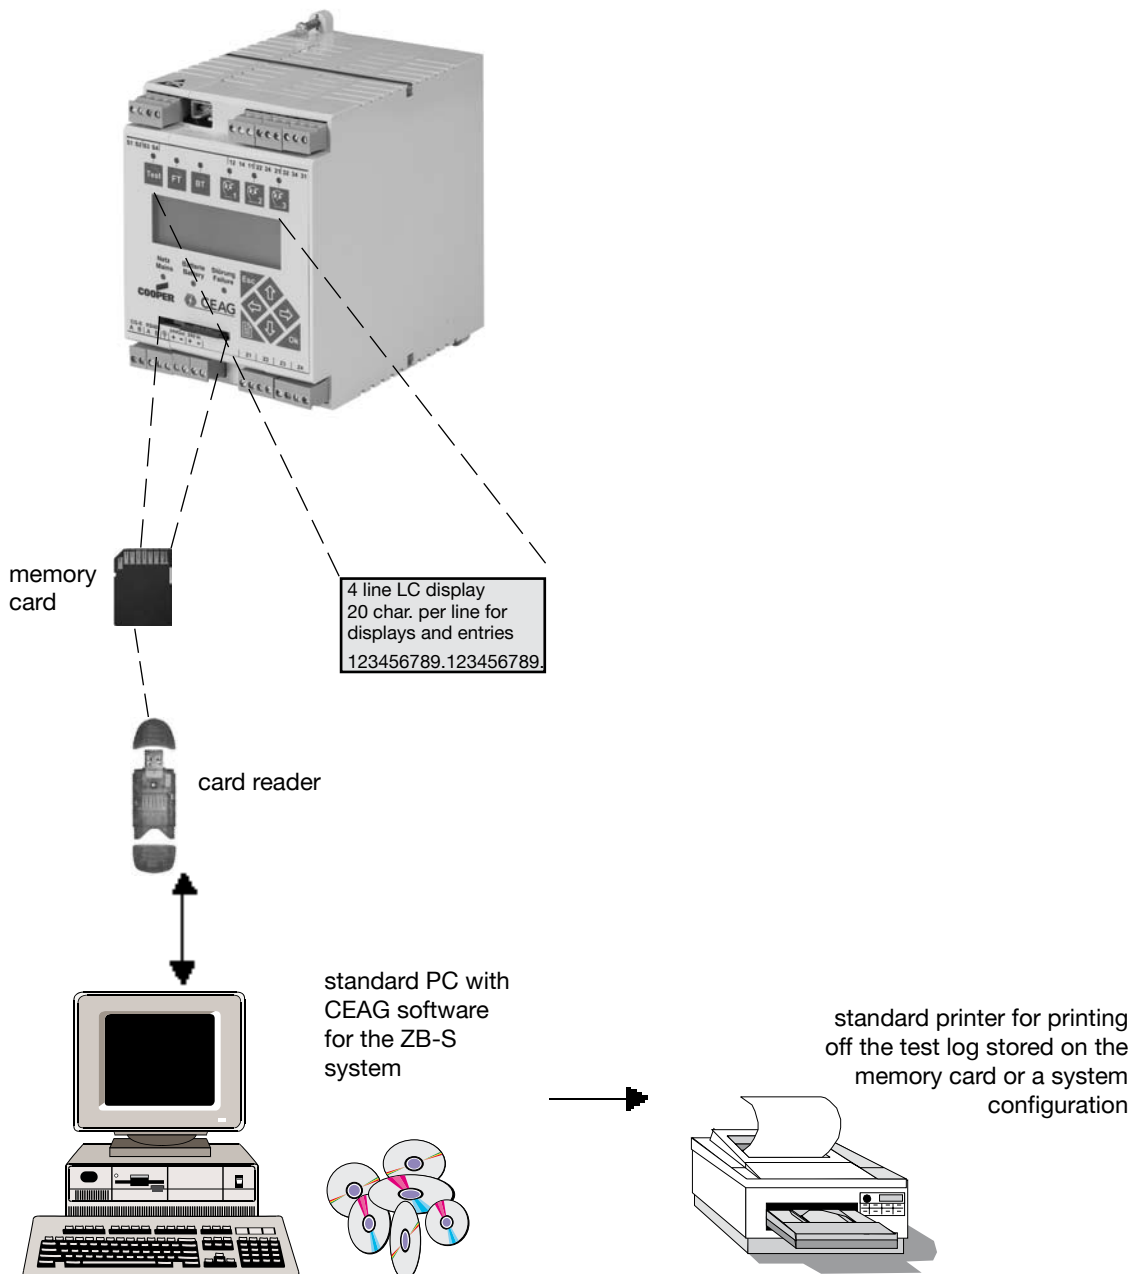


Construction and Function

Control inputs

The 24V analog inputs Z1 ... Z4 are to control the external control panels, a programmable trip of operational functions (e. g. bloc / release system, manual reset, etc.) is given.

| Optional inputs Z1 - Z4 | | | | | Comments: | | | | |
|--------------------------------|---------------------------------|----|----|----|--|--|--|--|--|
| | Z1 | Z2 | Z3 | Z4 | | | | | |
| No function | Tactile level 24V DC min. 100ms | | | | Factory settings | | | | |
| Switch | | | | | Used as a switch and switches the circuit or the luminaire(s) with "S"-function | | | | |
| Switch inverted | | | | | To reset the circuit arrangement "manual reset". | | | | |
| Manual reset | | | | | To reset the deep discharge protection. | | | | |
| Deep discharge receipt | | | | | Start FT | | | | |
| Start FT | | | | | Start DT | | | | |
| Start DT | | | | | Cancel DT/FT | | | | |
| Cancel DT/FT | | | | | Block function of mains/emergency lighting during shut-downs. | | | | |
| Block device | | | | | All luminaires/circuits, which were programmed as maintained light, will be switched off. | | | | |
| Switch-off maintained light | | | | | All luminaires/circuits, which were programmed as non-maintained light, will be switched on. | | | | |
| Switch-on non-maintained light | | | | | | | | | |
| Monitoring ventilation | | | | | 24V DC | | | | Sends a signal about a charging fault by the potential-free signal contacts of the control module to the CGIV relay module and the CGVision as long as the 24 V DC is present. |

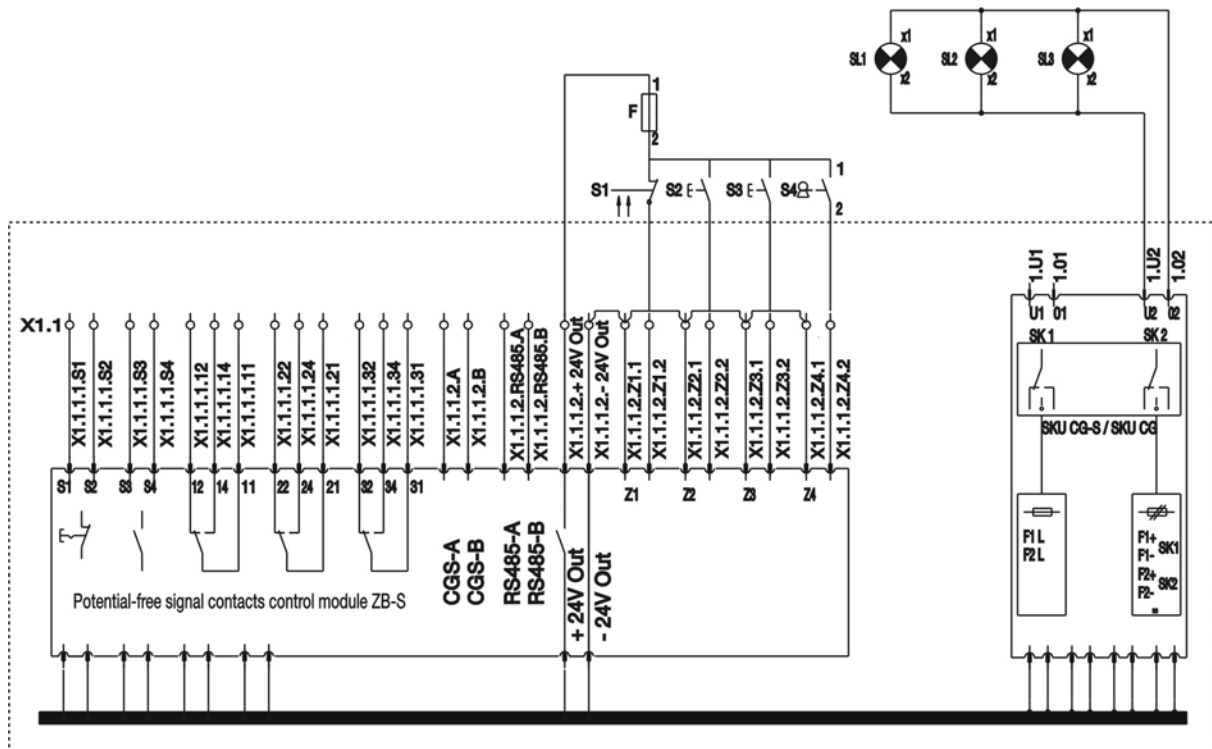

Construction and Function

4.4.2 DC/DC Converter.2


This unit provides the central battery system with 24V and 6V direct voltage.
 Supply only for optional AC-module.

Attention: When using at least two DC-DC converter please observe that all DC-DC converter has to be used side by side on the same module assembly frame.

Light-emitting diodes

- 24 V external The LED lights up when the external 24V DC is present at the terminal 24V DC OUT.
- 24 V internal The LED lights up when the interal 24V DC voltage is present at the ZB-S system.
- 6 V internal The LED lights up when the interal 6V supply voltage is present.

The „Service PIN“ button is located behind the hole.

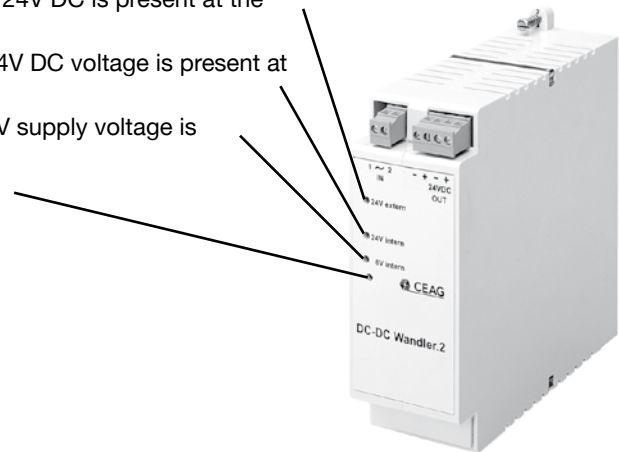

Additional Features:

- 24 V external
 - 20 W continuous output
 - outgoing circuit over frontline plug
 - voltage galvanic separated
- 24 V internal
 - 100 W continuous output
 - 140 W top performance (20 msec.)
 - supply of max. 26 SKU of type 2 x 3A and 1 x 6A as well as 13 SKU of type 4 x 1,5A
- Parallel switching of several converters possible! Please attend that the converter has to be installed side by side.
- Supply via AC/AC converter for an external mains supply is possible!

4.4.2.1 AC-Module

This optional unit supplies the central battery system with an AC-voltage galvanically isolated, in mains operation.

Connection to terminals 1 ~ 2 IN to DC/DC converter.2.

! Attention!

Only the AC-module has to be connected to this terminals.



4.4.3 Charging Module LT.1 2,5

Operation elements

At the charging module LT 2,5 the following operation elements are available:

- End-of-charge voltage
 - The end-of-charge voltage and charging current are factory-set with two potentiometers on the front panel.
 - !** When the system is supplied without battery the tripple charge voltage has to be set to the parameters of the manufacturer!
- Service button
 - Behind the hole labelled „Service“ is a button which must be operated when the basic program is loaded. Basic programming is done at the factory.
- ISO monitor button
 - VDE 0108 part 1 requires a tester to test the operation of the earth-leakage monitor:
 - Top button operated = Insulation fault batt. + / Bottom button operated = Insulation fault batt. -

Construction and Function

Indicators

- ON LED
The LED lights up when the charger is in operation. If the LED does not light up, then the charging module is faulty or there is no mains supply or a function test has been initiated.
- Boost Charge LED
The Boost Charge LED lights up during boost charging, e. g. following a mains failure or operating duration test.
- Charge Fault LED
The Charge Fault LED lights up when the charging module, charging boosters or the batteries are faulty. Other fault messages can be polled with the control module.
- Battery Capacity LED
The LEDs indicate the remaining capacity as a percentage. The '> 10%' LED flashes when the battery capacity has no defined value (battery fully charged, flat battery) or when the „Battery Open Circuit“ fault occurs.

Fuse protection

On the front panel of the charging module there are two fuses:

- one mains fuse 6.3 AT
- one charge fuse 3.15 AT

Connection terminals

The terminals are of the push-lock type.

The terminals can be unplugged to assist installation.

- Potential-free signal contacts
Potential-free signals can be relayed with terminals "11-12", "21-22", "31-32".
The contact 11/12 is closed in the event of a fault.
The contact 21/22 is closed in the event of an insulation failure.
The contact 31/32 is closed during boost charging.
- Temperature sensor
An external temperature sensor must be connected to terminals F+ and F-. The temperature sensor must be connected using a screened 2-core cable. A conductor size of 0.5 mm² is adequate for cable runs < 50 m as the measuring current is very low.
- Booster status signals
The boosters send status signals to the control module via terminals I+, I-, ON, GND, ok.



Construction and Function

4.4.4 Circuit change-over modules overview (SKU's)

Inverter SWR 150

| | | |
|------------------------------|---------------------|--|
| Number of circuits | 1 | monitored circuit |
| Rated current | 150 VA | dimensions and weights approx. 0.75 kg |
| Fuse protections per circuit | 1.6 AT | H x W X D (in mm) 170 x 55 x 155 |
| | | module width 1 TE |
| max. cable diameter | 2.5 mm ² | Item no. 400 71 347 960 |

SKU CG-S 2x3A

| | | |
|-----------------------------|---------------------|--|
| Number of circuits | 2 | with STAR-Technology |
| Rated current per circuit | 3 A | dimensions and weights approx. 0.66 kg |
| Fuse protection per circuit | 5 A | H x W X D (in mm) 170 x 55 x 155 |
| max. inrush peak current | 250 A/ms | module width 1 TE |
| max. cable diameter | 2.5 mm ² | Item no. 400 71 347 051 |

SKU CG-S 1x6A

| | | |
|-----------------------------|---------------------|--|
| Number of circuits | 1 | with STAR-Technology |
| Rated current per circuit | 6 A | dimensions and weights approx. 0.49 kg |
| Fuse protection per circuit | 10 A | H x W X D (in mm) 170 x 55 x 155 |
| max. inrush peak current | 250 A/ms | module width 1 TE |
| max. cable diameter | 2.5 mm ² | Item no. 400 71 347 345 |

SKU CG 2x3A

| | | |
|-----------------------------|---------------------|--|
| Number of circuits | 2 | without switching function for CG-S-EVGs |
| Rated current per circuit | 3 A | dimensions and weights approx. 0.61 kg |
| Fuse protection per circuit | 5 A | H x W X D (in mm) 170 x 55 x 155 |
| max. inrush peak current | 120 A/ms | module width 1 TE |
| max. cable diameter | 2.5 mm ² | Item no. 400 71 347 290 |

SKU CG 1x6A

| | | |
|-----------------------------|---------------------|--|
| Number of circuits | 1 | without switching function for CG-S-EVGs |
| Rated current per circuit | 6 A | dimensions and weights approx. 0.47 kg |
| Fuse protection per circuit | 10 A | H x W X D (in mm) 170 x 55 x 155 |
| max. inrush peak current | 180 A/ms | module width 1 TE |
| max. cable diameter | 2.5 mm ² | Item no. 400 71 347 346 |

SKU CG-S 4x1,5A


new!

| | | |
|-----------------------------|---------------------|--|
| Number of circuits | 4 | with STAR-Technology |
| Rated current per circuit | 1,5 A | dimensions and weights approx. 0,83 kg |
| Fuse protection per circuit | 2,5 A | H x W X D (in mm) 170 x 55 x 155 |
| max. inrush peak current | 60 A/ms | module width 1 TE |
| max. cable diameter | 2,5 mm ² | Item no. 400 71 347 840 |

Construction and Function

! Attention!

Only fuses approved by CEAG Notlichtsysteme GmbH are permitted to use.

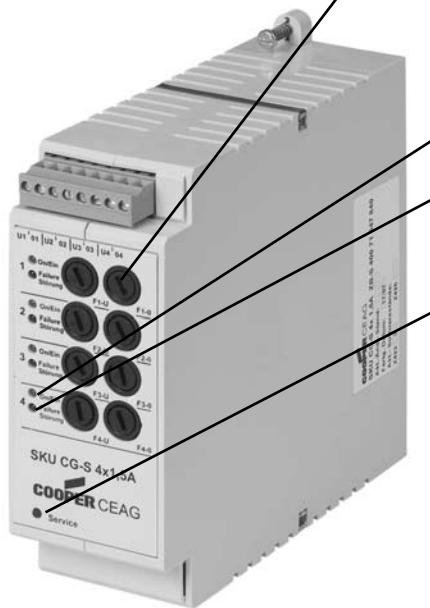

SKU CG-S 4x1,5A

Fuses

On the front panel of the change-over module there are

- per circuit
- 3 output fuses 5 AT / 250 V.

The nominal current should not exceed 3 A per circuit!
Fuse dimensions: 6.3 mm x 32 mm, sand filled.
Order no.: 400 71 070 716 10 qty./unit

Indicators

- ON LED**
The LED lights up when the voltage is present at the output terminals.
- Fault LED**
The LED lights up when one or more luminaires are faulty.

Operation elements


- Service-PIN**
Beside the „Service“ label there is a button which must be operated when the system's basic program is loaded. The basic programming occurs factory made.¹⁾

Additional features

- Mixed operation of**
maintained light, non-maintained light and switched maintained light in one circuit by using of CEAG EVGs/modules with CG-S marking can be programmed without any additional data cable.
- Individual monitoring of**
up to 20 luminaires per circuit.
- Easy access to fuses**
- Connected rating per circuit**
330 W
- Inrush current per circuit**
60 A/ms
- Typical change-over time**
AC on DC = 450 ms

Components for circuit change-over module SKU CG-S 4x1,5A

- (4 circuits each 1,5 A rated current)
- The current module is connected to the controller via the BUS.
- At the device configuration an address is allocated via the controller. This occurs factory made.
- All functions as switching mode, monitoring function can be programmed via the controller.
- Will the circuit change over module be refitted or replaced the programming must be changed.

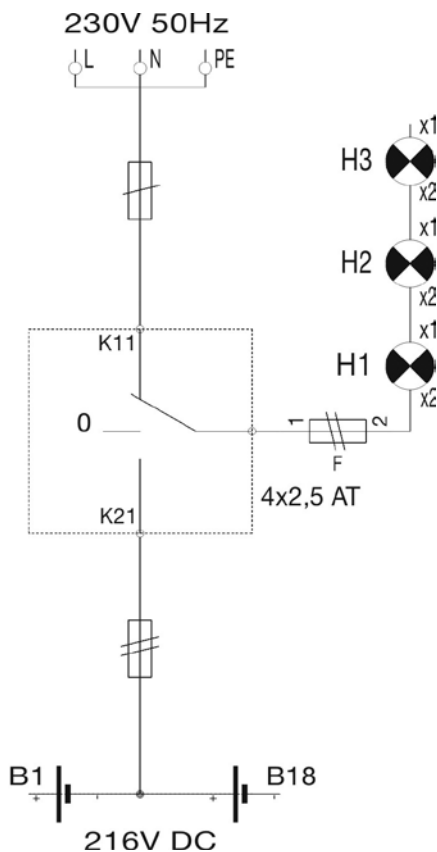

Construction and Function

! Attention!

Only fuses approved by CEAG Notlichtsysteme GmbH are permitted to use.

SKU CG-S 2x3A

Fuses

On the front panel of the change-over module there are

- per circuit
- 3 output fuses 5 AT / 250 V.

The nominal current should not exceed 3 A per circuit!

Fuse dimensions: 6.3 mm x 32 mm, sand filled.
Order no.: 400 71 689 047 10 qty./unit

Operation elements

Service-PIN

Beside the „Service“ label there is a button which must be operated when the system's basic program is loaded. The basic programming occurs factory made.¹⁾

Indicators

ON LED

The LED lights up when the voltage is present at the output terminals.

Fault LED

The LED lights up, when one or more luminaires are faulty.

Additional Features

Mixed operation of

maintained light, non-maintained light and switched maintained light in one circuit by using of CEAG EVGs/modules with CG-S marking can be programmed without any additional data cable.

Individual monitoring of

up to 20 luminaires per circuit

Individual switchin each circuit

Separate fusing for mains and battery operation

Among unipolar earth connection

in AC operation fault free DC operation can continue

Easy access to fuses

Separate savings for

mains and battery operation

Connected rating per circuit

660 W

Inrush current per circuit

250 A/ms

Typical change-over time

AC on DC = 450 ms

Components for circuit change-over module SKU 2 x 3 A CG-S



(2 circuits each 3 A rated current)

The current module is connected to the controller via the BUS.

At the device configuration an address is allocated via the controller. This occurs factory made.

All functions as switching mode, monitoring function can be programmed via the controller.

Will the circuit change over module be refitted or replaced the programming must be changed.

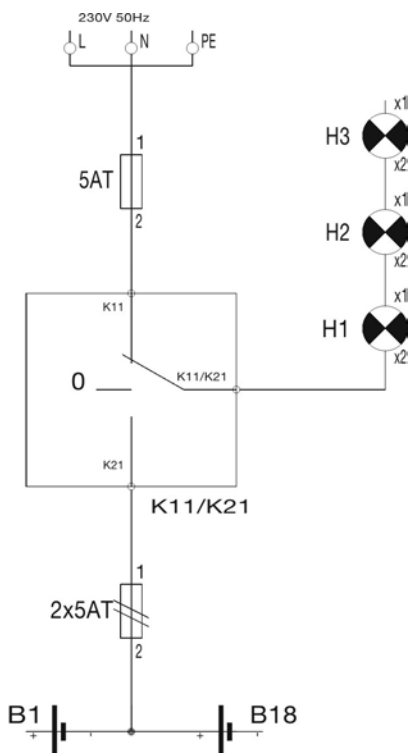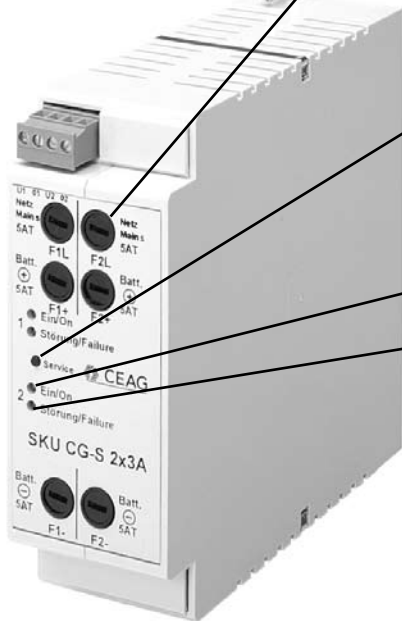

Construction and Function

! Attention!

Only fuses approved by CEAG Notlichtsysteme GmbH are permitted to use.

SKU CG-S 1x6A

Fuses

On the front panel of the change-over module there are
 – 3 output fuses 10 AT / 250 V.
 The nominal current should not exceed 6 A!
 Fuse dimensions: 6.3 mm x 32 mm, sand filled.
 Order no.: 400 71 070 715 10 qty./unit

Indicators

ON LED

The LED lights up when the voltage is present at the output terminals.

Fault LED

The LED lights up when one or more luminaires are faulty.

Operation elements

Service-PIN

Beside the „Service“ label there is a button which must be operated when the system's basic program is loaded. The basic programming occurs factory made.¹⁾

Additional Features

Mixed operation of

maintained light, non-maintained light and switched maintained light in one circuit by using of CEAG EVGs/modules with CG-S marking can be programmed without any additional data cable.

Individual monitoring of

up to 20 luminaires per circuit

Separate fusing for mains and battery operation

Among unipolar earth connection

in AC operation fault free DC operation can continue

Easy access fo fuses

Separate savings for mains and battery operation

Connected rating per circuit 1320W

Inrush current per circuit 250A/ms

¹⁾ When the Service Pin is operated the module status is shown as a plain-language readout on the display of the ST-S control module. Repeated operation of the SKU's Service Pin takes the operator through the following menu structure of the ST-S control module.

i Notes:

The new SKU modules for the system ZB-S have the ability, also during breakdown of the controller ST-S, to achieve the following switching functions:



- Mains emergency operation (by breakdown ST-S)
- DC-operation (by power failure)
- back to the mains emergency operation (return of the mains supply). Admittedly, will be no switching functions performed (e. g. by DLS module) during the breakdown of controller!

By disconnected saving of the mains and battery circuits is a fault-free DC-operation possible, also when the AC-mains-supply breakdown by earth fault or short-circuit.

The SKU modules for ZB-S system are Pin-compatible with the modules of the ZB96 system and EURO ZB.1 system.

! ATTENTION!

By replacement of a SKU with older version against a SKU with innovator version, note that (because of increased rated current values) accordingly higher fuses are used per circuit (faulted circuit impedance acc. to DIN VDE 0100)!

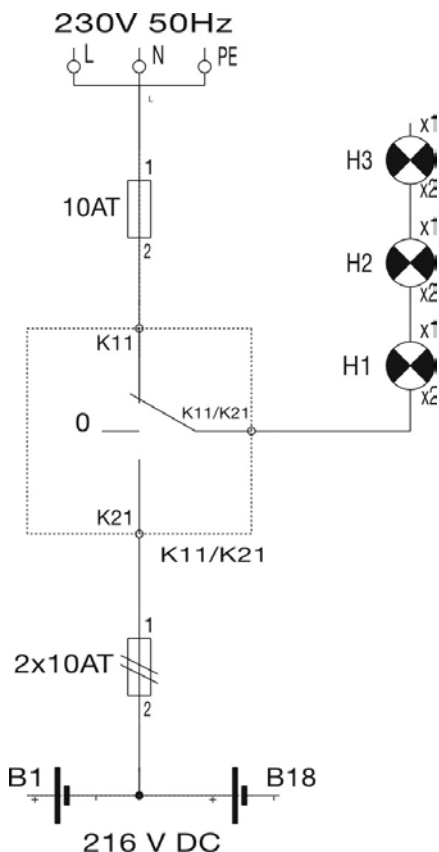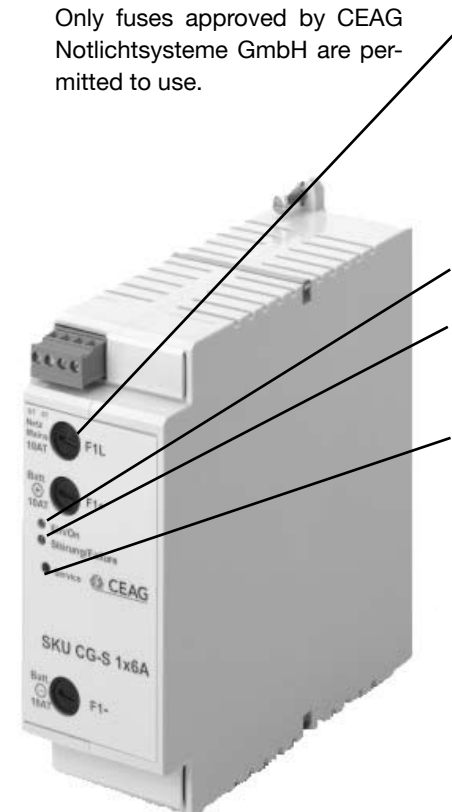

Construction and Function



4.4.5 Inverter SWR 150

Sinus-inverter

The sinus-inverter supplies and monitors emergency luminaires with conventional ballasts and lamps. The SWR has a rotary encoder switch to adapt the output frequency due to luminous flux reduction in battery mode in the region of 50Hz (100% luminous flux) to 140Hz (25% luminous flux).

Technical data

| | | |
|-----------------------------|---------------|-------------------------------|
| Slots | | 1 |
| Fuse | G-fuse 0.5x20 | 1.6 AT |
| Max. rated current | | 0.65 A |
| Max. connected load | | 150 VA |
| For luminaires | | KVG opr incandescent lamps WG |
| Rated power DC/DC converter | | 2.3W |
| Distortion factor | | K < 5% |

! The maximum installed load per SWR 150 should not exceed 150 VA! When re-fitting SWR-modules attend that the maximum SWR 150 installed battery load per system should not exceed 1,500W. Furthermore SWR 150 modules **must not** be installed in the top subrack. When using more than one SWR150 per ZB-S system a technical air ventilation has to be installed.

Indicators

- ON LED**
The LED lights up when the voltage is present at the output terminals.
- Fault LED**
The LED lights up when one or more luminaires are faulty.

Operation elements

- Service-PIN**
Beside the „Service“ label there is a button which must be operated when the system's basic program is loaded. The basic programming occurs factory made.¹⁾

¹⁾ When the Service Pin is operated the module status is shown as a plain-language readout on the display of the ST-S control module. Repeated operation of the SWR's Service Pin takes the operator through the following menu structure of the ST-S control module.

Additional Features

- Learning current value-detection**
- Overload display:** > 0.8 A Fault
> 1.0 A Disconnection of inverter operation
- Typifies change-over time mains / battery 450ms**
- Monitoring of battery voltage**
- Selected emergency lighting**
- Monitoring of AC fuses**
- Luminous flux adjustable from 25 to 100%**
- Sinus-output voltage = 230 V**
- Connection to DLS/3Ph bus-module possible**
- Separat DLS-gate input existing**
- AC-supply via backplane or via module-connection possible**
- Short circuit- or overload securely**
- Fuses easily accessible**

Rotary encoder switch

With the rotary encoder switch the frequency of the inverter is set in the region of 50 to 140 Hz. This change of frequency causes a change of the luminous flux for luminaires in inductive switching. (s. table)



Notes:

- The new SKU modules for the system ZB-S have the ability, also during breakdown of the controller ST-S, to achieve the following switching functions:
 - Mains emergency operation (by breakdown ST-S)
 - DC-operation (by power failure)
 - back to the mains emergency operation (return of the mains supply). Admittedly, will be no switching functions performed (e. g. by DLS module) during the breakdown of controller!

Construction and Function

The inverter SWR 150 gets supplied by two voltage sources, during mains operation from mains and during mains failure from the battery.

The mains voltage gets supplied either via backplane or per module. The second voltage source is a 216V-battery and supplies the SWR150 during mains failure, function test or duration test.


According to the switching mode the output voltage of the inverter is 230V for error-free mains and for mains failure the transformed battery voltage in the form of a sinus-AC voltage!

The frequency of the sinus-AC voltage can be adjusted in the region of 50 to 140 Hz. If luminaires with conventional ballasts are taken for safety lighting this ballast is used as a voltage divider.

Therefore, the luminous flux of the lamp can be changed depending on the adjusted frequency.

150 Hz \approx 25 - 35% luminous flux acc. to type of lamp (s. table)

50 Hz \approx 100% luminous flux

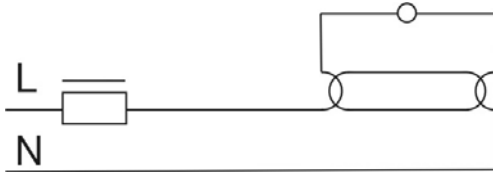

! The SWR 150 gets supplied with a maximum current deviation of +/- 5% factory set. The setting of this current deviation has to be entered in the menu „5.3 Monitor mode“, minimum 15% - acc. to number of types of luminaires and luminous flux. Furthermore the currents have to be measured and saved as written in „5.5 Learn currents“.

Important Note:

During current-value-monitoring please observe that the current input of CCG luminaires (conventional control gear) in battery mode can vary significant caused by ageing. Environmental conditions can also affect the current input of luminaires in battery mode. (e.g. ambient temperature)


In consequence it is necessary to re-calibrate the current-value-monitoring from time to time (s. menu 5.3). Otherwise a failure message is possible.

The **Safety lighting in non-maintained mode** operates for the following:


- 24 V monitoring loop S3 / S4
- DLS / 3PH-bus-module as phase monitor
- Mains failure HVS / UVS
- Function and duration test

The **Safety lighting in maintained mode** operates permanently being supplied by the central power supply until the deep-discharge protection of the battery is achieved, but at least until achieving the rated operating time.

In this switching mode the safety lighting cannot be started.

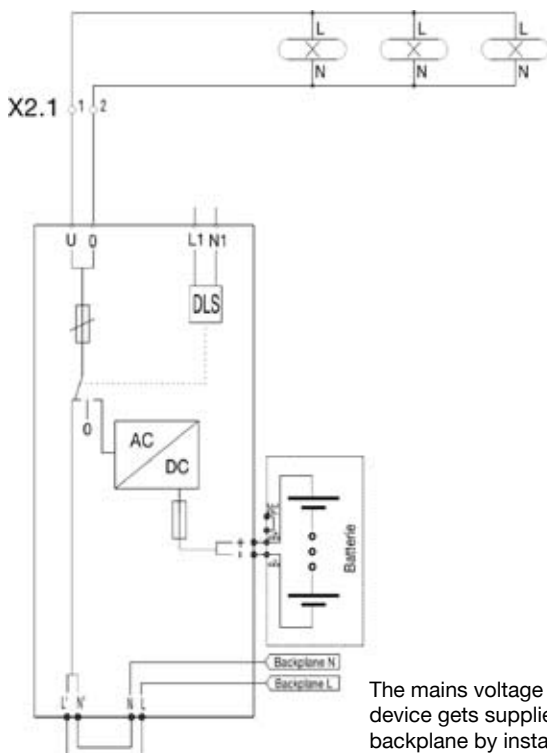

The mains voltage of the device gets supplied via backplane by installed bridge

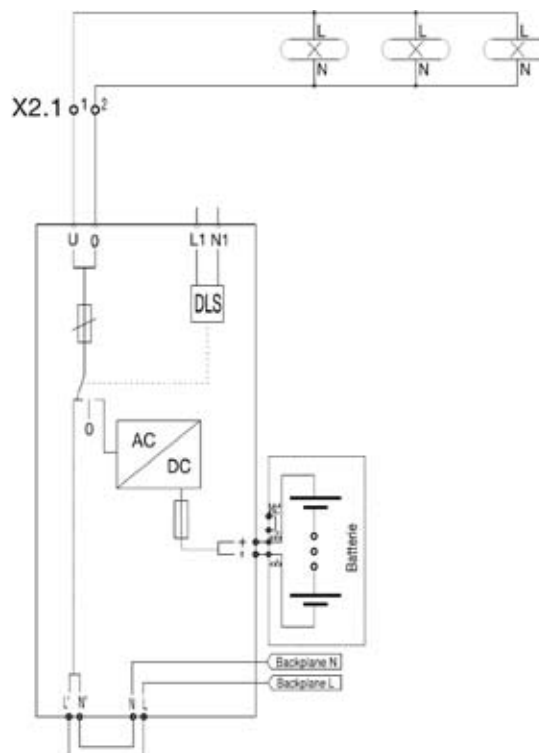


Construction and Function

Maintained light via external power mains supply

In this supply mode the safety lighting is supplied by an external phase in mains.

This switching mode is used particularly for reinstallations with one electric meter per circuit.

If there is a failure of the external power supply the SWR 150 switches to battery operation, automatically. The mains failure gets displayed as „mains failure UV“ at the control unit.

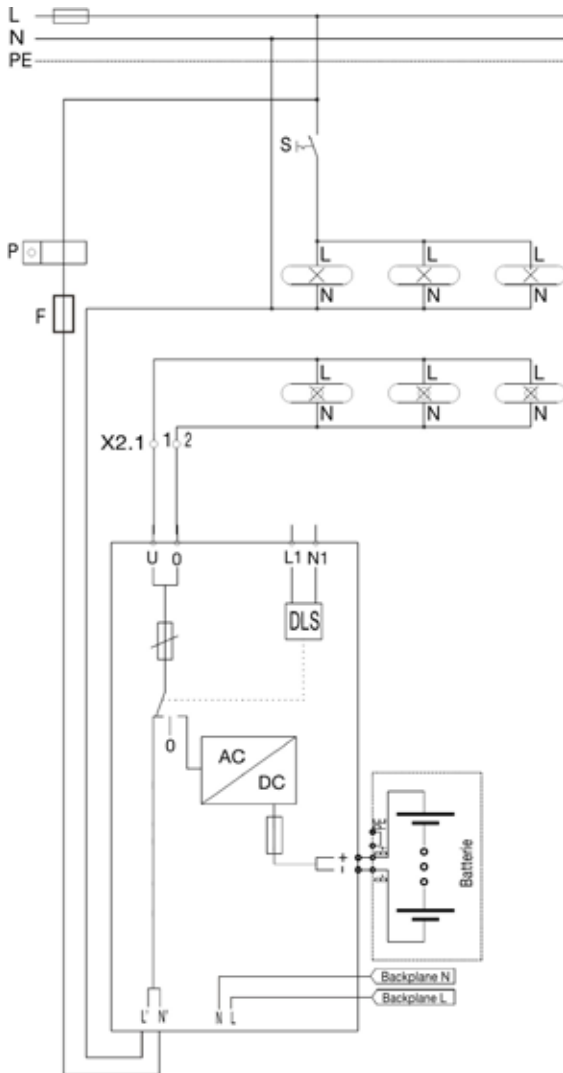


Switched maintained light via maintained light switch monitoring

In this switching mode one light switch of the general lighting is scanned and assigned to the SWR 150 via programming.

The advantage is the free assignment of the light switches to the final circuit.

In dependence of the switch setting the circuit switches on.

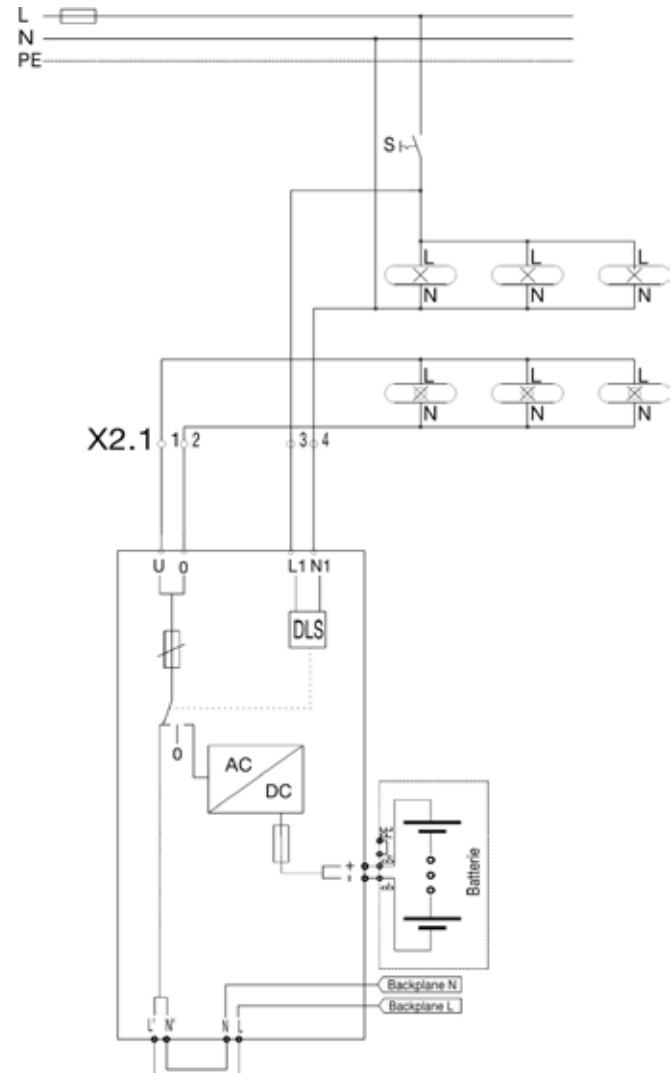


Construction and Function

Switched maintained light via external DLS-bus-module


In this switching mode one light switch of the general lighting is scanned and assigned to the SWR 150 via programming.


An advantage is the free assignment of the light switches to the final circuit.

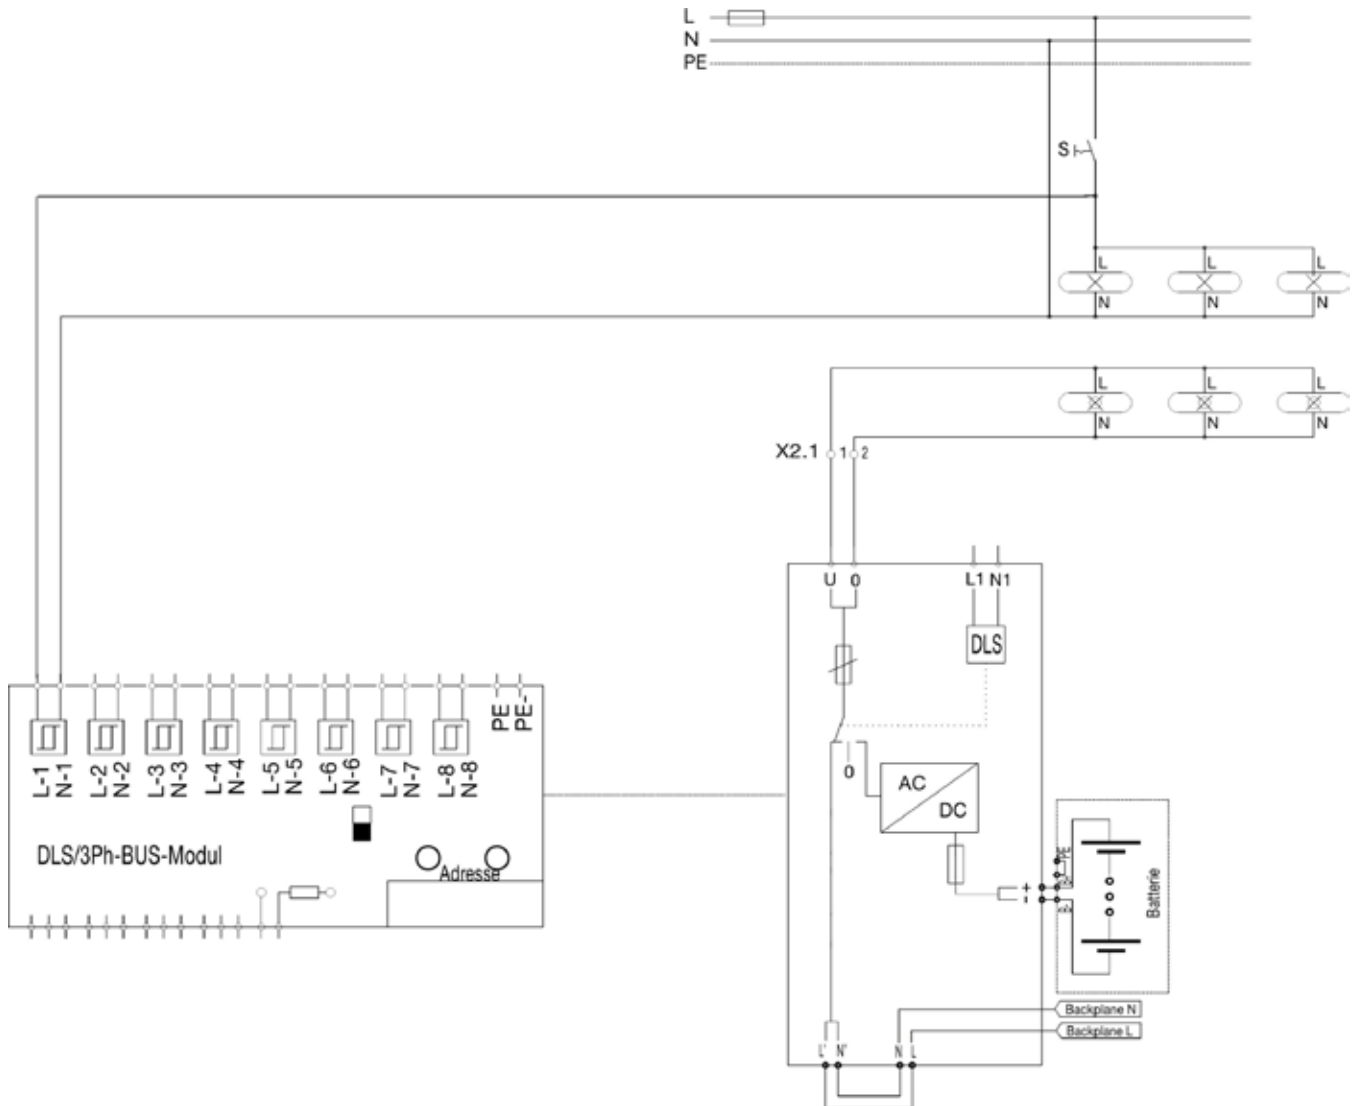


Construction and Function

4.4.5.1 Determination of current consumption value from the battery

| International Description | T26  | | | | | | | | | |
|---|--|------|------|------|------|------|------|------|------|--|
| Socket | G 13 | | | | | | | | | |
| Lamp power [W] | 58 | | | 36 | | | 18 | | | |
| Luminous flux [%] | 86 | 48 | 32 | 100 | 54 | 32 | 100 | 54 | 36 | |
| Switch setting | 1 | 5 | 9 | 0 | 4 | 8 | 0 | 5 | 9 | |
| Number of luminaires / Current consumption from the battery [A] | | | | | | | | | | |
| 1 | 0.55 | 0.37 | 0.35 | 0.47 | 0.31 | 0.30 | 0.37 | 0.26 | 0.26 | |
| 2 | - | - | - | - | 0.47 | 0.36 | - | 0.33 | 0.29 | |
| 3 | - | - | - | - | - | - | - | 0.47 | 0.35 | |
| 4 | - | - | - | - | - | - | - | - | - | |
| 5 | - | - | - | - | - | - | - | - | - | |

| International Description | TC-L  | | | | | | | | | |
|---|---|------|------|------|------|------|------|------|------|--|
| Socket | 2G11 | | | | | | | | | |
| Lamp power [W] | 36 | | | 24 | | | 18 | | | |
| Luminous flux [%] | 100 | 59 | 43 | 100 | 57 | 46 | 100 | 52 | 47 | |
| Switch setting | 0 | 5 | 9 | 0 | 6 | 9 | 0 | 7 | 9 | |
| Number of luminaires / Current consumption from the battery [A] | | | | | | | | | | |
| 1 | 0.47 | 0.30 | 0.29 | 0.38 | 0.27 | 0.27 | 0.39 | 0.26 | 0.25 | |
| 2 | - | 0.43 | 0.33 | - | 0.34 | 0.32 | - | 0.31 | 0.28 | |
| 3 | - | 0.58 | 0.44 | - | 0.44 | 0.37 | - | 0.40 | 0.34 | |
| 4 | - | - | - | - | 0.56 | 0.47 | - | 0.50 | 0.41 | |
| 5 | - | - | - | - | - | - | - | - | - | |

| International Description | TC-D  | | | | | | | | | | | |
|---|--|------|------|------|------|------|------|------|------|------|------|------|
| Socket | G24Q1, G24Q2 | | | | | | | | | | | |
| Lamp power [W] | 26 | | | 18 | | | 13 | | | 10 | | |
| Luminous flux [%] | 100 | 61 | 47 | 100 | 63 | 48 | 100 | 63 | 42 | 100 | 68 | 52 |
| Switch setting | 0 | 5 | 9 | 0 | 5 | 9 | 0 | 4 | 9 | 0 | 4 | 9 |
| Number of luminaires / Current consumption from the battery [A] | | | | | | | | | | | | |
| 1 | 0.36 | 0.27 | 0.27 | 0.30 | 0.24 | 0.23 | 0.26 | 0.21 | 0.21 | 0.25 | 0.21 | 0.20 |
| 2 | - | 0.35 | 0.33 | 0.47 | 0.29 | 0.28 | 0.39 | 0.28 | 0.29 | 0.39 | 0.26 | 0.26 |
| 3 | - | 0.45 | 0.36 | 0.65 | 0.36 | 0.32 | 0.53 | 0.32 | 0.30 | 0.54 | 0.31 | 0.30 |
| 4 | - | 0.57 | 0.43 | - | 0.44 | 0.34 | - | 0.38 | 0.32 | - | 0.38 | 0.32 |
| 5 | - | - | 0.50 | - | 0.53 | 0.40 | - | 0.48 | 0.33 | - | 0.47 | 0.36 |
| 6 | - | - | - | - | 0.60 | 0.44 | - | 0.52 | 0.38 | - | 0.54 | 0.40 |

Construction and Function



Notes:

CEAG Notlichtsysteme GmbH attend on downwards compatibility at the development and further development of the modules for one system family (in this case SKU modules for the system ZB-S) in view of the control software for module, their use and handling.

- Please attend for safety the attributiv technical documentation of the modules by operation of the modules in acutal level of development as well as by operation of modules in older levels of developments.
- In case of doubt please contact the customer service of CEAG Notlichtsysteme GmbH.
- The display at the controllers ST-S implement the active SKU-module of the particular type series; that means a SKU-module appears e. g. during the registration with a correct marking on the LC-Display of the controller.
- Similar fact also apply for superior monitoring system, parameterisation-software and CG-modules with individual monitoring.

4.4.6 Event printer PD3

Description

The event printer PD3 can apply as an option as from controller software version F.

The device can be placed user-defined on a free storage space on the subrack (BGT).By default the storage places 7 and 8 on BGT1 are provided for. Mains supply of the printer and the communication with the controller ST-S occur via the (rearward) contact of the device and the subrack.

When the printer is logged in and activated via the controller software all entries which are stored for the log book are printed on the inserted paper reel.

Configuration

By pressing the Service-Button the protocol printer for the active plug place on the BGT is registered and activated. Further settings occur via control software of the controller ST-S (as from version F) over the menu «Mains settings / Setup printer».

Operation

- Button LF at the front panel of the device for paper feed (Line Feed).
- Replacement of paper reel and the ribbon respectively

To replace the paper reel of the printer or the ribbon the event printer PD3 must be removed from the subrack. You can find detailed information in the operation instruction attached to the device.



Note:

Prior to this, the event printer must be logged out from the cabinet over the controller ST-S!

This happens over the menu «Setup printer» in the menu «Mains settings» with the selection «not installed».

- Activate/deactivate printer

This happens over the menu «Main settings / Setup Printer» of the controller software ST-S.

Indicators

- Light emitting diode «Druckt / busy»

The LED lights up when the printer executes a print procedure.



Construction and Function

4.4.7 Relay module CG IV and CG V

CG IV



Function of relay contacts

| | 11/12 | 21/22 | 31/32 | 41/42 | 51/52 |
|---------------------------------|-----------|-----------|----------------|-----------|-----------|
| Deep-discharge protection | ON | ----- | ----- | ----- | ----- |
| Emergency lighting failure | ----- | ON | ----- | ----- | ----- |
| Charging fault | ----- | ----- | ON | ----- | ----- |
| Battery operation | ----- | ----- | ----- | ON | ----- |
| Mains operation | ----- | ----- | ----- | ----- | ON |
| Switching capacity of contacts: | | | 24V/0,5A AC/DC | | |

CG V



Function of relay contacts

| | 11/12 | 21/22 | 31/32 | 41/42 | 51/52 |
|---------------------------------|-----------|-----------|----------------|-----------|-----------|
| No operation | ON | ----- | ----- | ----- | ----- |
| Failure prior. 1 | ----- | ON | ----- | ----- | ----- |
| Failure prior. 2 | ----- | ----- | ON | ----- | ----- |
| Failure prior. 3 | ----- | ----- | ----- | ON | ----- |
| Emergency mode | ----- | ----- | ----- | ----- | ON |
| Switching capacity of contacts: | | | 24V/0,5A AC/DC | | |

These subassemblies allow the connection of the central battery system to a central control station (ZLT) or building management system (BMS). The most important system states are transmitted via potential-free signalling contacts. There are two input channels for the remote monitoring of the central battery system. A functional test can be initiated via the input channel „FT“ and a continuous operation test (battery test) can be initiated via the input channel „BT“. Eight LEDs indicate the state of the system.

Function of command contacts

| | +24/0V | FT ON | +24/0V | FT Off | +24V/0V | BT ON | +24/0V | BT OFF |
|----------------------------------|--------|-------|--------|--------|---------|-------|--------|--------|
| Function test ON | █ | | | | | | | |
| Function test OFF | | | █ | | | | | |
| Battery duration test ON | | | | | █ | | | |
| Battery duration test OFF | | | | | | | █ | |

The desired function can be activated with an impulse of min. 20ms/24V.
If a FT or BT should be made once again the Function-Duration test must be reset by an impulse.

Construction and Function

4.4.8 External TLS-bus-module

This module monitors the switching status of buttons for up to two separate stairwell illuminations and transmits the particular switching status via a RS-485-busline to the controller of the system ZB-S.


In mains and emergency operation the circuits of stairlight and emergency light will be operated according to the settings for the controller ST-S! In addition to this, a supply of the switcher glow lamps of the connected buttons in mains and emergency operations occurs.

Technical Data


- Mains supply for the modules
 - Device: 24 V DC (19 ... max. 30 V)
 - Cable type: 4 x 2 x 0,8 mm IY(ST)Y, Twisted Pair screened (minimum standard).
 - Current consumption: max 50 mA, depending on the number of the connected glow lamps for stairwell-light switcher
- Bus connection
 - RS 485 - Rated current: $U_n = 24$ V DC
 - Cable type: 4 x 2 x 0,8 mm IY(ST)Y, Twisted Pair screened (minimum standard).
 - Connecting terminals A, B, SE
- 2 switching outputs
 - Rated current $U_n = 230$ V - Switched current: max. 10 A (120 A/ms)

Application

- Assembly in the subdistribution board of the monitored circuits due to the low laying effort for the illumination circuits (compare «Mounting and Connection of external bus modules»).
- Assembly in the control cabinet ZB-S (US-S) due to reasons for simplification of the maintenance (compare «Mounting and Connection of external bus modules»).
- Application-environment
 - Protection class / -category: IP20 / I Ambient temp.: -10 ... +40°C

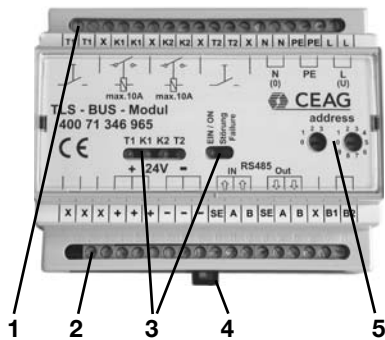

- Pos. 1: top connection terminal
- Pos. 2: lower connection terminal
- Pos. 3: Display-LEDs
- LED K1 resp. K2 lights up when the circuit is connected.
- LED T1 and T2 light up as long as the corresponding button-input is switched.
- LED Ein/ON lights up when 24 V DC supply voltage is present and the device is activated over the controller.
- LED STÖRUNG/FAILURE lights up when a fault function was registered by the module
- Pos. 4: Locking device button for a module attached to a 35 mm-DIN mountingrail
- Pos. 5: Bus address

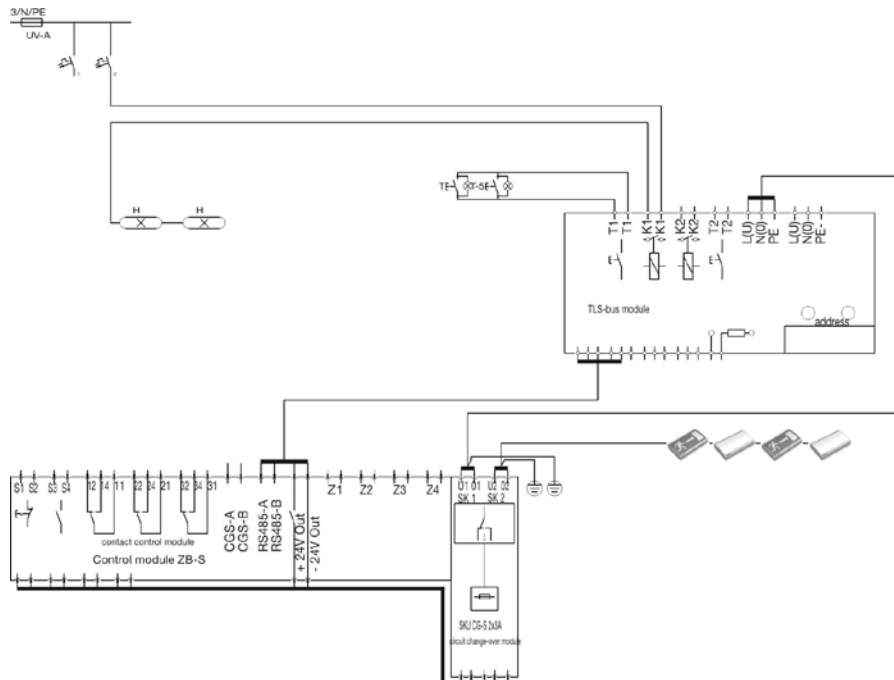

Construction and Function

4.4.8 External DLS/3Ph-bus-module and ext. DLS/3Ph-bus-module inverse

This electronic monitoring module acts as a (light-)switch scan and/or for monitoring of the phases of a mains power supply (e. g. in a subdistribution board):

Luminaires of the general lighting and the safety lighting are switched in mains operation in accordance with the switch position and the settings for the controller ST-S.

In emergency operation (e. g. after a message about a breakdown of monitored phases of the mains power supply) the circuits of the safety lighting will be operated according to the settings of the controller ST-S.

DLS/3Ph-bus-modules are available in two performances which only differ in view of the switching performance (inverting of the DLS circuits)!

Technical Data

- Mains supply for the modules
 - Device: 24 V DC (19 ... max. 30 V)
 - Cable type: 4 x 2 x 0.8 mm IY(ST)Y, Twisted Pair screened (minimal standard).
 - Current consumption: 20 mA (15 ... 25 mA) with 8 connected circuits
- Bus connection
 - RS 485
 - Rated voltage $U_n = 24$ V DC
 - Cable type: 4 x 2 x 0.8 mm IY(ST)Y, Twisted Pair screened (minimum requirements).
 - Connection terminal A, B, SE
- Input circuits
 - up to 8 potential-free disconnected
 - Rated voltage $U_n = 230$ V
- Switching performance of DLS-circuits DLS/3Ph/ Switching performance of DLS circuits DLS/3Ph inverse**

| | |
|---------------------------|---------------------------|
| U < 138 V = OFF | U < 138 V = ON |
| U > 195 V = ON | U > 195 V = OFF |
- Switching performance of 3Ph circuits
(same for DLS/3Ph module and DLS/3Ph module inverse)
 - U < 138 V = OFF
 - U > 195 V = ON

Application:

Two operation modes are available:

- (pure) DLS-mode
- (mixed) DLS/3Ph-mode
With a dispatcher (pos. 5) the operation mode can be chosen.
- Assembly in the subdistribution board
of the monitored circuits due to the low laying effort for the illumination circuits (compare «Mounting and connection of external bus modules»).
- Assembly in the control cabinet ZB-S (US-S)
due to reasons for simplification of the maintenance (compare «Mounting and connection of external modules»).
- Application-environment

| | |
|-------------------------------|---------------|
| Protection class / -category: | IP20 / I |
| Ambient temp.: | -10 ... +40°C |



Notes:

- Please observe the regulations for bus-technology and screening on the following pages.
- For planning and application of the modules we advice to observe the technical documentations attached to the modules and the catalogues of CEAG Notlichtsysteme GmbH!
- Optically, the inverse and the non-inverse DLS/3Ph-module only differ in the printed description and the item number!
- Due to break or short-circuit of the RS485-bus line all connected luminaires will be switched on!

Construction and Function


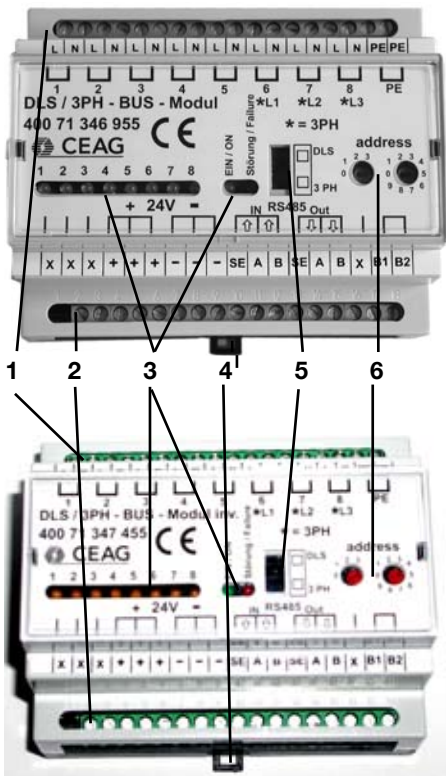


Fig.: DLS/3Ph-bus-module

- Pos. 1: top connection terminal for the (monitoring) inputs
- Pos. 2: lower connection terminal
- Pos. 3: Display-LEDs
- LED 1 ... 8 lights up when circuit is closed, resp. the monitored supply voltage is present
- LED Ein/On lights up when 24 V DC supply voltage is present
- LED STÖRUNG/FAILURE lights up when a fault function was registered by the module
- Pos. 4: Locking device button for a module attached to a 35 mm-DIN-mountingrail (for demounting pull down the button and demount it)
- Pos. 5: Changeover switch for the module operation mode DLS or DLS/3PH
- Pos. 6: Bus address

Fig.: DLS/3Ph-bus-module inverse

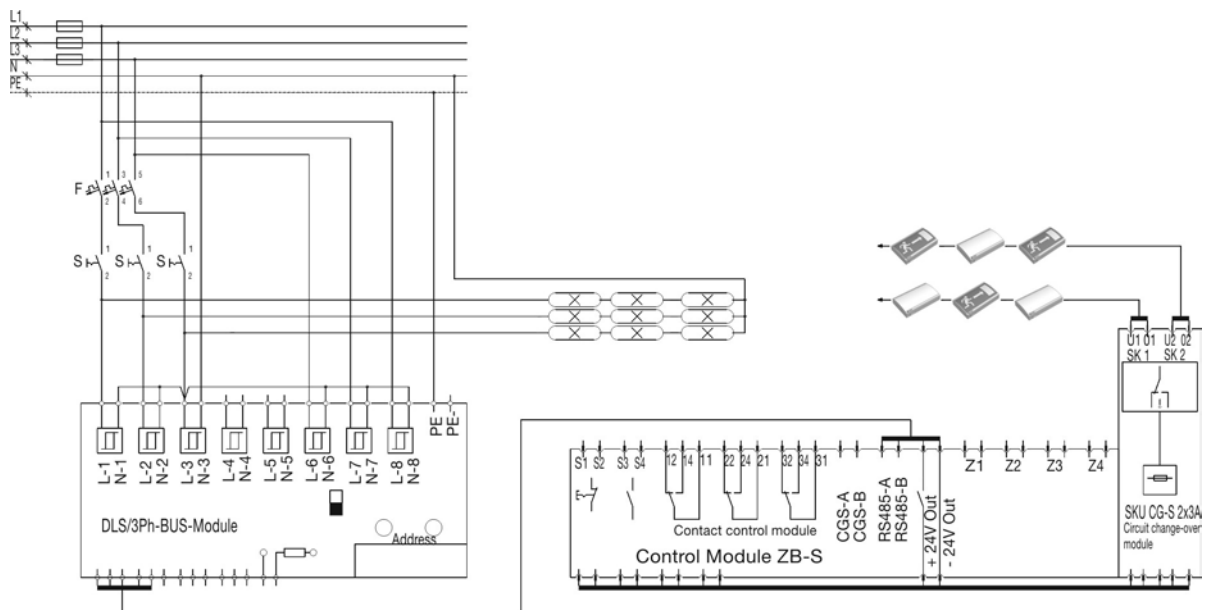

Construction and Function

4.4.10 Webmodule

The webmodule ZB-S is conform to EN 60950-1 and developed, manufactured and tested according to DIN EN ISO 9001.

Technical Data:

| | |
|----------------------|---|
| Supply voltage: | 24 V DC |
| Power consumption: | < 1.5W |
| Connection: | RJ 45 |
| Insulation class: | III, Degree of protection acc. to EN 60529: IP 20 |
| Ambient temperature: | -10°C ... +55°C |
| Connection terminal: | 1.5 mm ² |
| Weight: | 0.1 kg |
| Dimensions: | 90 x 35 x 58 mm |



Scope of application


The webmodule ZB-S is used for visualisation and monitoring of a central battery system ZB-S via local ethernet (LAN) with a customary WEB-browser (e. g. Internet Explorer™). Integrated mail-client for a comfortable and event based failure notification for up to 5 email addressees. Password protected access accounts capable of parametrisation.

Mounting

Pay attention to temperatures outside the permitted range during operation. The permissible ambient temperature may not exceed 55°C.

The module was designed for DIN rail mounting (2TE) to be only mounted in the cabinet. An external mounting outside the ZB-S cabinet is not permitted.

Electrical connection

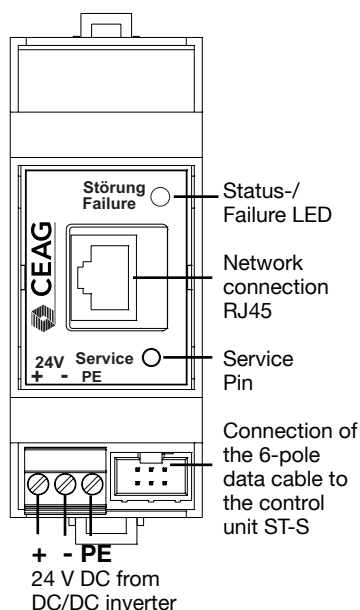


Construction and Function

4.4.11 Bus-Technology according to RS 485 or CG-S-Bus

An RS485 bus is used for data communication with external bus modules (DLS/3PH oder TLS).

A connection to a BMS can be done with the CG-S bus.

The conductors of the RS485 bus line must be connected to the connection points RS485 A, RS485 B, +24V OUT and -24V OUT of the ZB-S connection terminals.

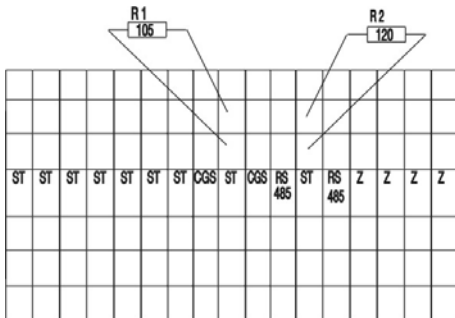

Notes:

- A parallel switching of data cables is not allowed and does not lead to an extension of the acceptable cable length.
- For power supply of the modules conductors within one screening can be switched in parallel (for calculation compare the catalogue of the system ZB-S).




ATTENTION!


Bus Topology: linear, double terminated (no spur lines allowed). The absolutely essential terminating resistors are included in the control cabinet.

- Cable type (minimum requirement): IY(ST)Y 4 x 2 x 0.8 mm (Twisted Pair, screened) – the screen of the cables must be connected to the SE-clamps of each module and it is allowed to be earthed in the control cabinet ZB-S.
- The conductor cross-section needed for the 24V bus voltage will depend on the line length and the number of bus modules ($U_{min} = 19\text{ V DC}$, refer to the operating instructions for the DLS/3Ph-Bus-Module and TLS-Bus-Module)
- Only one pair of conductors is allowed to be used as data line within the screen - it is not acceptable to bundle several data cables within one screened cable!

CG-S-Bus

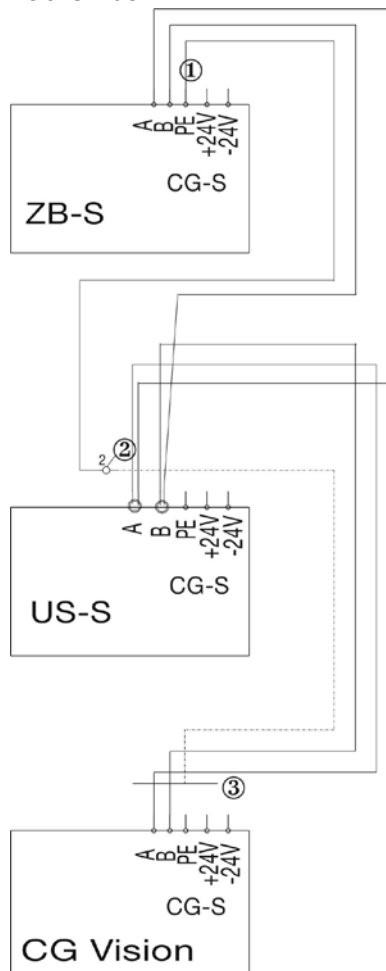

RS485-Bus

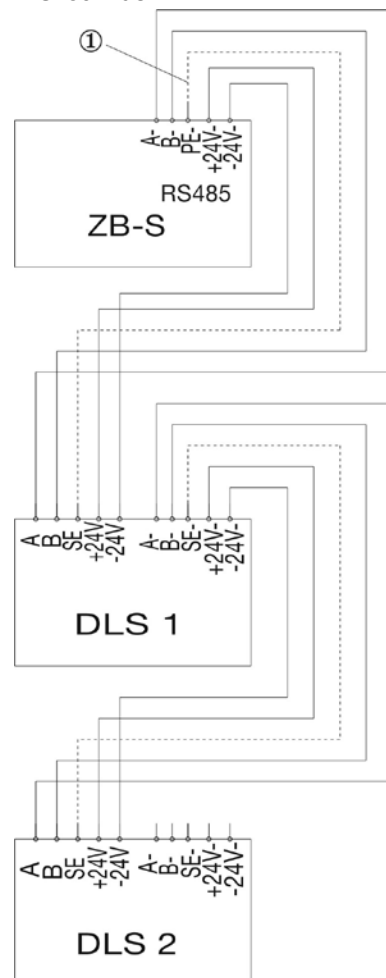

Construction and Function

4.4.12 Batteries for emergency power supply

CEAG offers battery cabinet in different dimensions and mountings. In this case low-maintenance batteries according to EUROBAT come into operation with an expected service life of over 10 years by professional handling. According to their construction and performance comply this from CEAG enabled batteries with the standards of german building laws for emergency systems (EN 50272 und EN 60896-2).

Please observe strictly our operation instructions for battery cabinets 400 71 860 035 and for battery racks 400 71 860 036.

CEAG-standard battery cabinets

| | |
|----------------------------------|------------------------------|
| Range of capacity from | 23.3 to 354 Ah ¹⁾ |
| Rated voltage | 216 V DC |
| Dimensions (acc. to performance) | different |
| Weight(acc. to performance) | different |


CEAG-compact battery cabinets

| | |
|----------------------------------|----------------|
| Range of capacity from | 5.5 to 89.4 Ah |
| Rated voltage | 216 V DC |
| Dimensions (acc. to performance) | different |
| Weight(acc. to performance) | different |

CEAG-battery racks

| | |
|----------------------------------|------------------------------|
| Range of capacity | 23.3 to 354 Ah ¹⁾ |
| Rated voltage | 216 V DC |
| Dimensions (acc. to performance) | different |
| Weight(acc. to performance) | different |

Charging Diagrams

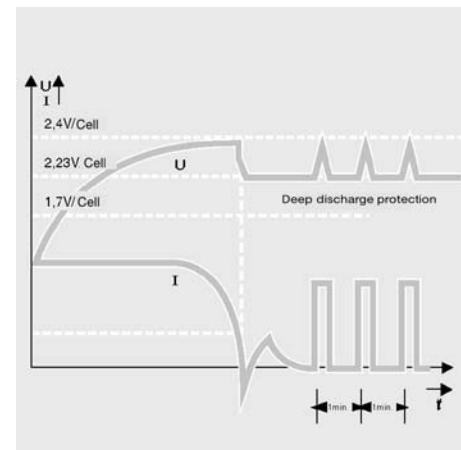

¹⁾ Battery capacities of more than 126 Ah are reachable with parallel switching of several battery sets.

Battery charging equipment

The low-maintenance batteries supplied by CEAG are charged gently depending on temperatures as shown in the I/U charge diagram opposite. Depending on the charge in the batteries, boost charging is activated (by the charging boosters) allowing the batteries to be charged up rapidly without exceeding the gassing voltage. The patented charge monitoring process continuously checks the charge and immediately signals faults such as battery open circuit, a faulty charging module or a high-resistance cell.

Note: Under normal charging conditions no gas escapes. Refilling of distilled water is not possible as the batteries are closed. Higher temperature leads to a reduction of service life. (compare operation temperatures of batteries on the previous page).



ATTENTION!

- The batteries for standby operation should not be stored for more than three months without charging!
- If the mains supply to the ZB-S central battery system is interrupted for more than three days, then the battery circuits must be isolated (by removing the battery fuse). This should be done by qualified electricians (see „Fuse Testing and Replacement“).

Construction and Function

4.5 Label of ZB-S

Find the label of the system inside the door.



The following technical data is given on the label of the system:


| COOPER Safety | | CEAG Notlichtsysteme GmbH | | CEAG | |
|--|-------------------|--|----------------------------------|-------|--|
| | | Made in Germany | | ESTAB | |
| Type: XXX - 40071XXXXXX | | | | | |
| Bemessungsspannung: Rated voltage: | xxxV/N/PE 50/60Hz | Schutzart Protection category | IP 21 | | |
| Bemessungsstrom: Max. Rated current: | xx A | Sicherung Fuse | xx A | | |
| Zul. Umgebungstemp. Max ambient temperature | -5 °C / +35 °C | Lst.-NR | XXX | | |
| Auftr.-Nr./ Pos. Order number / Pos | | | | | |
| / | | | | | |
| Prüfung Check | | Funktionstest operating test | | | |
| <input type="checkbox"/> Visuelle Überprüfung Visual control | | <input type="checkbox"/> Steuerteil Control unit | Neuron ID 00 00 00 00 00 00 | | |
| <input type="checkbox"/> Hochspannungstest High voltage test | | <input type="checkbox"/> Ladeteil Charger | | | |
| <input type="checkbox"/> Schutzleitertest Protection earth connection point | | <input type="checkbox"/> Optionen Options | | | |
| Erhaltungsladespannung bei: Float charge voltage at: | 20 °C | <input type="checkbox"/> 245,1 V | <input type="checkbox"/> 247,8 V | | |
| Datum Date | Prüfer Tester | | | | |
| MM.DD.JJJJ | XXXX | | | | |
| CE | | Zur Verwendung in Anlagen nach EN 50171 geeignet. Modified for use in electrical installations acc. to EN 50171 | | | |

The following technical data is given on the label of the battery:

| COOPER Safety | | CEAG Notlichtsysteme GmbH | | CEAG | |
|---|--|--|-----------|-----------------|----|
| | | Made in Germany | | ESTAB | |
| Batterietyp XXXXXX | Bemessungskapazität gem. EN60896-2 (C10; 1,8V/Z; +20°C) | XX Ah | | | |
| Anzahl Zellen number cells | XXX | Baureihe Line | XXXXXX | Menge pieces | XX |
| Bemessungsspannung Rated voltage | 216V DC | Bemessungsstrom: Max. Rated current: | xx A | | |
| Bemessungsleistung Rated power | xx KW | Nennbetriebsdauer Rated duration time | xx h | | |
| Bem.-Temperatur Rated temperature | 20°C | Min. Spannung nach xx h Min. voltage after | 183,6V DC | | |
| Achtung! Es dürfen nur auslaufsichere Batterien verwendet werden! Please use only leak proof batteries! | | | | | |
| Vor Inbetriebnahme der Batterien muss sichergestellt werden, dass die eingestellte Erhaltungsladespannung mit den Herstellerangaben übereinstimmen! Before start-up of the batteries must be guaranteed that the float charge voltage is according to manufactures specification! | | | | | |
| CE | | Zur Verwendung in Anlagen nach EN 50171 geeignet. Modified for use in electrical installations acc. to EN 50171 | | | |

Construction and Function


4.6 Example of Installation

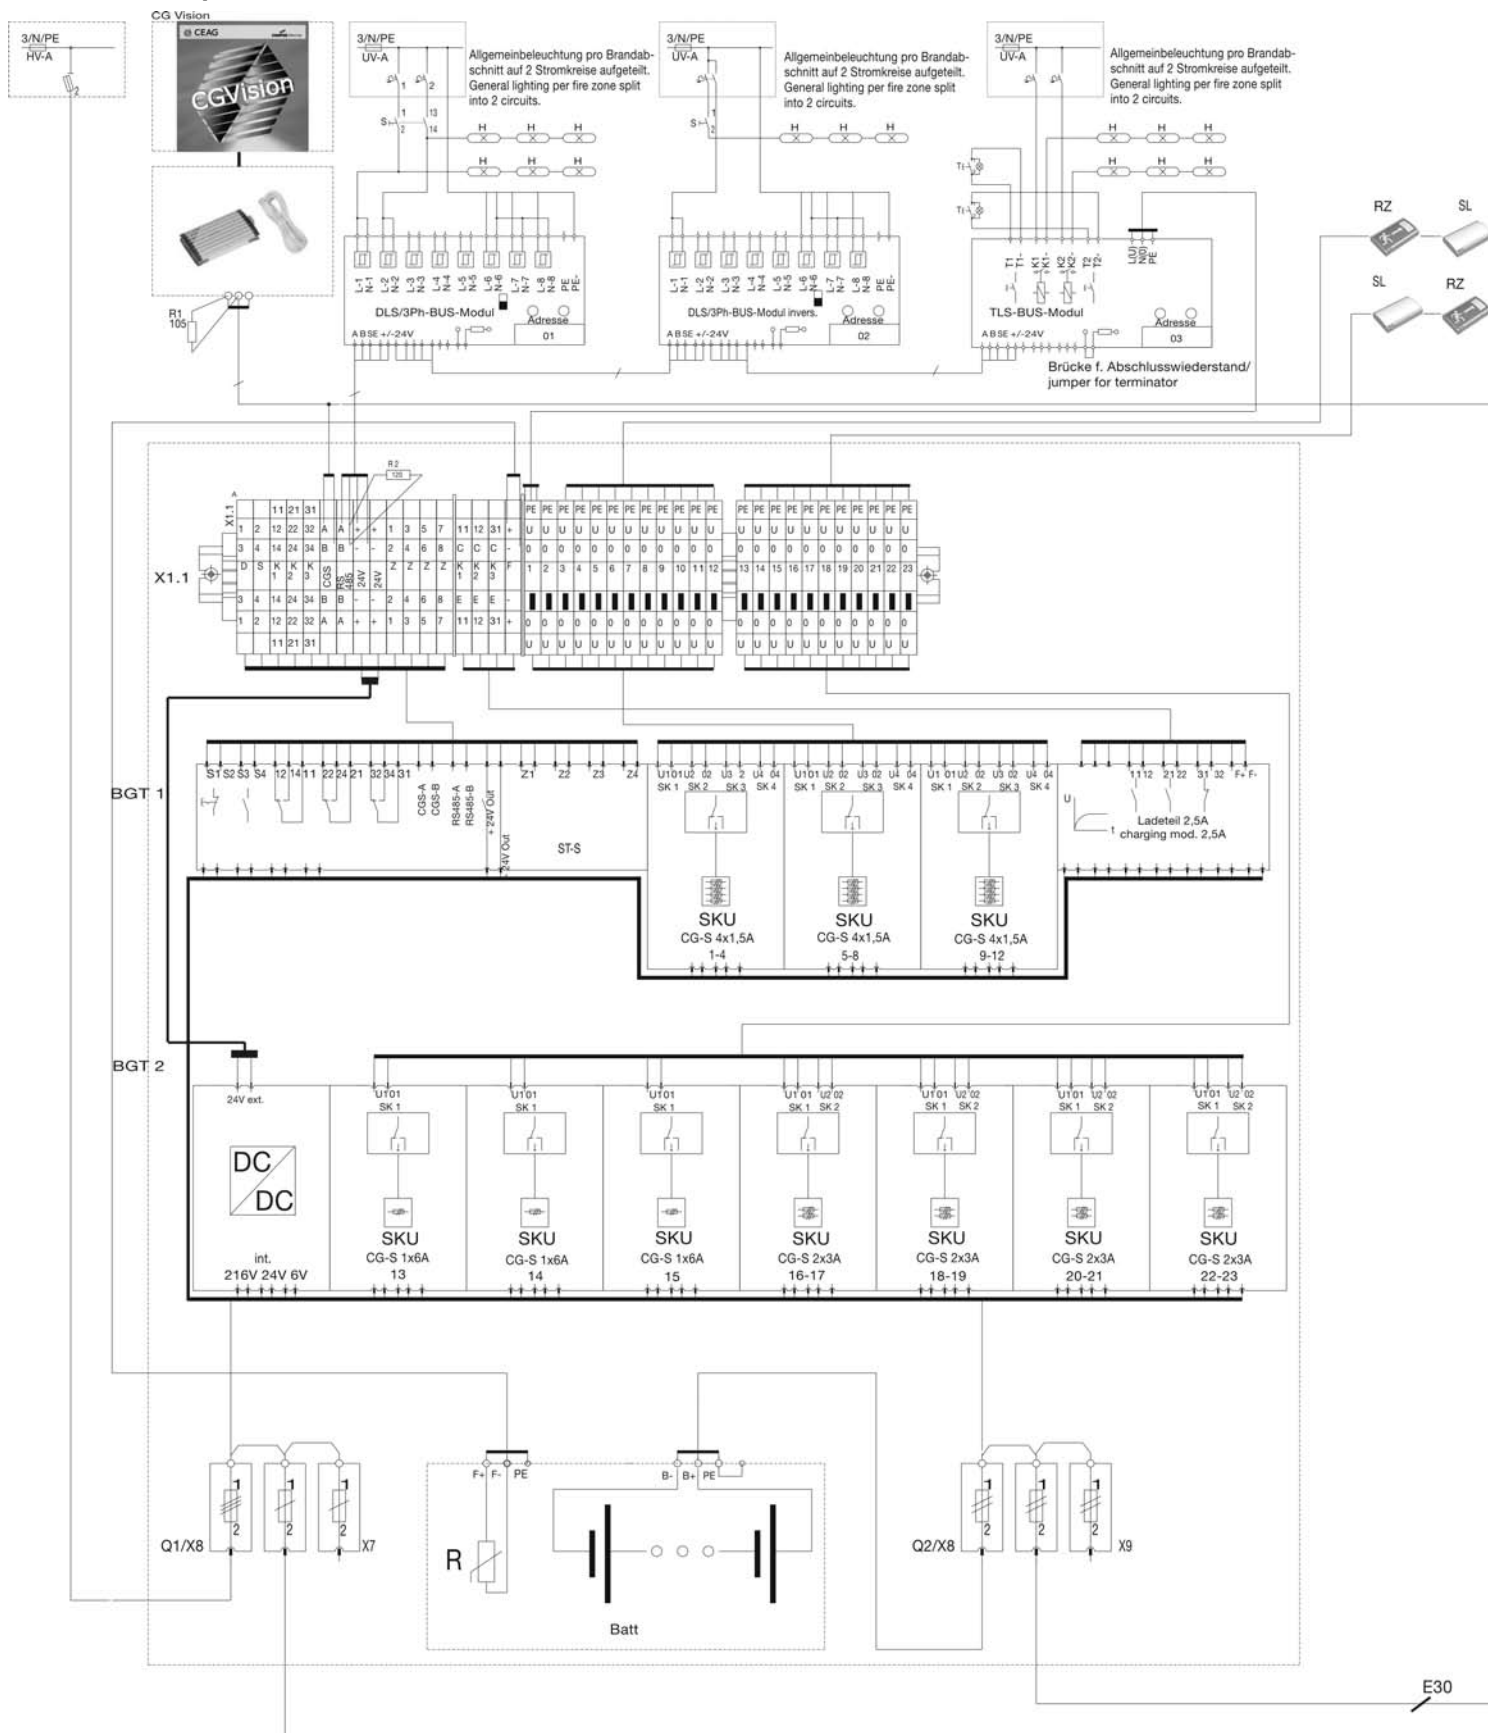

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Construction and Function

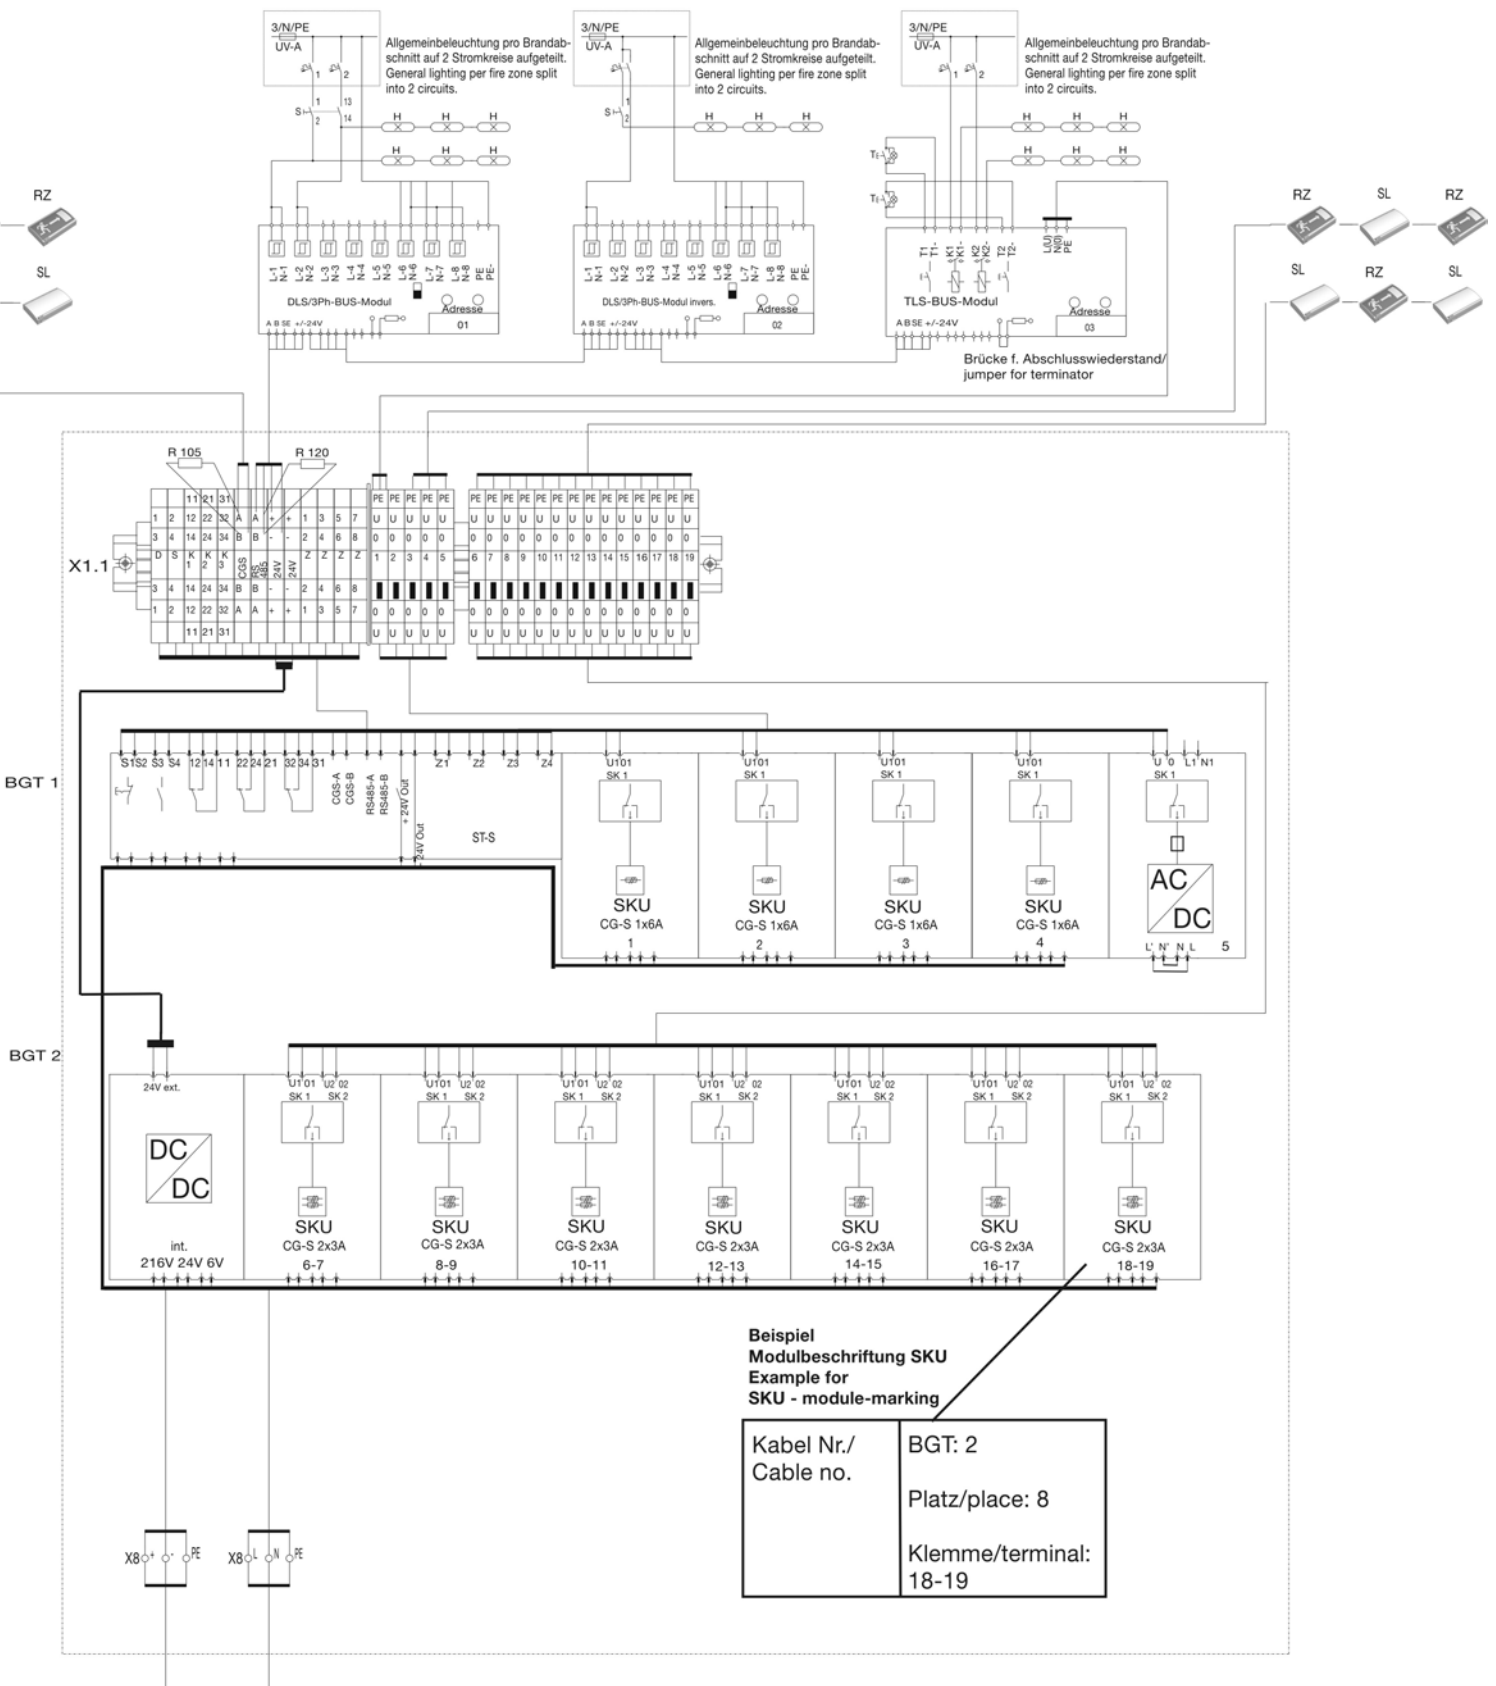

Transport, Packaging and Storage

5. Transport, Packaging and Storage

5.1 Safety Notes



WARNING! Risk of Injury!

There is a risk of injury when transporting or loading due to falling parts.



ATTENTION! Damage to Property!

Batteries will be destroyed or damaged by improper transport.

The following safety notes have to be observed:

- Never lift loads over person's head.
- Always move battery with great care and attention.
- Only use lifting accessories and hoisting devices with enough loading capacity.
- Always handle and store the ZB-S system upright (see markings and „do not tilt“ sign on the pack)
- Avoid ingress of dust and moisture during handling.
- Ensure that all transport routes
 - are clear (sufficient width and headroom for all transport movements),
 - provide enough room for persons to take evasive action if loads tip over or slip,
 - have sufficient loadbearing capacity (for the load, transport packaging and handling equipment)
 - could not overstrain the used transport equipment in regard of increase and constitution of underground.
- Use only
 - handling equipment (e. g. pallet trucks, fork trucks, etc.)
 - slinging equipment (lifting beams, chains, ropes, etc.)
 - and securing equipment (chocks, timbers, guide/tensioning/securing ropes, etc.)that are in technically perfect condition and of adequate loadbearing capacity.
- Follow all information shown on the transport packaging and/or on the device/control cabinet relating to handling, transport position, slinging points.
- The equipment must be handled by persons familiar with the appropriate procedures and signals and able to carry out the handling operations properly and with due regard to safety and hazard procedures.

Batteries

For battery handling and storage please follow the battery manufacturer's directions and the instructions about the battery cabinets..

5.2 Transport inspection

Check delivery on receipt for completeness and for transport damages, immediately. If external damage is detected do not accept the delivery, except under protest.

5.3 Packaging

If no return - agreement exists for packing material separate it according to type and size for further use.



ATTENTION!

Packing material has to be recycled in an environmentally friendly way and according to the local provisions governing disposal. If necessary, commission special recycling company.

Observe notes for handling printed on the packing material!

Transport, Packaging and Storage

5.4 Storage

Keep packages closed up to mounting and observe the external marked arrangement and storage notes.

Store packages under the following conditions:

- Not to be stored outside
- Keep dry and dust-free
- The storage location should be clean and tidy
- The time of storage should be as short as possible (FIFO - method)
- It is forbidden to stack one pallet/system above the other

Attend for batteries:

- Storage for batteries for emergency lighting should not exceed 3 months without charging!
- If the mains supply to the ZB-S central battery system is interrupted for more than three days, then the battery circuits must be isolated (by removing the battery fuse). This should be done by qualified electricians.



NOTES!

Please observe additionally the operation instructions for battery cabinets and/or battery racks.

Installation

6. Installation

6.1 Safety Notes



WARNING! Risk of Injury!

Improper mounting and installation can cause serious personal injury and/or material damage. This work must only be performed by authorised, skilled and adequate personnel who have received instructions providing information on the device and in observance of the local safety regulations.

- Ensure there is enough free moving space.
- Ensure orderliness and cleanliness at the working place. Loose tools lying around are dangerous!
- Assure a sufficient cooling of the system!
- Observe the environmental conditions regarding the insulation class and degree of protection (acc. to the protection against a contact of conducting parts and ingress of dust, impurity or moisture)
- Ensure that the cable length in an emergency light circuit to the last luminaire in the circuit does not exceed the maximum permitted cable length.
- Special regulations for ESF-E30:**
Enclosures must be fitted to the masonry horizontally. The masonry must be designed for a circuit integrity of at least 30 minutes. The circuit integrity of the masonry must not be impaired by assembly.

The modular layout of the items of equipment illustrated in these assembly and operating instructions may differ from that supplied. Particular features of custom designs are described in the project documents that must be ordered separately.



WARNING!

- Work on the general supply network and the running of load, signal and control cables and connection of the battery power supply must be carried out by qualified electricians with special knowledge of the legal and technical basics for the assembly and operation of emergency lighting systems. This takes also place for initial commissioning or re-commissioning.
- Take all necessary measures to ensure occupational health and safety!
As well as compliance with general trade standards and procedures, this specifically includes complying with chapters 1+2 of these instructions.



NOTES!

- All connecting cables must be laid according to the relevant electrical engineering codes of practice and standards (e. g. standard series DIN VDE 100).
- You must also comply with all standards and directives of the country in which the system is installed and operated.
- Secure all the cable entry and exit openings in the control cabinet with the supplied M-type glands or rubber grommets to prevent damage to the cables and ingress of moisture.
- Attention!**
Using RCD's in the mains lead to protect against indirect contact acc. to VDE 100 part 410, please observe the following: Fault activations can be caused by different actions:
 - Activation caused by installation failures.
 - Activation caused by external actions.
 - Activation caused by capacitive leakages.When designing and executing, it is important to use the right RCD. Please attend to the following when using RCDs in the network supplies of systems:

Capacitive leakage:

Outgoing line lengths must be included in to the selection of RCDs.

Installation

Example 1:

ZB-S 10C3 with 17 circuits a 100m line length and a RCD with 30mA release current in the incoming mains.

| |
|---|
| RCD In = 10mA max. line length = 500m |
| RCD In = 15mA max. line length = 750m |
| RCD In = 30mA max. line length = 1500m |
| RCD In = 300mA max. line length = 15000m |

The total line length exceeds a value of 1500m and can cause a RCD by line-bound capacitive leakages.

Maximum number of user

In general the isolation resistance is 0.5M at mains voltage of 230V. That means a leakage of <math><0.5\text{mA}</math> () per user is permissible.

Example 2:

ZB-S 10C3 with 17 circuits and 10 luminaires per circuit and a RCD with 30mA in the incoming mains.

$17 \times 10 \times 0.5\text{mA} = 85\text{mA}$ leakage

The addition of the single leakages of the connected user to the RCD exceeds a value of 30mA and can cause the RCD.

- Only ballasts and luminaires that are rated for an operating voltage of 230 V AC (50 Hz) and 220 V DC may be connected to the outputs for the emergency lighting/final circuits of the ZB-S system.
- Many operations require the system to be isolated first for safety reasons (or to protect components). Because the system switches over to battery operation when the mains supply is isolated, there are certain procedures which must be followed - these procedures are described below.
- The controller software and its last switched status are stored in a nonvolatile memory.

DANGER!

Improper use of the batteries or battery-powered parts of the plant can cause risk of injury or danger of death from high current or arcs that can occur briefly on battery discharge. The instructions given in this manual for connecting/disconnecting the batteries must be strictly adhered to (see «Connecting the Battery Power Supply»).

Ensure that the battery banks are connected to the correct poles (battery cabinets/racks)!

ATTENTION!

- Short circuits and incorrect polarity may damage the battery bank or installation of a ZB-S or US-S system.
- Provide proper ESD-protection when working on electrical equipment (e. g. connecting control or signal cables) or electronic equipment (e. g. fitting or removing modules in the control cabinet)!
- Never switch the mains or battery supply on or off under load. In both of these cases the system must first be isolated at the ST-S controller (or remote switch if installed).

6.2 Assembly


Requirements to the place of assembly:

- Assembly on a level surface of sufficient loadbearing capacity.
- The site must be horizontally levelled.
- The baseplate of the cabinet provides holes for floor anchoring or bolting to a base.

6.3 Installation

- Isolate all connecting cables (mains and battery power supply) and lock them out (e. g. by removing all fuses and proper securing of the mains supply distribution board and the battery bank using warning signage and/or locks).
- Run the connecting cables (mains and battery supply) to the control cabinet position with an adequate length allowance (e. g. for installation in the cable trunking inside the cabinet). This work must be carried out properly according to the relevant standards and codes of practice.
- Secure all cable entries with the M-type glands provided.
- Run all connecting cables in the cable trunking provided in the control cabinet.

Installation

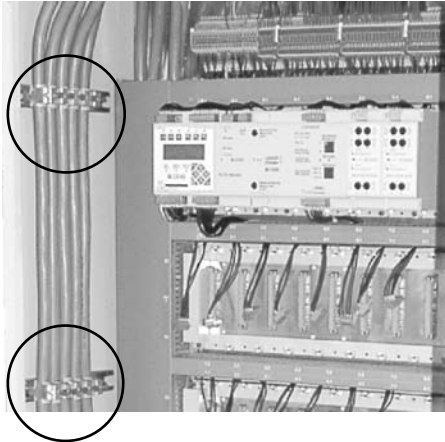

NOTES!

This figure shows the outgoing cables for the mains and battery supply of slave stations mounted on C-section rails on the cabinet wall (part no. 400 71 347 126) using appropriate cleats. Leave no connecting cables temporarily loose and unsecured!

Subsequent additions or modifications to the component layout are possible; such work on the internal layout of the cabinet is not described in this manual however as is must be carried out by specially trained CEAG engineers!

The installation and connection of the general lighting system is not described in this manual. Lighting equipment must be assembled, run and connected according to the relevant electrical engineering standards and codes of practice. You must also comply with all standards and directives of the country in which the system is installed and operated.

6.4 Connection to mains

6.4.1 Connection to mains supply of a ZB-S station

ZB-S systems are supplied from the mains and from the batteries in a battery rank (battery cabinet or rack).

Load disconnecter (1) (terminal box and fuse box for the mains supply)


Outgoing distributor (2)

Cabinet distributor (3)


N-terminal block (4)

PE-terminal block (5)

Connections shown with load disconnecter cover removed
Connection cables for the busbar (mains) at the back (6),
mains supply feeders for the ZB-S station (7),
outgoing feeders for the mains supply of US-S substations (8)

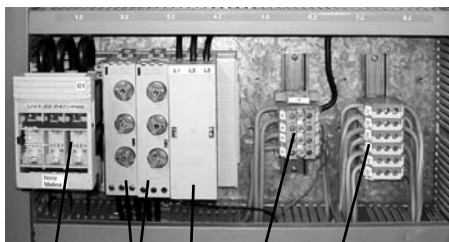

1 2 3 4 5

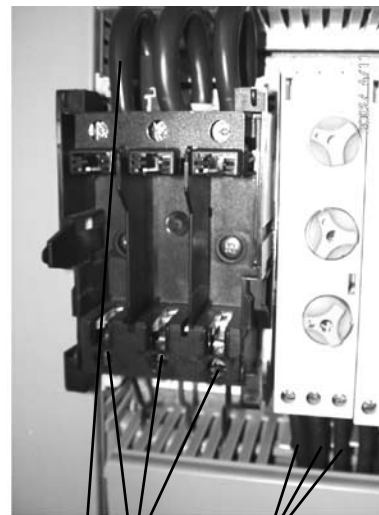

6 7 8

Connecting the cables for the mains supply to the ZB-S control cabinet:

- Ensure that the system and feeders are isolated and locked out!
- Connect the earth conductors to the PE terminal block (pos. 5).
- Connect the neutral conductors to the N-terminal block (pos. 4).
- Connect the load conductors to the L-terminals (pos. 7) on the disconnecter



For single-phase operation, a load-current cable only is connected, and the input terminals (pos. 7) on the disconnecter are jumpered.

Installation


6.4.2 Connection to mains of substations US-S

US-S substations are supplied from the power supply of their associated ZB-S system (pos. 2). An outgoing distributor (part no. 400 71 347 160) can be used for three single-phase supplies or one three-phase supply.

Connecting the cables for the mains supply to a US-S substation:

- Ensure that the system and feeders are isolated and locked out!
- Run the feeders to/in the ZB-S control cabinet and in its trunking (pos. 8) and to/in the control cabinet of the US-S substation.
- Connect the earth conductor (PE-conductor) to the terminal block (pos. 5)
- Connect the neutral conductor to the terminal block (pos. 4)
- Connect the L conductors to the terminals on the outgoing feeder (pos. 2)


The mains supply is connected in the control cabinet of the US-S substations as described in section 6.3.1.


-  To assist operations, outgoing distributors can be pulled forward off the busbar when the lock on the upper enclosure wall is released. Once the outgoing circuits have been connected, the outgoing distributor can be pushed back in position on the busbar with slight pressure and locked in place.

6.5 Connection to battery power supply

Refer to the battery manufacturer's datasheets that are enclosed with the CEAG battery banks!

Comply with the statutory requirements and regulations ruling at the site of the emergency lighting system!

-  **NOTES:**
 - CEAG battery cabinets are supplied as standard with a cabinet terminal block to which the connecting cables (+/-) for the battery power supply and a temperature sensor (F+/F-) are connected.

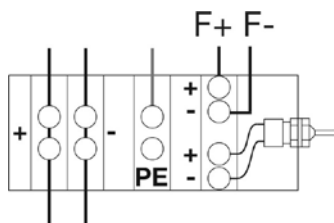

The PE-connection protects live parts of the battery cabinet (refer to «Installation instructions for Battery cabinets and Battery racks»).

The connecting cables to the terminals of the interconnected batteries are not supplied with battery racks or cabinets. The connection terminal block is not supplied with battery racks.

- CEAG recommend the installation of the battery distribution board with disconnector and fuses for the battery circuit (see «Installation instructions for Battery distribution board») that allows safe isolation of the terminals for the connecting leads that run to the ZB-S.
- The battery connection cables (for the ZB-S cabinet and its US-S substations) must be run with ground fault and short circuit protection according to DIN VDE 0100 T520!
- The size of these cables must be rated to meet the anticipated currents flowing to the connected loads.
- Only one temperature sensor (F+ / F-) may be connected to the charging module LT.1 of the ZB-S cabinet. Its lead must be run separately to the battery bank. This can be a 2-core lead with a cross-section of 0.5 mm² for lengths < 50m.



WARNING!

The battery power supply is a nominal 216V DC! Improper handling can lead to life-threatening shocks or burns (arcing)!

- Ensure that the battery banks are connected with the correct polarity.**
- Turn off all connected loads first («Disable system») to prevent arcing when the battery circuit is disconnected (or connection)!**



NOTE!

Sequence for making the connections:

- Connect the cable labelled „+“ to the positive terminal of the battery bank.
- Connect the cable labelled „-“ to the negative terminal of the battery bank.

The battery supply is disconnected in reverse order of connection.

Installation

6.5.1 Connection to battery power supply for a ZB-S station

The connection cables for the battery power supply are used to supply the modules in the ZB-S (or US-S) cabinet and the emergency lighting circuits (switched across the SKU modules). They are also used to charge the connected battery banks controlled by the charging module.

Only when the controller is disabled (at the ZB-S central battery system and its US-S substations) can the connections of the battery power supply be safely isolated with the load disconnecter (Batt). The charge boosters and all circuits of the SKUs are not off-load until the mains supply is isolated.

Remember that the connecting cables of the battery bank (battery cabinet/rack) may still be live!




NOTES:

- The connections (+ / -) are accessible when the moving part of the load disconnecter (Batt) is removed (remove occurs analogical).

Connecting the cables for the battery supply to the ZB-S control cabinet:

- Ensure that the system and feeders are isolated and locked out!
- Connect the positive conductor to the positive terminal on the load disconnecter.
- Connect the negative conductor to the negative terminal on the load disconnecter.

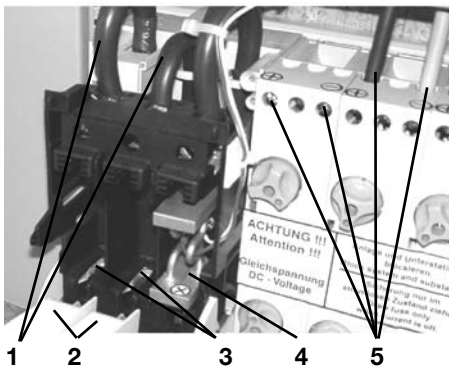

Open load disconnecter (Batt) showing

Pos. 1: Connection cables for the busbars (Batt) at the back

Pos. 2: Fuses (Batt)

Pos. 3: Connections (+ / -) for the battery supply

Pos. 4: Shunt for battery current measurements

Pos. 5: Terminal (+ / -) and outgoing circuits for the battery supply of US-S substations


6.5.2. Connecting the Battery supply of a US-S substation

US-S substations are supplied from the power supply of their associated ZB-S system. An outgoing distributor (part no. 400 71 347 161) can be used for a battery power supply. The central terminal and related fuses are not used.



NOTES:

To assist operations, outgoing distributors can be pulled forward off the busbar when the lock on the lower housing is released. Once the outgoing circuits have been connected, the outgoing distributor can be pushed back in position on the busbar with slight pressure and locked in place.

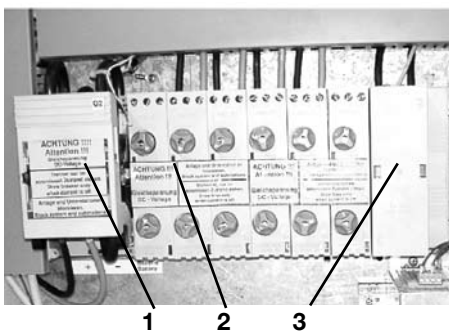

Location of the load disconnecter (1) for the battery supply with Batterie-Stromversorgung

Pos. 2: Outgoing distributors (Batt) and

Pos. 3: Cabinet distributor (Batt)

Comply with all warning information!

Connecting the cables for the battery supply to a US-S substation:

- Ensure that the system and feeders are isolated and locked out!
- Run the feeders to/in the ZB-S control cabinet and in its trunking and to/in the control cabinet of the US-S substation.
- Connect the positive conductor to the positive terminal on the outgoing distributor.
- Connect the negative conductor to the negative terminal on the outgoing distributor.


Installation

6.6 Connection of temperature sensor

A temperature sensor (to monitor the temperature of the battery bank) of the ZB-S central battery system is mandatory for emergency lighting systems with a central battery.

The connection to the charging module is made in the cabinet at terminals F+ and F- on the 3-tier installation terminals with tension spring-connection.

Run the temperature monitoring cable between the battery bank and the ZB-S cabinet and connect it in the cabinet to its 3-tier installation terminal with tension spring-connection.

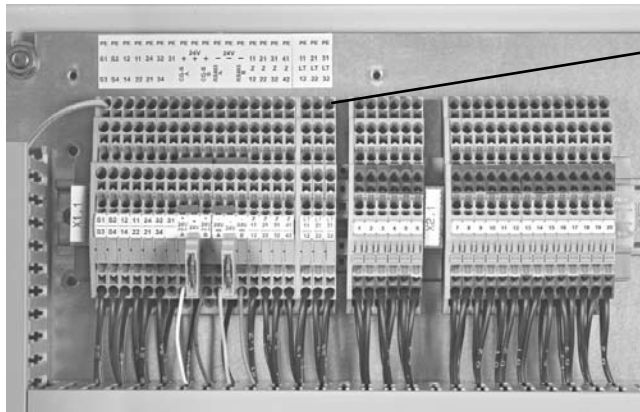

Location of the terminal block for connecting a temperature sensor in a ZB-S control cabinet

X1.1

Attention!

For the connection of external temperature sensor an insulated cable must be used.

Connect the screen with the screen-quick-connector one-sided at the protective conductor terminal (s. 9.1.1).

6.7 Connection and installation of internal modules


All modules for the ZB-S (US-S) cabinet are plugged on a subrack. These sockets contact the module at its mounting position; locking pins secure the module's position. The mains or battery power required for the modules is also supplied via these sockets.

For easy fitting and removal, these modules are connected to plug-in screw terminal blocks which can be pushed on or pulled off at the front of the modules. The connecting cables of these screw terminals are connected to the terminal strip at the top of the control cabinet (matching is by number codes on the subrack and on the terminal block).

External incoming and outgoing circuits are connected via this row of terminal blocks in the top of the cabinet.

NOTES:

- The circuit numbers used in the displays of the ST-S controller and the displayed switch outputs of the SKUs are assigned by the choice of slots on the subracks.
- To ensure that replaced SKUs function correctly under the controller they must first be identified, activated and their parameters set up with controller software.

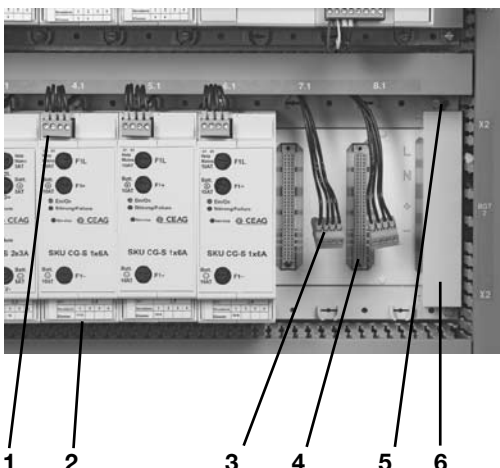

Subrack 1 (with modules fitted) and subrack 2 (with 8 free slots)

- Pos. 1: plugin terminal block with the module connections (fitted)
- Pos. 2: lower fixing (pivoted locking pin) for the SKU module
- Pos. 3: plugin terminal block with the module connections (removed)
- Pos. 4: socket for modules
- Pos. 5: upper retaining screw for the cover (pos.6)
- Pos. 6: cover for terminals (L, N, + and - and other socket connections) of subrack 2



ATTENTION!

Never fit or remove SKU modules in the ON condition! Deactivate an SKU module at the ST-S controller before removing or re-fitting it, e. g. for testing. For dismantling or modification work the controller must be disabled to prevent activated circuits from being turned on when an SKU module is fitted.

Installation

6.8 Connection and installation of external modules

External bus modules and devices are designed as multiple built-in devices for mounting in a cabinet/sub-distribution board. They are mounted on a 35mm rail according to DIN EN 50 022.

With light pressure the module gets locked in position.



NOTES:

- The bus cables A/B and their screening must also be connected to the system's terminals. Please attend to the information regarding bus-technology and screening!
- Install/activate the necessary terminating resistor in the cabinet and at the last device of a bus line (bridge B1-B2).
- Set the address for the module. Avoid assigning the same address more than once as this causes stop-pages.
- For further information please refer to the technical documentation of the module!

6.8.1 DLS/3Ph-Bus-Module


If possible these modules should be installed direct in the sub-distribution boards which supply the associated circuits (for the general lighting or stairwell lighting). This is advisable because it means that only one bus cable needs to be run (to RS 485 connection on the ST-S control module) between the external modules and the related controller (in the ZB-S cabinet or its US-S substations). The cables for the 24V supply for the bus modules can be laid with a 4-core cable together with the bus.

The 24V supply and the bus cable can now be looped through inside the sub-distribution board on the devices.

In many cases it is desirable to all controlgear to be concentrated in a single control cabinet (e. g. for the central operation and monitoring of all switching elements and circuits). For such requirements CEAG can supply a pre-assembly for fitting DIN mounting rails in the cabinet (ZB-S or US-S) to which external modules can then be mounted (accessory part no. 400 71 347 125). With this type of assembly a cable must be run between the cabinet (ZB-S or US-S) and the distribution board for the mains supply (of the monitored circuits) for each command.

You will find the block connection diagram and further technical information on the pages 41/42.

The terminal assignment will be found on the device. The terminals can accept cables up to 2.5mm² cross-section.

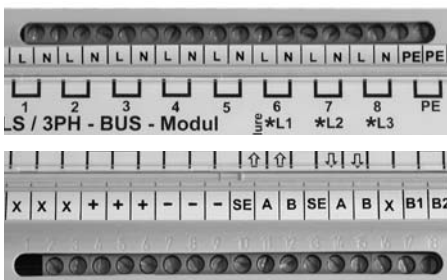

Terminal assignment on the DLS/3Ph-bus-module (top/bottom)
X = terminal not assigned


Installation

6.8.2 TLS-Bus-Module

If possible these modules should be installed direct in the sub-distribution boards which supply the associated circuits (for the general lighting or stairwell lighting).

They can be mounted in the ZB-S or US-S cabinets. Otherwise the same criteria for selecting the installation position apply as for the DLS/3Ph bus modules.

You will find the block connection diagram and further technical information on page 40!

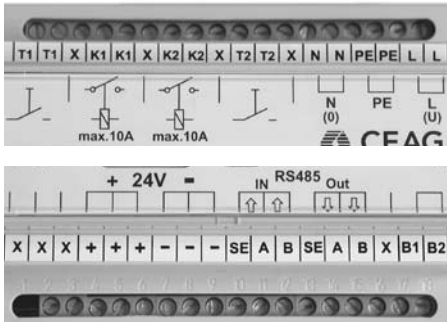


Terminal assignment on the TLS bus module (top/bottom) X = terminal not assigned

The supply for the glow lamps in the light pushbuttons is connected to the upper terminal strip on the module, terminals N (O) and L (U); the PE terminal is also connected to the PE terminal of the SKU!


6.8.3 CEAG 3-phase monitors with 24V current loop

The connection in the ZB-S (US-S) control cabinet is made at the 3-tier terminal block (S3 and S4) for external connections.

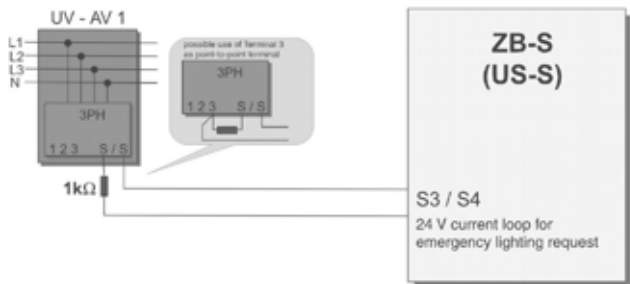

Schematic of a CEAG 3-phase monitor with a 24V control loop for emergency lighting request with differential loop monitoring for short circuit and open circuit detection

Differential monitoring: System (maintained light) powers on immediately in the event of a short or open circuit
Phase monitor switch closed (1 kOhm): Normal system operation:

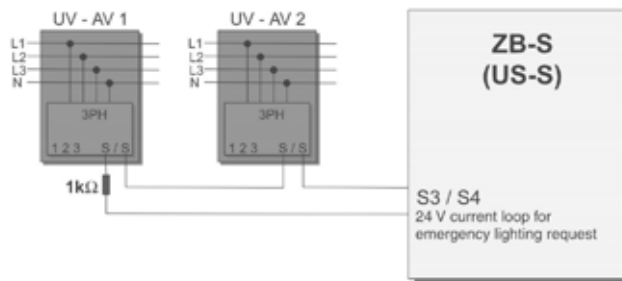

Schematic showing the connection of several CEAG 3-phase monitors

CEAG 3-phase monitor



NOTES:

- Where several sub-distribution boards must be monitored, additional devices must be connected and wired with the other devices in a 24V loop.
- If a 3-phase monitor is to monitor fewer than 3 phases, then the other inputs on the monitor must be jumpered.

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology



Installation

6.8.4 Completing Assembly

- Refer to the plans and drawings for installation on site and check all of the circuits that have been made.
- Check that all connections are tight.
- Clear away all unused cables, insulation and fixing materials and all tools and packaging.
- The revision marking on the final circuits should be done.

Commissioning and Other Work

7. Commissioning and other work

7.1 Safety Notes



WARNING! Risk of Injury!

Never switch the mains or battery supply on or off under load (that means when final circuits are switched on).

For battery supply obtain: never disconnect or connect cables to the battery bank under load and never open or close the fuse switch for battery supply in the cabinet under load.

7.2 Checking all connections

Before switching on the emergency lighting system:

- check that the complete system is isolated and lock it out. Do not restore the supply until all work has been completed.
- examine the condition of all cables and connections by reference to the drawings and plans for the emergency lighting system, and check that the installation work complies with the relevant standards and codes of engineering practice.
- check that all connections and screw fastenings are tight.
- check all cable glands for tightness and seal quality.

7.3 Voltage measurements

- Measurements of supply voltages and measurements on the final circuits may only be carried out by qualified electricians!
- Be aware of the particular hazards when carrying out measurements on multiple-phase power supplies!
- Only use instruments with adequate voltage and current strength!
- All measurements within internal installations may only be carried out by CEAG service engineers!

7.4 Insulation Testing

- Check that the complete system is isolated and lock it out. Do not restore the supply until all work has been completed.



DANGER!


Insulation tests may only be carried out between the PE conductor and every phase conductor L1, L2 and L3 as well as between the PE conductor and the neutral conductor N. Do not test circuits containing electronic equipment, the neutral conductor and the phase conductor must be connected while measuring.

Test voltage: max. 500V DC, Test current 1 mA!

Use only measuring devices which are able to meet the demands of DIN VDE 0413.

- Disconnect the connecting cables for the mains and battery supply.
- Link the connections L and N of the switch cabinet at the terminals of the mains supply or outgoing distributors.
- Carry out the insulation test as shown in below figure for
 - the connections of the mains supply (L/N) against PE for the ZB-S cabinet and its outgoing circuits
 - and similarly for the US-S substations.
- At the ZB-S (US-S) switch cabinet, link connections U1/O1 etc. at the output terminals of the final circuits of the cabinet and test the insulation for the final circuits U1/O1 or U2/O2 etc. against PE.
- On completion of the insulation tests, remove the links across terminals L/N (on the mains supply and/or outgoing circuits) and U1/O1 etc. at the terminal of the final circuits.
- Reconnect all disconnected cables and check the PE connected on the cabinet door.

Commissioning and Other Work

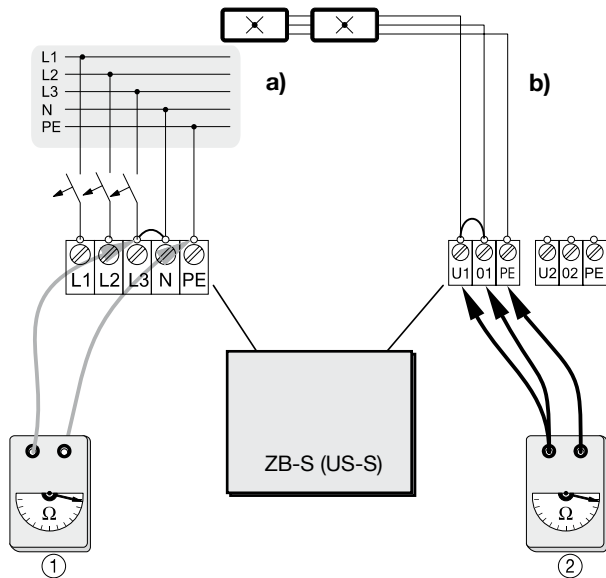

a: Insulation test on the power supply (mains)

b: Insulation test on final circuits



NOTE:

Linking L / N and U1 / 01 (...) will protect active components of the electronics in the ZB-S (US-S) cabinet and of the luminaires (ballasts) from possible destruction!

7.5 Checking / replacing of fuses

The fuses for the mains and the battery power supply are located in the related load disconnectors and at the battery bank respectively.

The final circuits are also fused in the SKU modules, and individual circuits are fused in other modules.



WARNING!

Do not open the load disconnector until the system (ZB-S switch cabinet and any US-S substations) has been isolated.



ATTENTION!

Never remove the fuses from the SKU modules or the charging module LT.1 under load!

7.5.1 Checking the fuses of the mains and/or battery power supply

First disable the controller of the ZB-S switch cabinet and of the US-S substations (if any).


- Open the load disconnector for the mains and/or battery supply.
- In the ZB-S cabinet and US-S substations (if any) ensure that all fuses in the load disconnector for the mains and battery power supply
 - meet the required technical specifications
 - are correctly fitted
 - and are intact.

7.5.2 Checking the fuses on the charging module LT.1

To ensure that these modules are deenergised, the controller of the ZB-S cabinet and any US-S substations must be disabled and isolated.

- Release the cover by rotating it briefly counter-clockwise against a light spring pressure. Removing the fuse cover breaks the contact with the circuits inside the device; the fuse can now be withdrawn to the front.
- Check that all fuses
 - meet the required technical specifications (labels on the front of the device next to the appropriate fuse cover),
 - are correctly fitted and intact.
- Fit the (replacement) fuse into its holder and press its cover into the locked position where it is locked with a brief clockwise rotation.

Commissioning and Other Work

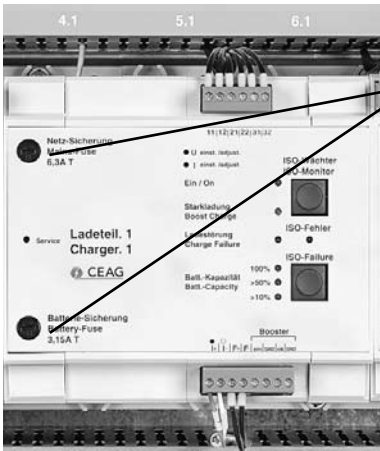


Location of the fuses on charging module LT.1

7.5.2.1 The Setting of the Tripple Charge-Voltage

When central battery systems are supplied without battery or the type of battery is unknown the tripple charge-voltage is set up with the factory default of 247,8V at +20°C (means 2.29V/Z). According to the type of battery the tripple charge-voltage must be fitted at face.

Adjust the tripple charge-voltage as follows:

1. Isolate battery circuit

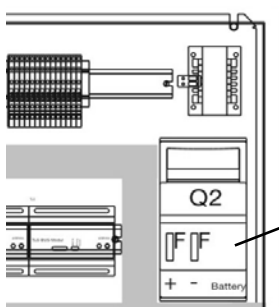


Open battery disconnector unencumbered!

2. Switch on mains.

3. Adjustment of the tripple charge-voltage may **not** occur during boost charge period.

To ensure that the boost charge period is not active wait until the LED „Boost charge“ on the charging unit, 2.5A, is off! This procedure can last for some minutes.

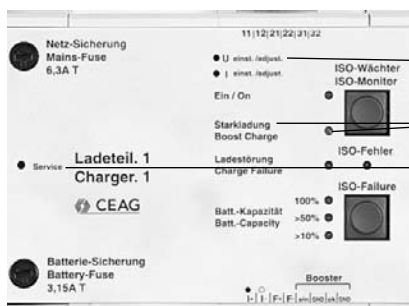

Potentiometer

LED „Boost charge“

Service Pin

4. Connect a voltmeter in parallel to the charging circuit.

5. Push the service pin at the charging unit and read the ambient temperature at the control module ST-S.



Attention!

The temperature sensor must be connected!


Commissioning and Other Work

- Depending on the ambient temperature set up the tripple charge-voltage at the potentiometer „U adjust“ according to the specifications of the manufacturer.

7.5.3 Checking the fuses of SKU modules

For safety reasons, all SKU modules should first be isolated by disabling the controller of the appropriate ZB-S (US-S).

To check or replace the fuses, proceed as described in section 7.5.2.

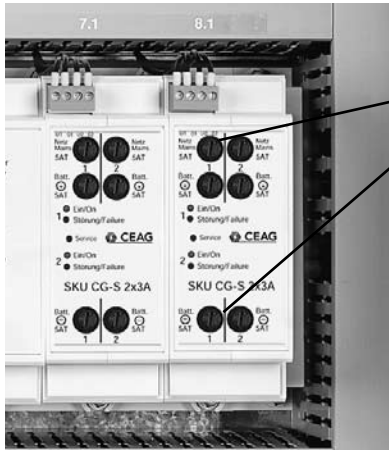

Location of the fuses on an SKU module, example of an SKU module CG-S 2x3A



Attention!

Only fuses approved by CEAG Notlichtsysteme GmbH are permitted to use.

Commissioning and Other Work

7.6 Checking and replacing internal modules

Before checking or replacing the internal modules the emergency lighting system must be disconnected. Therefore observe:

- Block the system before isolating the emergency lighting system at the distribution board and/or battery supply. This is done with the <<Block/release device>> option in menu 2 <<Block, reset>> in the controller software.
- Now isolate the battery power supply first and then isolate the mains supply.
- Lock out the isolations while work on the system is in progress or while the system is in an unsafe condition.



NOTE!

If a battery bank supplies a number of systems then all systems must be isolated first! Start by isolating at the lower levels of the US-S substations before you isolate the ZB-S central battery system.

- Before you reconnect the supply at the terminals of the battery bank for the battery supply, power on the mains supply and ensure that the system is disabled. Only now should you power on the battery supply at the battery bank.

For mounting or dismounting of modules please see chapter 6.7 „Connection and installation of internal modules“ and all warning notices!



NOTE!

On the SKU-modules you will find a Service push button that can be used for initial commissioning and for testing purposes. When it is pressed, the controller software displays addresses and characteristics of the selected module directly on the LC display of the controller.

7.7 Checking and replacing external modules

For mounting and dismounting of a module please see chapter 6.8 „Connection and installation of external modules“. Please observe the following:

- Set the address for the module. Avoid assigning the same address more than once as this causes stoppages.
- To ensure that replaced external modules function correctly under the controller they must first be identified, activated and their parameters set up with the controller software.

On the SKU-modules you will find a Service push button that can be used for initial commissioning and for testing purposes. When it is pressed, the controller software displays addresses and characteristics of the selected module directly on the LC display of the controller.

7.8 Powering up the system

The following sequence of operations assumes that the system (ZB-S plus US-S substations) has first been isolated and locked out. It is also assumed that the parameter setup of the controller software or its switch settings have not been changed in the meantime!

- Switch on the mains supply to the ZB-S switch cabinet and its US-S substations at the load disconnecter.
- Ensure that the controller of the ZB-S cabinet and any subsystems (US-S) are blocked. Secure this plant condition against unauthorised action!
- Switch on the battery supply to the ZB-S switch cabinet and its US-S substations at the load disconnecter.
- Switch on the controllers with <<Release device>> menu option.

Operating

8. Operating

8.1 Safety Notes



WARNING! Risk of Injury!

Improper mounting and installation can cause serious personal injury and/or material damage. This work must only be performed by authorised, skilled and adequate personnel who have received instructions providing information on the device and in observance of the local safety regulations.

Before work begins:

- check its completeness and technical correctness,
- ensure there is enough free moving space.

During operation:

- When failures arise first of all switch system off and protect against reengagement.

When working on and with the device it is necessary to wear:

- Close fitting protective clothes (low tensile strength, no wide arms, no rings and further jewelry, etc.)
- Safety boots which protect against falling parts and against slipping on non-anti-slip floor.

8.2 General information about operating

A ZB-S or US-S system is operated at several different levels. First, a distinction must be made between:

- operating and monitoring the system** during operation (test mode or normal operation).
- and **setting up the system** with the requirements (parameter settings for the ST-S controller) for the emergency lighting circuits and the user-assignable functions and function keys of the control module.

Operating and monitoring the system during operation can be done with

- the buttons and displays/LED indicators on the modules in the switch cabinet (ST-S, DC/DC converter, charging module, installed SKUs),
- remote indicators or CG controller
- F3 module or with a building services management system (BMS).

Setting up the system (and changing its parameter settings) can be done

- directly on the control module in the ZB-S (or US-S) switch cabinet
- or with a memory card using a standard PC running under a CEAG configuration software for the ZB-S system.



NOTE!

The following descriptions are not covered by this manual as this requires detailed instructions within the technical documentation for these systems:

- Operating and monitoring the system with an F3 module, CG controller or building management system (BMS)
- Software-aided system setup using a memory card

Operating and monitoring the system, in the scope specified above, during operation (test mode or normal operation) requires a knowledge of

- the operation of the ST-S control module in the switch cabinet,
 - the key functions and displays/LEDs on the other modules in the switch cabinet of a ZB-S or US-S system, and
 - the use of certain hardware components (checking and replacing fuses or checking and replacing modules).
- Otherwise please refer to the technical documentation for these components.

Operating

8.3 Controls and displays on the modules

All of the modules in the switch cabinet have LEDs that indicate the operational status of the assigned functions..

Red LEDs indicate that the assigned function is in fault or that a malfunction has occurred. If no LED lights up on a module then module's supply may be interrupted.



NOTE!

The ST-S control module has numerous diagnostic functions and operating menus for analysing and remedying malfunctions. You should use and analyse these options before attempting work on the fuses of modules or final circuits. The following instructions must be followed without fail!



WARNING!

Work on the electrical installation may only be carried out by qualified electricians with training in the lighting and emergency lighting system. When replacing fuses, use only the type and rating as indicated on the module or in its technical documentation.

For example, there is a danger of an arc or electric shock if a battery supply disconnecter is opened before the system (and slave stations, if fitted) has been properly disabled and isolated from the supply network. There is also danger of electric shock or short circuit when working on final circuits that have not been isolated first.

You should also bear in mind the possible effects on the lighting in parts of the building when you interrupt the supply to final circuits.


8.3.1 Control module ST-S

The operation of the control module is described in detail in the following pages.

8.3.2 DC/DC Converter

This module supplies the electronic controlgear in the switch cabinet with the necessary operating voltages (24V and 6 V DC). The supply is independent of the mains supply via the batteries. The LEDs light up when the voltage supply is present.

8.3.3 Charging module

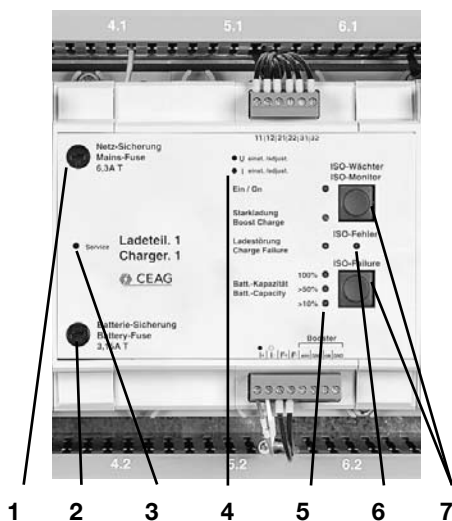

This module monitors the charge in the batteries and controls battery charging.

Fuse (1) protects the charging module from mains interference.

Fuse (2) protects the battery circuit of the charging module.


The settings with the service button (3) and adjustments (4) are made at the factory or by trained service engineers during maintenance operations.

The LEDs (5) indicate the operational status of the module (from the top): Ready (LED lights up), Boost charge active, Batt. capacity (100, 50 or 10 %).

The LED (6) and the button (7) belong to the installed insulation monitor for Insulation failure batt. + and Insulation failure batt. - (acc. to DIN VDE 0108 part 1).

Operating

8.3.4 SKU's of the final circuits

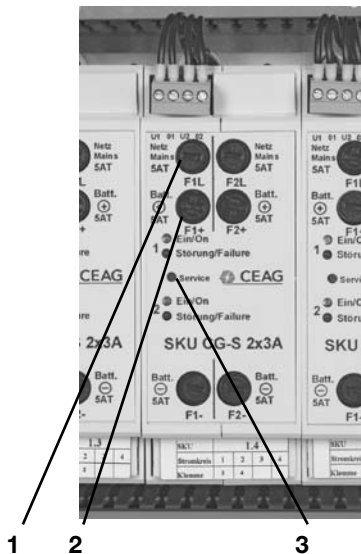

The circuit change over module supplies and monitors emergency luminaires with electronic ballasts for DC operation. The CEWA GUARD monitor checks the function of the luminaires that are connected to it. Up to 20 luminaires per circuit can be connected. Mixed operation within a circuit of maintained light, switched maintained light and non-maintained light is possible. No additional data cable for SKU type CG-S is required.


Output voltage during battery operation: 220 V DC

- individual circuit changing per emergency lighting circuit;
- freely programmable for maintained light, switched maintained light or non-maintained light;
- Easy access to fuses (1) at the front of the module;
- LEDs (2) for fault and run RUN/ON for each circuit;
- Service button (3) for direct display of module status as a plain language readout on the module.

8.3.5 Data printer

This can be installed at the conductor board BGT1 and be operated via the controller software of the ST-S as well as logged in and logged out (e. g. assembly/disassembly for replacement of paper reel and the ribbon).

8.4 Operating the ST-S control module

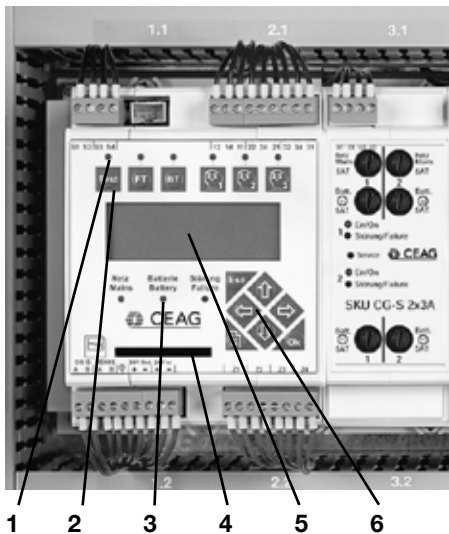

LEDs (1) in the top row indicate running functions that were initiated with the Function buttons (2) underneath.

The 3 left-hand buttons initiate present functions of the controller software for the ST-S control module:

- <Test> activates a simulated mains failure for testing the emergency lighting equipments while the button is pressed. A short button press simulates a 5 second mains failure.
- <FT> activates the menu option F-Test start / cancel

The controller software performs a function test whose progress and results are output on the display (5). An F-Test tests the final circuits and the luminaires connected to them. You will find further information about this in the description of the related program function in the following section.

- <BT> activates the menu option B-Test start / cancel

The controller software performs an operating duration test whose progress and results are output on the display (5).

An operating duration test tests whether the connected batteries guarantee the programmed minimum operating duration of the emergency lighting as required by statute in the event of a mains failure.

Further details about the system's operating status and faults can be requested in the Test- & Status menu.

The control module can be programmed to assign functions to the 3 right-hand function buttons F1 ... F3; e. g. the first button F 1 can be assigned the function manual reset.


The other LEDs (3) indicate:

- Mains operation (i. e. operation when mains supply is present),
- Battery operation (operation when mains supply has failed or FT/BT),
- Malfunctions that can be further analysed using the control module's menu options.

The control keys on the keypad (6) are used to initiate the program functions on the controller software or change their parameter settings.

Operating


The Main Menu of the controller software is opened from the main screen with the 2 key, referred to in the the current test as <menu>. This key is also used to return to the previous menu level until the main screen appears on the LC-Display (5).

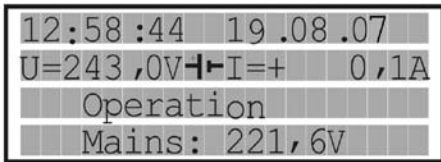


LC-Display (main screen during normal operation)


Starting point: **Main screen**


 <Menu> **Selecting the main menu:**


 ↑ / ↓: Select Basic settings in the main menu

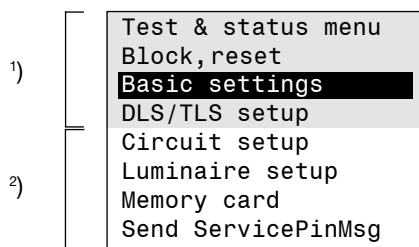

Menu selection

 <Menu> key: back to main screen (cancel)

 <ok> key: confirm selection, show selected menu (with the Function test selection)

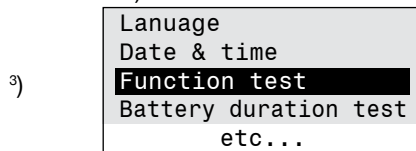

1) visible area of the main menu (with screen roll (scroll)-function)

2) currently non-visible area

3) highlighting of a selection

The <ok> key is used to confirm a selection or changes to parameter settings. The changes are not stored in the controller's nonvolatile memory; the controller software usually returns to the next higher menu.

The <ESC> key is used to cancel changes entered in a menu; the controller software returns to the next higher menu without saving the changes.

Selections within a menu of the controller software are made with the cursor keys ↑ ↓ ← → on the keypad.

- The arrow keys ↓ ↑ are used to select a menu line (up/down) or to move between input boxes.
- The arrow keys ← → are used to select settings or to increment or decrement parameters by a certain change value. These selection options are displayed on the LC display (5) with their icon.

An action is initiated by jogging a key several times; continuous pressing of a key (for more than approx. 3 seconds) speeds up the jog function, or speeds up the incrementing of parameters and/or increases the size of the increment (e. g. from 1 to 5, etc.).

The next double page shows an overview of the basic menu structure and further information about operating the system and setting parameters.

Operating

Main menu

1. Test & status menu
2. Block, reset
3. Basic settings
4. DLS/TLS setup
5. Circuit setup
6. Luminaire setup
7. Memory card
8. Send ServicePinMsg

- Operation is the same for ZB-S systems and for their US-S substations.
- If password protection is activated, then only the main screen and the main menu options "1 Test and Status Menu" and "2 Block ,Reset" are accessible without entering a password.
- The controller software automatically returns to the main screen if no entry is made within 180 seconds.
- The LCD display backlighting goes off if no entry is made within 180 seconds. Pressing any key switches the backlighting on again.
- The contrast and brightness (LCD backlighting) can be adjusted in the main screen when the <ok> key is pressed:
 - ☞ <ok> + ↑ / ↓: contrast adjustment
 - ☞ <ok> + ← / →: brightness adjustment
 These parameters can also be set with menu option "3.10 Display Setting" in menu "3 Basic Settings". Here the parameters can be numerically set as percentages.

1 Test & status menu

- 1.1 F-Test start
- 1.2 B-Test start
- 1.3 B-Test cancel
- 1.4 Sum failure
- 1.5 Circuit status
- 1.6 Luminaire status
- 1.7 DLS/TLS/3PhW status
- 1.8 Charge/battery status
- 1.9 Relay status
- 1.10 Substation status



Multi-Master Mode M³:

As from controller software version F it is possible to activate, from each installation ZB-S, the following functions:

- Start FT
- Start/cancel DT
- Sum failure (-start test)
- Substation-status (display)
- Block/release device
- Date/Time (display)
- Automatic FT (specify)
- Automatic DT (specify)

Previously, the substation needs to be found and registered in the menu «Main settings /Substation setup» (station-name).

Before the execution of the command there is a request in the Mult Master Mode if this system-no. or all systems of one group should execute this command.

An overview over the enlarged functions you can find in our catalogue «emergency-lighting».

The Multi-Master-Mode M³ is applicable as from the following software versions:



- Controller ST-S
 - ATMega 128 Z400.F
 - Neuron RS485 Z405.C
 - Neuron FTT10A Z410.C

(recallable via the menu point „customer service info“ in the menu in the basic settings)

- Controller
 - CG Vision V1.02
- PC-Programmer-Software
 - CEAG V1.03

Main screen (Example)

Control module ST-S

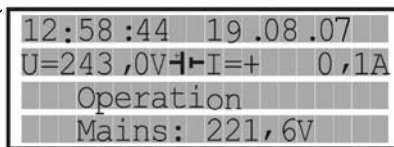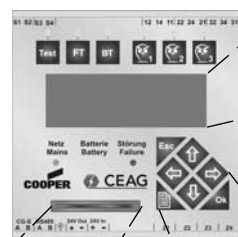

displaying

- Date and time (line 1)
- present voltage and current value (line 2)
- present operating mode (lines 3 and 4)



Memory card for saving and data transmission of test log and parameter settings



Keypad

ESC key <ESC>


Menu key

ok key <ok>

and cursor keys

↑ ↓ ← →

Operating

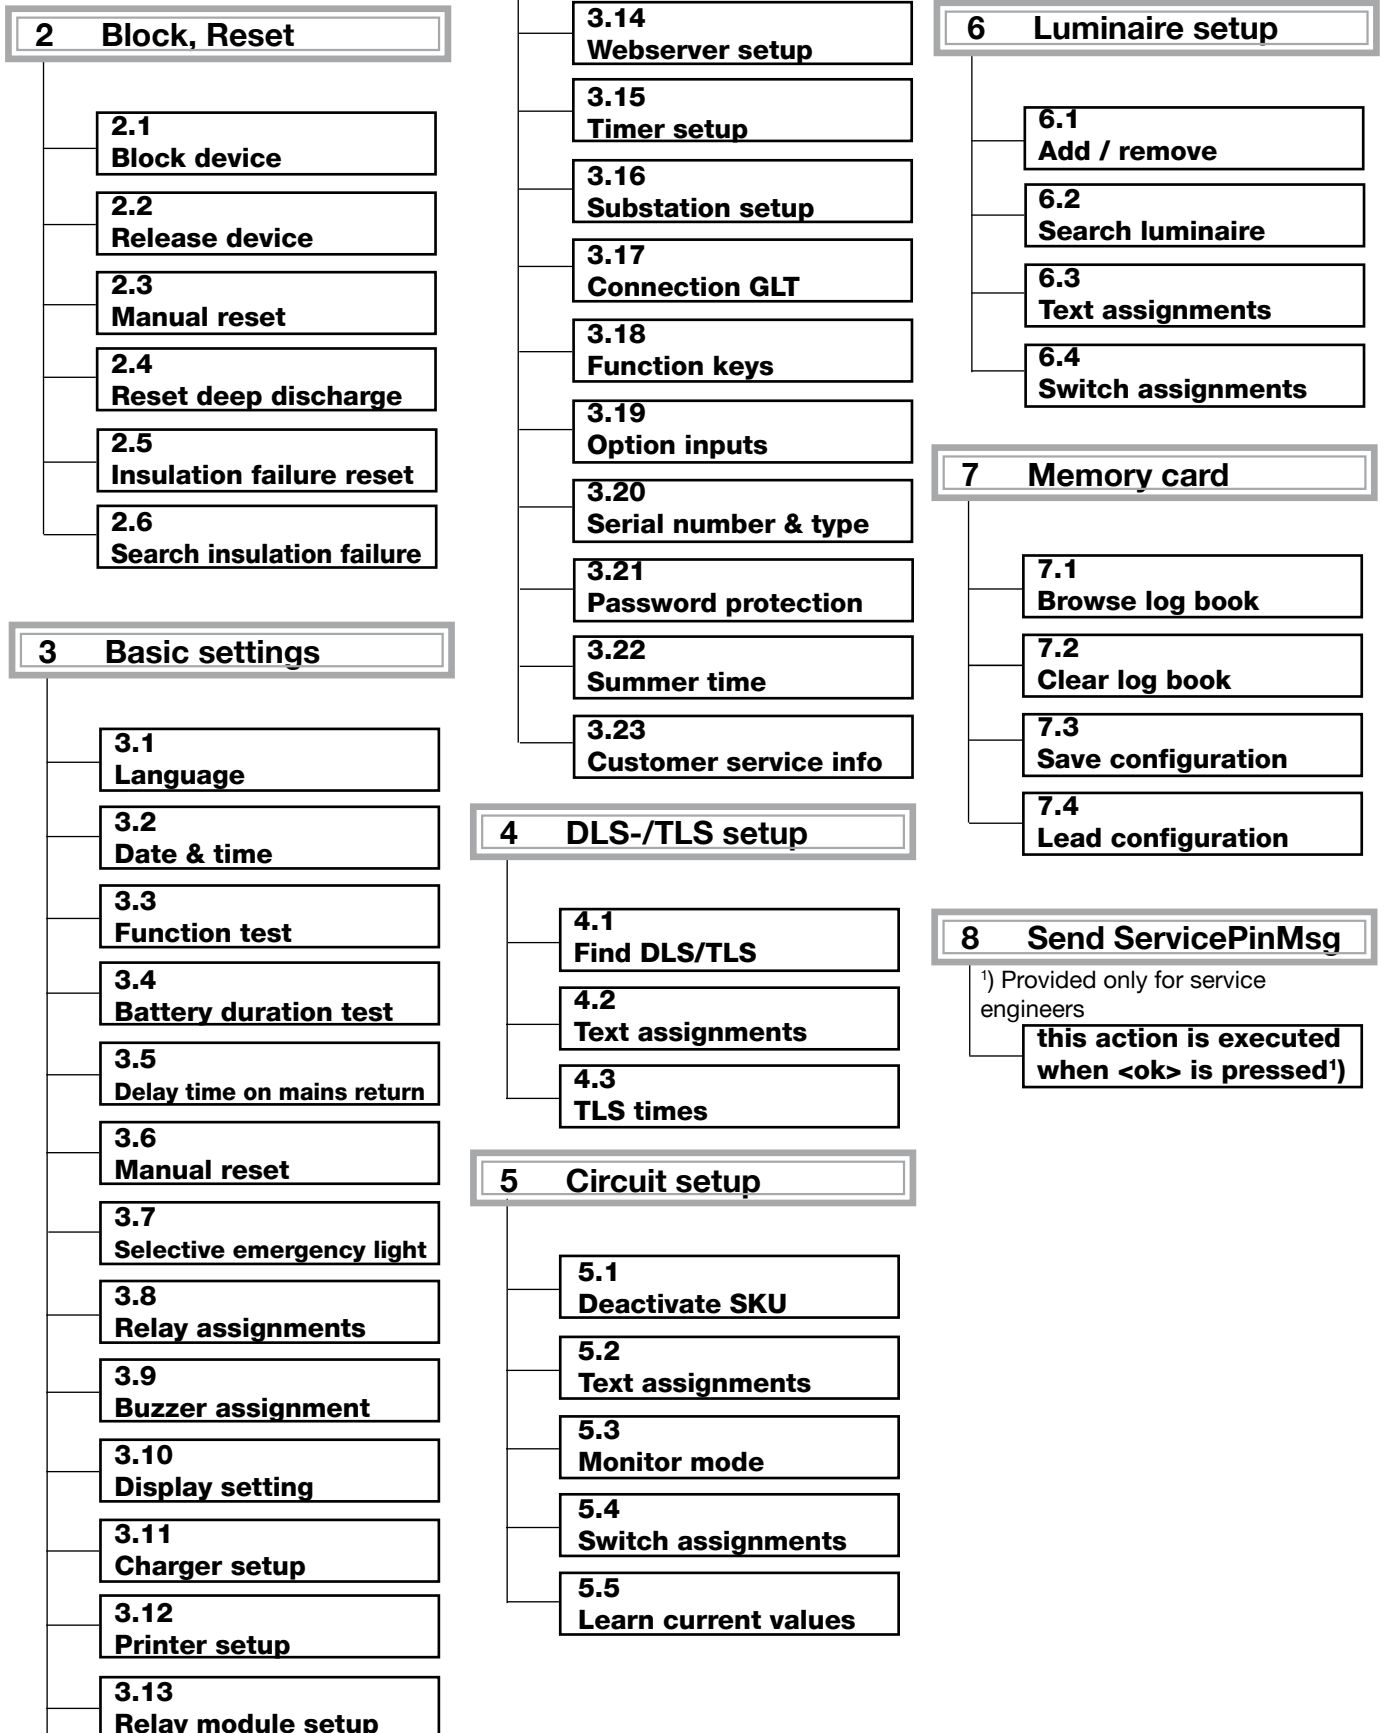



Operating

8.4.1 Menu 1: "Test & Status Menu"

Overview:

Main menu

- Test & status menu
- Block, reset
- Basic settings
- DLS/TLS Setup
- Circuit setup
- Luminaire setup
- Memory card
- Send ServicePinMsg

Menu 1

- F-Test start
- B-Test start
- B-Test cancel
- Sum failure
- Circuit status
- Luminaire status
- DLS/TLS/3PhW status
- Charge/battery status
- Relay status
- Substation status

- ☞ Selection of menu options with the keys ⬆
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

- F-Test start
- B-Test start
- B-Test cancel
- Sum failure
- etc.

☞ <ok>
Menu 1.1: Request in view of the of station to be tested (M3-Mode)
☞ <ok> initiates a function test for the connected final circuits:
The LC display shows the main screen with the message "Function test".

A battery test run (1 min.) is performed after a short mains operation (1 min.).
The main screen displays a fault message if a fault is detected.
Further information can be polled in the following submenus of the Test & Status Menu (e.g. "1.4 Group fault info" etc.).

- F-Test start
- B-Test start
- B-Test cancel
- Sum failure
- etc.

☞ <ok>
Menu 1.2: Request in view of the station (M3-Mode/compare note)
☞ <ok> initiates an battery duration test:
The LC display shows the main screen with the message "Operating duration test" and the length of the test (up to the preset limit battery duration).

Cancel: <Menu> key and then select "B-Test cancel", ⬆
If the preset limit operating duration is not achieved (see menu 3.14 "Serial number and type"), the main screen displays the message "Charge/battery failure".
If this happens the battery set must be tested and replaced if necessary!

- F-Test start
- B-Test start
- B-Test cancel
- Sum failure
- etc.

☞ <ok>
Menu 1.3: Request in view of the station (M3-Mode/compare note)
☞ <ok> initiates the abort of the running duration test cancels an operating duration test which is in progress.
The main screen reappears showing messages about the current operation of the system.

i In the Multi-Master-Mode this operation can be effected at any station of the system:

- this device
- all devices
- Device address 01
- Device address CEAG ZB-S 1

Device address refers to search results in the substation setup menu 3 «Basic settings»

- F-Test start
- B-Test start
- B-Test cancel
- Sum failure
- etc.

☞ <ok>
Menu 1.4: Request in view of the station (M3-Mode/compare note)
☞ <ok> initiates the sum failure test of the running duration test.

☞ Successive polling with ⬆
If a number of fault messages have accumulated, they can be viewed in succession on the LC display.

- Sum failure
- List: Failure 1
- Failure 2
- Failure 3
- etc.

- F-Test start
- B-Test start
- B-Test cancel
- Sum failure
- Circuit status
- etc.

☞ <ok>
Menu 1.5:
SKU 2/1 ⬆ circuit:1 ⬆
Status display
Curr. operation
Circuit name

Line 2: Possible status displays:
OFF
Mains operation
Battery operation
Normal operation

- ☞ Select input field with ⬆
- ☞ Select installed SKUs or the circuits set up under circuit setup with ⬆
- ☞ Finish and return to Menu 3 with <Menu> or <ESC>
Line 3 shows the current circuit status or a current fault message.
Line 3: Displays the current operation, e.g. «Waiting for SKU data» or «FT-Current value 1,2A»

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology



Operating

Overview:

Main menu

```

Test & status menu
Block, reset
Basic settings
DLS/TLS setup
Circuit setup
Luminaire setup
Memory card
Send ServicePinMsg
    
```

```

F-Test start
B-Test start
B-Test cancel
Sum failure
Circuit status
Luminaire status
etc.
    
```

<ok>
Menu 1.6:

```

SKU 2/1 circuit:1
....5.....10.....15....2
[ ] [ ] -----
Luminaire name
    
```

- Select input field/line with \uparrow
- Select SKU or circuit with \leftarrow
- Line 3 shows the current settings of the luminaire addresses (1 ... 20) in the selected circuit:
 - Luminaire is off (Item 1)
 - Luminaire is on (Item 2)
 - Luminaire failure (Item 3)
 - no luminaire set up (Item 4) (see "6 Luminaire Setup")
- Select a luminaire (line 2) with \leftarrow
- Line 4 shows the luminaire name (see "6.2 Text assignments")

Menu 1

```

F-Test start
B-Test start
B-Test cancel
Sum failure
Circuit status
Luminaire status
DLS/TLS/3PhW status
Charge/battery status
Relay status
Substation status
    
```

```

F-Test start
B-Test start
B-Test cancel
Sum failure
Circuit status
Luminaire status
DLS/TLS/3PhW status
etc.
    
```

<ok>
Menu 1.7:

```

DLS+3Phase monit. 1
1 2 3 4 5 L1 L2 L3
[ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]
DLS/TLS Text
    
```

```

DLS module external 2
1 2 3 4 5 6 7 8
[ ] [ ] [ ] [ ] [ ] [ ] [ ] [ ]
DLS/TLS Text
    
```

```

TLS module external 3
1 2
[ ] [ ]
DLS/TLS Text
    
```

- Submenu 1.7 depends on the device (DLS/3PhW or TLS) that is being addressed by the selection in the menu.
- Select an address with \leftarrow
- Line 2/3 shows the current status of the signal outputs of the external module or a current fault message. Line 4 shows the device name (see "6 DLS/TLS Setup").
- Note: A 3-phase monitor status (L1...L3) is shown when the external DLS/3PhW module has been configured as a combined DLS/3-phase monitor.
 - Switch status/Phase Off
 - Switch status/Phase On

- Selection of menu options with the keys \uparrow
- <ok>: confirm selection
- <Menu>: cancel and return to the previous menu (any changes entered are saved)
- <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

```

F-Test start
B-Test start
B-Test cancel
Sum failure
Circuit status
Luminaire status
DLS/TLS/3PhW status
Charge/battery status
Relay status
    
```

<ok>
Menu 1.8:

```

U=213.0 V I=+ 0.2 A
T= +18.0°C BT:03:00h
Batt capacity: 95%
Message line
    
```

- The current charge and battery status is displayed (see screenshot opposite):
 - U : present battery voltage
 - I : present charge current / discharge current
 - T : temperature in the battery compartment (from temperature sensor installed in it)
 - BT : last attainable operating duration, in hours
- Displays the current battery capacity in line 3 based on 3.11 "Charger setup"
- Line 4 only displays messages when a malfunction occurs. Selection can be made with \leftarrow if more than one fault is present

```

F-Test start
B-Test start
B-Test cancel
Sum failure
Circuit status
Luminaire status
DLS/TLS/3PhW status
Charge/battery status
Relay status
    
```

<ok>
Menu 1.9:

```

Relay: 1
Status:
picked up
    
```

Note:
See also menu option 3.8 "Relay assignments" in menu 3 "Basic settings".

- Line selection (line 1 / 3) with \uparrow
- Select a relay in line 1 with \leftarrow
- Line 4 shows the current relay status
- Select between "dropped out" and "picked up" in line 3 (e.g. for test purposes) with \leftarrow

```

Circuit status
Luminaire status
DLS/TLS/3PhW status
Charge/battery status
Substation status
    
```

<ok>
Menu 1.10:

```

Device address 1
Status message
Station name CEAG ZB-S 1
    
```

- Select a station in line 1 with \leftarrow
- Line 2 shows the current operation status of the chosen station ZB-S by Multi Master Mode M^s.

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology



Operating

8.4.2 Menu 2: "Block, reset"

Overview:

Main menu

- Test & status menu
- Block, reset**
- Basic settings
- DLS/TLS Setup
- Circuit setup
- Luminaire setup
- Memory card
- Send ServicePinMsg

Menu 2

- Block device
- Release device
- Manual reset
- Deep discharge reset
- ISO failure reset
- ISO failure search

- ☞ Selection of menu options with the $\uparrow\downarrow$ keys
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

```
Block device
Release device
Manual reset
Deep discharge reset
```

☞ <ok>
Menu 2.1:

```
This device
all devices
Device address 01
Device address CEAG ZB-S 1
```

- ☞ Selection with the buttons $\uparrow\downarrow$ between the displayed options.
- ☞ Selection of a ZB-S system with $\leftarrow\rightarrow$

i Device address refers to search results in the substation setup menu 3 «Basic settings»

☞ <ok> initiates the function: All functions are cancelled; all outputs will be isolated! In case of mains failure occurs no battery operation (see e.g. 8.3 «All-pole switching off the system» or 8.5 «Battery supply connect/disconnect»)!

```
Block device
Release device
Manual reset
Deep discharge reset
```

☞ <ok>
Menu 2.2:

```
This device
all devices
Device address 01
Device address CEAG ZB-S 1
```

☞ <ok> initiates the function: The selected stations will be switched free and restart operation.

```
Block device
Release device
Manual reset
Deep discharge reset
```

(Menu 2.3: only directly at the station)
☞ <ok> initiates the function if this operation has been activated in the menu option «Basic settings»:
Following a mains power failure, normal operation will not be resumed automatically when mains power is restored if the "Manual reset (On)" option has been

activated (menu «Basic settings/Manual reset»).

This guarantees that the emergency lighting remains on until it is ensured that the general lighting has been switched on again, e.g. in a cinema.

```
Block device
Release device
Manual reset
Deep discharge reset
```

(Menu 2.4: only directly at the station)
☞ <ok> initiates the function:
Following a "Deep discharge protection" message in the main screen, the message is acknowledged with this menu option.

The controller returns to normal operation provided there are no further fault messages.

Following a "Deep discharge protection" message in the main screen, the batteries must be tested and replaced if necessary.

```
Release device
Manual reset
Deep discharge reset
ISO failure reset
```

☞ <ok>
Menu 2.5:

```
ISO failure reset
Enter=OK Menu=Skip
```

If a positive reset happens, the controller of the station ZB-S returns to a normal operation, if no further failure messages occur.

```
Manual reset
Deep discharge reset
ISO failure reset
ISO failure search
```

☞ <ok>
Menü 2.6:

```
Find ISO failure
this device
all devices
cancel search
```

If the main screen displays the message "Insulation failure" then fault locating can be initiated with this menu option.

```
Find ISO failure
Circuit: No
Status: ISO failure
Circuit name
```

- ☞ Selection of cursor position with $\uparrow\downarrow$
- ☞ <ok> starts the ISO failure search
- ☞ <Menu>Cancel and back to menu 2

A circuit with an insulation failure is indicated by the above display.

i During the search all stations be switched to blocked conditions!

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology




Operating

8.4.3 Menu 3: "Basic settings"

Overview:

Main menu

- Test & status menu
- Block, reset
- Basic settings
- DLS/TLS Setup
- Circuit setup
- Luminaire setup
- Memory card
- Send ServicePinMsg



<ok> The currently selected
Menu 3.1: language is displayed)

) Setting on delivery/initial commissioning


Note!
Fall back language for controller reset or after the installation of a new ST-S is always english

- ☞ Use the ⬆ keys to toggle between "Language: National language" and "Language: english"
- ☞ Finish and return to Menu 3 with <Menu>

) Can only be selected when memory card is inserted.

Menu 3

- Language
- Date & time
- Function test
- Battery duration test
- Delay on mains return
- Manual reset
- Selective emerg light
- Relay assignments
- Buzzer assignment
- Display setting
- Charger setup
- Printer setup
- Relay module setup
- Webserver setup
- Timer setup
- Substation setup
- Connection BMS
- Function keys
- Option inputs
- Serial number & type
- Password protection
- Summertime
- Customer service info




<ok> Menu 3.2: Date & Time
We 11.12.07 12:00
ZB-S autosync.: yes

Setting the system time (current date and time) for the internal clock of the ST-S control module.

Important note!
These settings are the basis for all log book entries and (synchronised) test of the system!


- ☞ Select the date and time positions (^) with ⬆
- ☞ Change with ⬆ and start the clock of the ST-S controller with <Menu>
- ☞ Finish with <Menu>

This request follows:

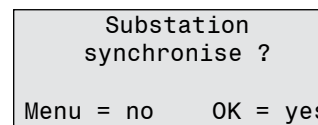

- ☞ Enter "OK" synchronises the clock of all connected substations in one group

- ☞ Selection of menu options with the keys ⬆
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt





<ok> Menu 3.3: F-Test Date&Time
We 11.12.07 12:00
FT start-up time 300s ⬆
Interval in days: 01

Setting the start (date and time) of the first function test and the intervals (1 to 14 days) of subsequent function tests (factory setting: all 7 days).
Setting the start-up time of the FT in 5s steps (factory setting: 300s)
For all luminaires with "End of line" cut off (EoL).
With function key 3 a FT without start-up time can be started.

- ☞ Select the input position for date, time, intervals (in days) and FT start-up time (in 5s) with ⬆
- ☞ Change with ⬆
- ☞ Finish with <Menu>

This request follows:

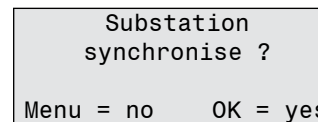


<ok> Menu 3.4: B-Test Date&Time
We 11.12.07 12:00
Interval in months: 12

Setting the start (date and time) of the first battery duration test and the intervals (1 ... 12 months) of subsequent battery duration tests.

- ☞ Select the input position (^) for date, time and interval (in months) with ⬆
- ☞ Change with ⬆
- ☞ Finish with <Menu>

This request follows:

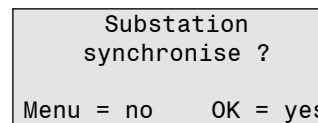

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology



Operating

Overview:

Main menu

- Test & status menu
- Block, reset
- Basic settings
- DLS/TLS Setup
- Circuit setup
- Luminaire setup
- Memory card
- Send ServicePinMsg

Date & time
Function test
Battery duration test
Delay on mains return
etc....

<ok>
Menu 3.5:

Delay time on mains return in minutes 10

Setting the time (1 ... 15 minutes) which the emergency light remains on after mains supply is restored.

- Select 1 ... 15 minutes with the keys ↵
- Finish and return to Menu 3 with <Menu>

Menu 3

- Language
- Date & time
- Function test
- Battery duration test
- Delay on mains return
- Manual reset
- Selective emerg light
- Relay assignments
- Buzzer assignment
- Display setting
- Charger setup
- Printer setup
- Relay module setup
- WebsERVER setup
- Timer setup
- Substation setup
- Connection to BMS
- Function keys
- Option inputs
- Serial number & type
- Password protection
- Summertime
- Customer service info

Function test
Battery duration test
Delay on mains return
Manual reset
etc....

<ok>
Menu 3.6:

Manual reset deactivated

Activating / deactivating the “Manual reset” option (see Menu 2.4 “Manual reset”)

- Toggle between “activated” and “deactivated” with ↵
- Finish and return to Menu 3 with <Menu>

Battery duration test
Delay on mains return
Manual reset
Selective emerg light
etc....

<ok>
Menu 3.7:

Selective emerg light deactivated

Activating / deactivating the “Selective emerg light” option

- Toggle between “activated” and “deactivated” with ↵
- Finish and return to Menu 3 with <Menu>



Note:

With selective emergency light (only available in conjunction with DLS/3Ph bus modules) each individual circuit must be assigned to a DLS/3Ph bus module to activate the emergency light function. See Menu 5.4

The functions «delay on mains return », «manual reset» and «selective emergency lighting» can be combined on circuits.

- Selection of menu options with the keys ⏴
- <ok>: confirm selection
- <Menu>: cancel and return to the previous menu (any changes entered are saved)
- <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

Delay on mains return
Manual reset
Selective emerg light
Relay assignments
etc....

<ok>
Menu 3.8:

Relays 3
Mains operation
Mains failure *
Mains failure MDB *
Charge fault
Circuit fault
Luminaire fault
Sum failure
Deep discharge protection
ISO failure
Function test
Battery duration test
Load defaults

Select the system or fault messages on which relays 1 to 3 change over for signalling contacts 1 to 3 (“picked up” and “dropped out” states).

These settings can be used to send information about the operational status of the system to a control centre (e.g. with GEAG F3 remote indicator).

A standard setting according to DIN VDE (see Appendix B) can be selected using the “Load defaults” option at the end of this menu.

- Select the relay number (1 to 3) with keys ↵
- Highlight the events with keys ⏴
- Select between relay switches (*) and relay does not switch (no *) with the <ok> key
- Finish and return to Menu 3 with <Menu>

Note:

See also menu option 1.9 “Relay status” in menu 1 “Test & status menu”.



Operating

Overview:

Main menu

```
Test & status menu
Block,reset
Basic settings
DLS/TLS Setup
Circuit setup
Luminaire setup
Memory card
Send ServicePinMsg
```

```
Manual reset
Selective emerg light
Relay assignments
Buzzer assignment
etc....
```

☞ <ok>
Menu 3.9:

```
Buzzer assignment
Mains operation
Mains failure *
Mains failure UV *
Charge fault
Circuit fault
Luminaire fault
Sum failure
Deep discharge protection
ISO failure
Function test
Battery duration test
Load defaults
```

Select the system or fault messages which activate the buzzer in the switch cabinet. A standard setting according to DIN VDE (see Appendix B) can be selected using the "Load defaults" option at the end of this menu.

- ☞ Highlight the events with ↓↑
- ☞ Select buzzer "On" (*) or buzzer "OFF" (no *) with keys ⇐⇒
- ☞ Finish and return to Menu 3 with <Menu>

i Note:
The buzzer's maintained signal tone (after the onset of an event specified here) can be silenced by pressing any key.

Menu 3

```
Language
Date & time
Function test
Battery duration test
Delay on mains return
Manual reset
Selective emerg light
Relay assignments
Buzzer assignment
Display setting
Charger setup
Printer setup
Relay module setup
Webserver setup
Timer setup
Substation setup
Connection to BMS
Function keys
Option inputs
Serial number & type
Password protection
Summertime
Customer service
info
```

```
Selective emerg light
Relay assignments
Buzzer assignment
Display setting
etc....
```

☞ <ok>
Menu 3.10:

```
Display setting
Contrast 50% ⇐⇒
Brightness on:100% ⇐⇒
Brightness off: 10% ⇐⇒
```

Setting contrast and brightness (back-lighting) for the LCD display of the ST-S control module.

- ☞ Line selection (2 to 4) with ↓↑
- ☞ Set the values (0 to 100%) with keys ⇐⇒
- ☞ Finish and return to Menu 3 with <Menu>

- ☞ Selection of menu options with the keys ↓↑
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

Note:
"Brightness (on)" is the display setting when the display is active (press any key to activate). If no key is pressed within 180 seconds, the controller switches the display to passive (dimmed backlighting) "Brightness (off)".
The above settings may make the display unreadable (e.g. depending on the ambient lighting).
(The active display setting can be changed at any time from the main screen by pressing <ok> and a key (for contrast) or (for brightness) of the active LCD display.)

```
Relay assignments
Buzzer assignment
Display setting
Charger setup
etc....
```

☞ <ok>
Menu 3.11:

```
Charger setup
installed ⇐⇒
Number of boosters 4 ⇐⇒
Batt.capacity 80Ah ⇐⇒
```

Entries about the switch cabinet equipment

- ☞ Select line 2, 3 and 4 with ↓↑
- ☞ Change the settings with ⇐⇒
 - Line 2: Toggle between "installed" / "not installed"
 - Line 3: Number of boosters = 1 ... 10
 - Line 4: Battery capacity in Ah can be selected between 5 and 999 short key press in increments of 1; long key press in increments of 10.
- ☞ Finish and return to Menu 3 with <Menu>

i Important note!
These details must be entered exactly or the emergency lighting system controller may fail.

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology



Operating

Overview:

Main menu

```
Test & status menu
Block,reset
Basic settings
DLS/TLS Setup
Circuit setup
Luminaire setup
Memory card
Send ServicePinMsg
```

```
Buzzer assignment
Display settings
Charger setup
Printer setup
etc....
```

<ok>
Menu 3.12:

```
Printer setup
installed/not installed
activated/not activated
```

Is not printer existing or filed via the Service-Button the following appears:

```
Printer setup
not installed
```



A PD3 printer which is parameterised as «not installed» can be logged in (installed and activated) with the service button (at the printer) at the station. The possibilities of selection in this menu server for the activation/deactivation of the logging by the printer and for the log out (deinstallation) during the exchange/replacement of the paper and the ribbon of the printer.

Menu 3

```
Language
Date & time
Function test
Battery duration test
Delay on mains return
Manual reset
Selective emerg light
Relay assignments
Buzzer assignment
Display setting
Charger setup
Printer setup
Relay module setup
Webserver setup
Timer setup
Substation setup
Connection to BMS
Function keys
Option inputs
Serial number & type
Password protection
Summertime
Customer service info
```

```
Display settings
Charger setup
Printer setup
Relay module setup
etc....
```

<ok>
Menu 3.13:

```
Relay module setup
installed
version CG IV
```

Is the Relay module located in the mode «not installed» by pushing the Service button it can be logged in at the device and can be switched into the mode «installed».

```
Charger setup
Printer setup
Relay module setup
Webserver setup
etc....
```

<ok>
Menu 3.14:

```
installed
DHCP: ????.
IP:???.???.???.???.
MASK:???.???.???.???.
```

After connection of the power supply the webmodule needs approx. 1.5min for booting. After the booting, the red LED of the webmodule flashes slowly.

To log on the webmodule on the ST-S control unit, the service pin of the webmodule must be pressed for approx. 1 sec. The menu „webserver setup“ appears in the display of the control unit of the ZB-S. During the log on procedure the display shows a lot of question marks. After approx. 3-5 sec. the display shows the standard settings of the webmodule: The webmodule gets automatically activated to the control unit, which is displayed by the red LED (some seconds) of the control unit and the webmodule. After 1-2 minutes the procedure is finished and the webmodule is ready to operate.

Selection of menu options with the keys ↓↑

<ok>: confirm selection

<Menu>: cancel and return to the previous menu (any changes entered are saved)

<ESC>: cancel and return to the previous menu (any changes entered are not saved)

flashing input prompt

```
Printer setup
Relais module setup
Webserver setup
Timer setup
etc....
```

<ok>
Menu 3.15:

```
Timer deactivated/activated
00:00 - 23:59
Mo Tu We Th Fr Sa Su
X X X X X X X
```

Selection of Timer 1, Timer 2 or Timer 1&2 with the buttons ⇌
If there appears a X under the token of the weekday, on this day the luminaire operates to programmed time.

```
Relais module setup
Webserver setup
Timer setup
Substation setup
etc....
```

<ok>
Menu 3.16:

```
Search substation ...
Group no.: 07
Substation
S1/S2-mode: Slave no
S1/S2-mode: *
```

<Menu> finishes the entry and the following display appears:

```
Device adresse:01
Version Z410C
ND 00 09 73 72 96 00
System name
```



The selection in the second menu serve for the display of the active substations.

Only substations with a programmed group number will be find if not, the message «transmission failure» appears.

By a selection of «S1/S2-Master - yes» the wohle group can be switched into the mode «blocked» via the F3-switch of the Master controller. At the Master controller appears the display «Blocked S1/S2» – at the controllers of the substations appears the message «Blocked LON»

<ok>

Menu 3.17:

```
Device address: 1
LON switch no
NID00 05 94 75 52 00
CEAG ZB-S name
```

This menu is used to activate and interface the system with a master monitoring device using the CG-S bus.

Line selection (1 / 2) with ↓↑

Select a device (bus) address (1 ... 32) in line 1 with keys ⇌ (display – : no interface)

Select no/yes in line 2 for the option LON switch with ⇌

Note:

The entries in lines 3 and 4 are for information for the system integrator only.



Operating

Overview:

Main menu

```
Test & status menu
Block, reset
Basic settings
DLS/TLS Setup
Circuit setup
Luminaire setup
Memory card
Send ServicePinMsg
```

```
Timer setup
Substation setup
Connection to BMS
Function keys
etc....
```

<ok>

Menu 3.18:

```
Function key 1
No function
Switch
Block device *
Simul mains fail MDB
ISO failure reset
Manual reset
Deep discharge reset
F-Test without lead
Show fault list
Turn off maintained light
Standby light on
```

Menu 3

```
Language
Date & time
Function test
Battery duration test
Delay on mains return
Manual reset
Selective emerg light
Relay assignments
Buzzer assignment
Display setting
Charger setup
Printer setup
Relay module setup
Webserver setup
Timer setup
Substation setup
Connection to BMS
Function keys
Option inputs
Serial number & type
Password protection
Summertime
Customer service info
```

```
Substation setup
Connection to BMS
Function keys
Option inputs
etc....
```

<ok>

Menu 3.19:

```
Option input 1
No function
1) Switch
2) Switch inverted *
Manual reset
Deep discharge reset
F-Test start
B-Test start
B-Test cancel
Block device
Monitoring ventilation
Standby light off
Turn on maintained light
```

- ☞ Selection of menu options with the keys ⏴
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

- ☞ Line 4: System name user-definable. See text assignment 4.2
- ☞ Finish and return to Menu 3 with <Menu>

This menu option can be used to assign functions to the function keys (F1...F3 on the control module); the functions are executed as soon as the relevant key is pressed.

It is advisable to assign only one function per key; the star icon goes out when a key is assigned another function.

- ☞ Select the function key (1 to 3) with keys ⏴
- ☞ Highlight the function with ⏴
- ☞ Select the function (*) with <ok>
- ☞ Finish and return to Menu 3 with <Menu>

This option can be used to assign functions to the option inputs (Z1 ... Z4 on the control module); the functions are executed as soon as the relevant 24V analog inputs are triggered.

Only one function can be assigned per input; the star icon goes out when an input is assigned another function.

- ☞ Select the option input (1 to 4) with keys ⏴
- ☞ Highlight the events with ⏴
- ☞ Select the function (*) with <ok>
- ☞ Finish and return to Menu 3 with <Menu>



Important note!

The “Switch” and “Switch inverted” functions require a 24 V level trigger. All other functions require an edge-triggered signal from LOW to HIGH.

Notes:

-) The “Switch” assignment allows integration into the switch assignment (see menu options 5.4 and 6.3 “Switch assignments” in menus 5 “Circuit setup” and 6 “Luminaire setup”).
-) The “Switch inverted” assignment initiates the function when the analog inputs are triggered inverted.

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology



Operating

Overview:

Main menu

- Test & status menu
- Block, reset
- Basic settings
- DLS/TLS Setup
- Circuit setup
- Luminaire setup
- Memory card
- Send ServicePinMsg

Connection to BMS
Function keys
Option inputs
Serial number & type
etc....

<ok>

Menu 3.20:

Type: ZB-S
Nom. op. duration 3h
Limit op. duration 100%
Serial No:1234567/02



Note!

Factory setting = Nominal operating duration
A change to the limit operating duration has to be done by our customer service!

- ☞ Line selection (1 - 3) with ↓↑
- ☞ Selection of the type (ZB-S/CGS) as well as the nominal operating duration (1, 2, 3 or 8h) and limit operating duration (10 to 100%) with keys ←→
- ☞ The nominal and limit operating duration is the basis for the operating duration test.
- ☞ Finish and return to Menu 3 with <Menu>
- ☞ Select the “deactivated” or “activated” setting with keys ←→

Menu 3

- Language
- Date & time
- Function test
- Battery duration test
- Delay on mains return
- Manual reset
- Selective emerg light
- Relay assignments
- Buzzer assignment
- Display setting
- Charger setup
- Printer setup
- Relay module setup
- Webserver setup
- Timer setup
- Substation setup
- Connection to BMS
- Function keys
- Option inputs
- Serial number & type
- Password protection
- Summertime
- Customer service info

Function keys
Option inputs
Serial number & type
Password protection
etc....

<ok>

Menu 3.21:

Password:
deactivated
Password (6 digits)

When “activated” is selected the password prompt also appears:

Password:
activated
Password (6 digits)
Password: 123231

Note:

When password protection is activate this prompt is only accessible when the current password has already been entered. The prompt appears when a protected (sub) menu is called in the main menu. The password is entered with keys F1=1, F2=2, F3=3;

a flashing square cursor marks the current entry point.

Password : 1

- ☞ Enter the password (the digits can only be entered with keys F1, F2 or F3)
- ☞ Finish and return to Menu 3 with <Menu>

- ☞ Selection of menu options with the keys ↓↑
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

Option inputs
Serial number & type
Password protection
Summer time
Customer service

<ok>

Menu 3.22:

Summertime
(Sunday/Monday)
Start: 0 /03
End: 0 /10



NOTE!

After the changeover of summertime/wintertime effects a automatic synchronisation of the clocks.

- ☞ Selection of the settings with the keys ←→
- ☞ Time to be set is the sunday of the month where the change over of summertime to wintertime effects. The maximum possible is the 5th sunday in march resp. october.
- ☞ Choice of the input field with ↓↑
- ☞ Finish and back to menu 3 with <Menu>

Serial no. and type
Password protection
Summer time
Customer service info

<ok>

Menu 3.23:

ATMega 128: Z400.F
Neuron RS485: Z405.C
Neuron FTT10A:Z410.C
go on with menu keys

This is a display with information about the status of the installed controller software (e.g. needed for enquiries with CEAG Customer Service)



Operating

8.4.4 Menu 4: "DLS/TLS setup"

Overview:



Main menu

- Test & status menu
- Block, reset
- Basic settings
- DLS/TLS Setup**
- Circuit setup
- Luminaire setup
- Memory card
- Send ServicePinMsg

Menu 4

- Find DLS/TLS
- Text assignments
- TLS times


- ☞ Selection of menu options with the keys ⬆
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt



The procedure is necessary, for example when the system is first commissioned or after adding/removing DLS or TLS modules.

All addresses are searched in succession for installed DLS and TLS modules.




The icon bar ■■■■■■■■ indicates how the search is progressing.

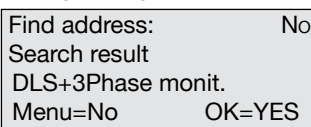

If no external bus module is found, you will see the message

**Search result
not installed**

If a bus module has been identified, you will see the message ...

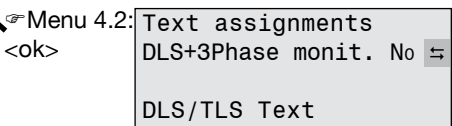
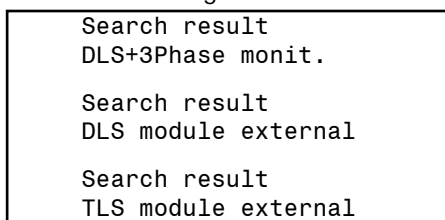


Notes:

You can use this menu to view assignments with external modules and assign/edit module names without changing the configuration.

These module names are stored on the memory card and displayed in the LCD display menus as operator help. Text assignments cannot be made with the ST-S if a memory card is not inserted!

A more user-friendly input is possible using a CEAG configuration software for the ZB-S system with a PC (data are transmitted by the memory card).

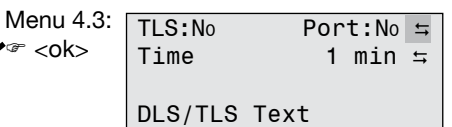

- ☞ <ok>: The search result is accepted; the parameters will be used by the ST-S for the controller
- ☞ <Menu>: The search result is rejected – the old settings are retained
- ☞ When all possible addresses have been polled the procedure is closed and the system returns to menu 4 "DLS/TLS Setup" with the new parameters.
- ☞ Finish and return to Menu 4 with <Menu>

- ☞ Line selection (line 2, 4) with ⬆
- ☞ Select a bus address with ⇄
- ☞ The message "DLS/TLS Text" appears on line 4 as a default setting or, if already defined, a module name
- ☞ Editing DLS/TLS Text:
 - Select line 4 with ⬆
 - Select the input point with ⇄
 - All the possible alphanumeric characters are displayed cyclically with the cursor keys ⬆.
 - Once a name has been fully entered, confirm the entry with <ok>. The remaining characters after the current cursor position are cleared.
- ☞ Finish and return to Menu 4 with <Menu>
- ☞ Line selection (line 1, 2) with ⬆
- ☞ Make changes in the input field with ⇄
- ☞ When this menu option is selected the system displays the first TLS module number it finds; in the "Port" input field you can now select from among the possible ports of the modules with ⇄
- ☞ In line 2 the stairwell light operation times 1 sec, 1 ... 15 min can be selected with ⇄
- ☞ Line 3 shows the module name (s. menu 4.2).
- ☞ Finish and return to Menu 4 with <Menu>



Operating

8.4.5 Menu 5: "Circuit setup"

Overview:

Main menu

```
Test & status menu
Block, reset
Basic settings
DLS/TLS Setup
Circuit setup
Luminaire setup
Memory card
Send ServicePinMsg
```

Menu 5

```
Deactivate SKU
Text assignments
Monitor mode
Switch assignments
Learn currents
```

- ☞ Selection of menu options with the keys ↓↑
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

```
Deactivate SKU
Text assignments
Monitor mode
Switch assignments
Learn currents
```

Menu 5.1:
☞ <ok>

```
Deactivate SKU
Subrack:No   SKU:No  ↵
Type: SKU CG-S 2x3
OK key=deactivate
```

Notes:

This menu function must be run when removing SKU modules. The SKUs are assigned by their placing on the module slots of the subrack.

- ☞ Successive selection of the installed SKUs with ↵
- ☞ Numbering is consecutive; the number of the relevant subrack 1 ... 5 is shown for the operator's information
- ☞ <ok>: The displayed SKU module is deactivated.
- ☞ Finish and return to Menu 5 with <Menu>

```
Deactivate SKU
Text assignments
Monitor mode
Switch assignments
Learn currents
```

Menu 5.2:
☞ <ok>

```
Text assignments
SKU2/2↵ circuit:2↵
Type: SKU CG-S 2x3
Circuit name
```

Notes:

This menu can be used to assign/edit circuit names without affecting the configuration.

The procedure is necessary, for example when the system is first commissioned or after adding SKU modules.

Circuit names are stored on the memory card and displayed in the LC display menus as operator help. Text assignments cannot be made with the ST-S if a memory card is not inserted!
Otherwise, refer to menu option 4.2

- ☞ Select line 2 or 4 or the input fields in line 2 with ↓↑
- ☞ Successive selection of SKU/output and (final) circuit with ↵
- ☞ e.g. (final) circuit 2, switched by the second output of the second SKU type 2x3A CG-S on subrack 2
- ☞ Changing the circuit name:
 - Select line 4 with ↓↑
 - Select the input point with ↵
 - All the possible alphanumeric characters are displayed cyclically with the cursor keys ↓↑.
 - Once a name has been fully entered, confirm the entry with <ok>. The remaining characters after the current cursor position are cleared.
- ☞ Finish and return to Menu 5 with <Menu>



Operating

Overview:

Main menu

```
Test & status menu
Block, reset
Basic settings
DLS/TLS Setup
Circuit setup
Luminaire setup
Memory card
Send ServicePinMsg
```

```
Deactivate SKU
Text assignments
Monitor mode
Switch assignments
Learn currents
```

Menu 5.3: `<ok>`

```
SKU2/2 ↵ circuit:2 ↵
Current value monitoring ↵
max. deviation
20% ↵ Circuit name
```

- ☞ Select line 1, 2, 3 or the input fields in line 1 with `↓↑`
- ☞ Successive selection of SKU/output and (final) circuit with `↵`
Line 4 shows the circuit name (see menu 5.2)
- ☞ Select the monitoring mode with keys `↵` For these monitoring modes, refer to notes
- ☞ Finish and return to Menu 5 with `<Menu>`

Notes:

The above display shows an example of the selection of "Current value monitoring" for circuit 2, switched across output 2 of SKU No. 2 on subrack 2.

The following modes can be selected in line 2:

- CG monitoring
- Current value monitoring
- Reserve circuit

Menu 5

```
Deactivate SKU
Text assignments
Monitor mode
Switch assignments
Learn currents
```

- ☞ Selection of menu options with the keys `↓↑`
- ☞ `<ok>`: confirm selection
- ☞ `<Menu>`: cancel and return to the previous menu (any changes entered are saved)
- ☞ `<ESC>`: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

The "CG monitoring" option requires CG-S ballasts/modules and therefore addressable luminaires from the CEAG range.

For other luminaires, a function test with the "Current value monitoring" option can be carried out on the basis of the current flow in an entire luminaire circuit (refer to the settings in "5.5 Learn current values").

When "Current value monitoring" is selected, line 3 prompts entry of the maximum deviation (1 ... 20%) from the reference value determined in "5.5 Learn current values" at which there is still no fault message in a function test. So that the failure of the weakest luminaire in a final circuit can be detected, select:

$$\text{max. dev.} < \frac{P_{\text{min}}}{P_{\text{ges}}} \times 100 \quad (P_{\text{min}} = \text{Mains connected load of the smallest luminaire})$$

$$P_{\text{ges}} \quad (P_{\text{ges}} = \text{Mains connected load of all installed luminaires})$$

Using a SWR150-module differing to this the current value monitoring has to be set to minimum 15% - acc. to number of type of luminaire and luminous flux.

Assembly and Operating Instructions

Central Battery System ZB-S with STAR - Technology



Operating

Overview:

Main menu

- Test & status menu
- Block, reset
- Basic settings
- DLS/TLS Setup
- Circuit setup**
- Luminaire setup
- Memory card
- Send ServicePinMsg

- Deactivate SKU
- Text assignments
- Monitor mode
- Switch assignments**
- Learn currents

Menu 5.4:

<ok>

```
SKU2/2 ⇐ circuit:2 ⇐
per luminaire setup ⇐
Maintained light (Batt) ⇐
Circuit name
```

- ☞ Select line 1, 2, 3 or the input fields in line 1 with ↓↑
- ☞ Successive selection of SKU and (final) circuit with ⇐
- Line 4 displays the message “Circuit text” or a circuit name (see menu 5.2)
- ☞ Select the settings in line 2 and 3 with keys ⇐
- ☞ Finish and return to Menu 5 with <Menu>

Menu 5

- Deactivate SKU
- Text assignments
- Monitor mode
- Switch assignments
- Learn currents

- ☞ Selection of menu options with the keys ↓↑
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- ☞ <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

Notes:

The possible settings in line 3 depend partly on the selection made in line 2

| | Switch assignment in line 2 | Switch 1 | Switch 2 |
|--------------------------|-----------------------------|----------|---|
| Non maintained mode | | | none |
| Maintained light (mains) | | | Maintained light (Batt) TLS xx/x (Batt) |
| per luminaire setup | | | Maintained light (Batt) TLS xx/x (Batt) |
| Timer 1 | | | Maintained light (Batt) |
| Timer 2 | | | DLS xx/y |
| Timer 1 & 2 | | | TLS xx/y |
| DLS xx/x | | | Maintained light (Batt) DLSxx/y TLS xx/y |
| TLS xx/x | | | Maintained light (Batt) DLS xx/y TLS xx/y |

Function keys F1 ... F3 or option inputs Z1 ... Z4 in line 2 can also be declared as switches (see menus 3.12 and 3.13 in “Basic settings”).

Switch assignment is not possible unless these variable elements have been assigned a switch function!

xx: Module number (1 ...)
y: Inputs of the module (e.g. for switch interrogation) or
Switched outputs of TLS modules

Notes:

Additional options with selective emergency light:

| | Switch assignment in line 2 | Switch 1 | Switch 2 |
|--|-----------------------------|----------|--|
| Non maintained mode or 3-phase monitor | | | none Maintained light (Batt) DLS xx/y TLS xx/y |
| Maintained light (mains) | | | Maintained light (Batt) TLS xx/x (Batt) |
| per luminaire setup | | | Maintained light (Batt) TLS xx/x (Batt) 3-phase monitor |
| Timer 1 | | | Maintained light (Batt) |
| Timer 2 | | | DLS xx/y |
| Timer 1 & 2 | | | TLS xx/y 3-phase monitor |
| DLS xx/x | | | Maintained light (Batt) DLSxx/y TLS xx/y 3-phase monitor |
| TLS xx/x | | | Maintained light (Batt) DLS xx/y TLS xx/y 3-phase monitor |

- Deactivate SKU
- Text assignments
- Monitor mode
- Switch assignments
- Learn currents**

Menu 5.5:

<ok>

```
Main screen
with status line:
Learn currents
```

On completion of the procedure the ST-S control module returns to Menu 5 “Circuit setup”.

The procedure can be cancelled with the <ESC> or <Menu> keys.

Notes:

The “Learn current values” procedure starts when the selection is confirmed with <ok>. The time taken by the procedure depends on the number of installed circuits. A reference current value is determined and stored one after the other for all the circuits with the “Current value monitoring” mode selected (see 5.3 “Monitor mode”) in battery operation. This value is now used as the basis for malfunction diagnostics (e.g. luminaire malfunction).

All the desired luminaires must be installed and fully operational!



Operating

8.4.6 Menu 6 “Luminaire setup”

Overview:

Main menu

- Test & status menu
- Block, reset
- Basic settings
- DLS/TLS Setup
- Circuit setup
- Luminaire setup**
- Memory card
- Send ServicePinMsg

```
Add/Remove
Luminaire search
Text assignments
Switch assignments
```

<ok>

Menu 6.1:

```
SKU 2/2 circuit:2
...5...10...15...20
[]-[]-[]-[]-[]-[]-[]-[]-
Luminaire text
```

Select line 1 or 2 or the input fields in line 1 with \downarrow

Successive selection of SKU/output and (final) circuit with \rightleftarrows

Line 3 shows the current settings for the luminaires (1 to 20) in the selected circuit:

- Luminaire is present (Item 1)
- no luminaire set up (Item 2)

Select a luminaire (line 2) with \rightleftarrows (e.g. cursor flashing on position 3)

Line 4 displays the luminaire text (Name if previously entered).

Use the <ok> key to set or remove a luminaire at the selected position.

Menu 6

- Add/Remove
- Luminaire search
- Text assignments
- Switch assignments

Selection of menu options with the keys \uparrow

<ok>: confirm selection

<Menu>: cancel and return to the previous menu (any changes entered are saved)

<ESC>: cancel and return to the previous menu (any changes entered are not saved)

flashing input prompt

```
Add/Remove
Luminaire search
Text assignments
Switch assignments
```

<ok>

Menu 6.2:

```
all circuits
SKU 2/2 circuit:2
circuit name
```

Select line 1 and 2 resp. the input fields in line 2 with \downarrow

Successive selection of SKU/output and (final) circuit with \rightleftarrows

All connected luminaires with address of a device will automatic be search and displayed. Please note that double addressed luminaires in one circuit will be identified as 1 address. If necessary correct the luminaire address of the affected circuit.

```
Add/Remove
Luminaire search
Text assignments
Switch assignments
```

<ok>

Menu 6.3:

```
SKU 2/2 circuit:2
...5...10...15...20
[]-[]-[]-[]-[]-[]-[]-[]-
Luminaire text
```

Select line 1, 2, 4 or the input fields in line 1 with

Successive selection of SKU and (final) circuit with (e.g. (final) circuit 2, of the second SKU type 2x3A CG-S on subrack 2)

Line 3 shows the current settings for the luminaires (1 to 20) in the selected circuit

- Luminaire is present (Item 1)
- no luminaire set up (Item 2)

Select a luminaire (line 2) with (e.g. cursor flashing on position 3)

Line 4 displays, for example, the message “Luminaire text” as default or a luminaire name if previously entered

Changing the luminaire name:

- Select line 4 with
- Select the input point with
- All the possible alphanumeric characters are displayed cyclically with the cursor keys.
- Once a name has been fully entered, confirm the entry with <ok>. The remaining characters after the current cursor position are cleared.

Notes:

You can use this menu to view luminaire assignments and assign / edit luminaire names without changing the luminaire configuration.

The procedure is necessary, for example when the system is first commissioned or after luminaires have been added or removed.

These luminaire names are stored on the memory card and displayed in the LCD display menus as operator help. Text assignments cannot be made with the ST-S if a memory card is not inserted! Otherwise, refer to menu option 4.2



Operating

Overview:

Main menu

- Test & status menu
- Block, reset
- Basic settings
- DLS/TLS Setup
- Circuit setup
- Luminaire setup
- Memory card
- Send ServicePinMsg

Menu 6

- Add/Remove
- Luminaire search
- Text assignments
- Switch assignments

```
Add/Remove
Luminaire search
Text assignments
Switch assignments
```

<ok>
Menu 6.4:

```
SKU 2/2 circuit:2
Line 2
Line 3
Line 4
```

- Select the input fields in line 1 with \uparrow
- Select input field with \leftarrow
- The displays and input options depend on the technical characteristics of the luminaires that are used and on the settings made in menu 4 "Circuit set-up"

A switch cannot be assigned to individual luminaires unless the options "CG monitoring" and "per luminaire setup" are selected; the following display appears:

```
SKU 2/2 circuit:2
...5...10...15...20
Line 3
Luminaire text
```

- Line selection (line 2 and 3) with \uparrow
- Select a luminaire in line 2 with keys \leftarrow (line 4 shows "not installed" or the luminaire name)
- possible selections in line 3 with keys \leftarrow (see table below)
- If there are two selections in line 3, use keys \uparrow to toggle between these displays.
- Finish and return to Menu 6 with <Menu>

- Selection of menu options with the keys \uparrow
- <ok>: confirm selection
- <Menu>: cancel and return to the previous menu (any changes entered are saved)
- <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

Function keys F1 ... F3 or option inputs Z1 ... Z4 in line 2 can also be declared as switches (see 5.4).

Table of selection options in line 3 for an installed CG-S luminaire

| | |
|-----------------------|--|
| "no CG-S function" | The luminaire is not individually monitored and not switchable |
| "Non-maintained mode" | The CG-S luminaire is individually monitored and is off in normal operation |
| "Maintained light" | The CG-S luminaire is individually monitored and is on in normal operation |
| "Poll1 / Poll2" | The CG-S luminaire is individually monitored and it is assigned a certain switch configuration. It can be assigned 2 switches: "DLS xx/y \leftarrow DLS xx/y \leftarrow " (OR operation) It can be assigned 1 timer and a switch: "Timer 1 \leftarrow DLS xx/y \leftarrow " "Timer 2 \leftarrow DLS xx/y \leftarrow " "Timer 1 & 2 \leftarrow DLS xx/y \leftarrow " |

xx: Module number (1 to 10) y: Inputs of the module (e.g. for switch interrogation)



Operating

8.4.7 Menu 7 “Memory card”

Overview:

Main menu

Test & status menu
Block, reset
Basic settings
DLS/TLS Setup
Circuit setup
Luminaire setup
Memory card
Send ServicePinMsg

Menu 7

Browse log book
Clear log book
Save configuration
Load configuration

Menu 8

Function is started direct from the main menu by pressing <ok>

- ☞ Selection of menu options with the keys ↑↓
- ☞ <ok>: confirm selection
- ☞ <Menu>: cancel and return to the previous menu (any changes entered are saved)
- <ESC>: cancel and return to the previous menu (any changes entered are not saved)
- flashing input prompt

Browse log book
Clear log book
Save configuration
Load configuration

☞ <ok>

Menu 7.1:

11.08.07 12:30:00
Event
Line 3
Line 4

Line 3 and 4 may show additional information about the event displayed in line 2:
For a luminaire fault with CG monitoring, e.g.:

Line 3: “Circuit No.”

Line 4: Address(es) of the faulty luminaire(s):

□□-□□□□□□-□□□□□□———

In the example illustrated, luminaires 6, 13 and 14 have a fault – luminaires 3, 10 and 16 to 20 are not installed.

- ☞ Select the log book entries with ↵
- Line 1: displays date and time for the displayed event
- Line 2: displays a message about the nature of the event, e.g. “Luminaire fault” with additional information in lines 3 and 4
- A message is displayed if the operator gets to the end or back to the beginning of the log book entries as he scrolls through them.

☞ Finish and return to Menu 7 with <Menu>

Browse log book
Clear log book
Save configuration
Load configuration

☞ <ok>

Menu 7.2:

Clear log book?
Menu=No OK=YES



Important note!

Once deleted, log book entries cannot be restored.

☞ <Menu>: **No deletion** and return to menu 7 “Memory card”

☞ <Enter>: **All log book entries on the memory card are deleted!**
Return to menu 7 “Memory card”

Browse log book
Clear log book
Save configuration
Load configuration

☞ <ok>

Menu 7.3:

Save configuration?
Menu=No OK=YES

☞ <Menu>: **No saving** and return to menu 7 “Memory card”

☞ <Enter>: **All entries on the memory card are deleted and overwritten with the current system configuration!**
Return to menu 7 “Memory card”

Browse log book
Clear log book
Save configuration
Load configuration

☞ <ok>

Menu 7.4:

Load configuration?
Menu=No OK=YES



Important note!

The current configuration is irrevocably overwritten with the new configuration!

☞ <Menu>: **The existing system configuration is retained** and return to menu 7 “Memory card”

☞ <Enter>: **The existing system configuration is overwritten with the entries on the memory card! The system is now rebooted.**
Return to main screen

8.4.8 Menu 8 “Send ServicePinMsg”

☞ <ok> starts the function (direct from the main menu)

☞ <Menu> / <ESC> returns to the main menu

This function is provided for service engineers and has no relevance for normal operation.

Failures

9. Failures

As a basic rule:

- Stop device with the main switch when failures occur which can cause damage to persons, to property and/or to operational safety.
- Additionally disconnect device from power supply and protect against resetting.
- After troubleshooting power up the system as described in chapter 7.8.

9.1 Interference immunity by screening

Interference (e. g. radio interferences) can occur especially in today's highly automated industries. It can lead to malfunctions and even to the failure of entire plants. The overlaying of different types of interference increases the overall level of radiated failure, hence the need to protect all devices from electromagnetic interference (EMI). In industrial process engineering in particular, a high level of immunity is required for electrical instrumentation and control (I & C) equipment. This is why all electronic devices are subject to mandatory CE marking.

CEAG products comply with the requirements of EC Directives 2004/108/EG (EMC directive), 2006/95/EG (low voltage directive) and are entitled to carry the CE marking. If luminaires with electronic ballast comply with the EMC directives, then the interference produced by the high frequency operation of the electronic ballast is within the legal limits. Nevertheless, electronic devices may cause interference in individual cases. As a rule only HF paging systems (in the MHz range) should be used. Reliable operation cannot be guaranteed with the use of inductive paging systems (25-40kHz).

There are a number of ways in which interference can be controlled.


- Circuits should be separated from one another where possible and common returns (GND, Ground) kept as short as possible.
- Parallel cable runs should be kept as short as possible or avoided altogether.
- The use of twisted cables can reduce inductive interference by a factor of 20.
- The most important and most common method for suppressing interference is screening.

9.1.1 Cable screens

Cable screens usually consist of non-magnetic materials such as copper or aluminium. The most popular screens for cables and wires are individual braided screens consisting of two interwoven sets of wires running in opposite directions.

The density and thickness of the braid is the quality characteristic of the screen. It is essential for the screen to cover as much as possible of the area of the conductor and so minimize the reciprocal of amplification. Cover should be around 95% to achieve a good screen. At 60% and below there is no guarantee of reliable immunity.

9.1.2 Screen connection

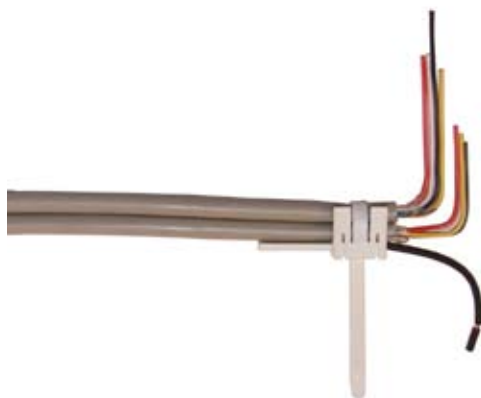


Note:

Screen quick connectors SSA 5-10 for communication lines with a cross section dimension of 5 to 10mm.

Order no. 400 71 347 133

Failures

The type of screen connection depends mainly on the anticipated interference. Grounding the screen at one end (1) is necessary to suppress electrical fields. Interference caused by a magnetic alternating field on the other hand can only be suppressed when the screen is connected at both ends (2).

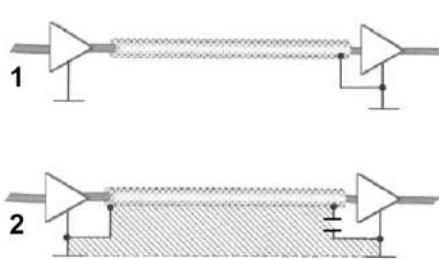

Note:
The avoidance of ground loops contributes to the trouble-free operation of a system.

 Condenser 220nF Y3 ≥ 4 KV

Ground loops with their familiar disadvantages must be avoided when connecting a screen at both ends. High voltage can be induced in large loops and this in turn causes failures. The right way to avoid ground loops is to make a starshaped ground or to take a Y3-condenser.

9.1.3 The fail-safe system

Companies therefore protect their plants from induced EMI by screening their cables. Now the cable screen only has to be connected inside the control cabinet to make the connection to ground. This connection should be low-impedance and with a low inductive resistance. So-called screen quick connectors (SSA 5-10) should be used for this.

The screen quick connector SSA 5-10 gets grounded by potential connecting lines.

It is of course rare for just one cable to be routed into a control cabinet. In most cases a number of data transfer, supply and circuit cables have to be laid into the cabinet. However every opening in the cabinet that can be avoided is an avoidable cause of interference.

Maintenance / Checking

10. Maintenance / Checking

10.1 Safety Notes



WARNING! Risk of Injury!

Improper maintenance work can cause serious personal injury and / or material damage. This work has to be performed only by authorised, skilled and adequate personnel who have received instructions providing information on the device and in observance of local safety regulations.

- Before working on and with the system switch it off and protect it against reset.
- Do not touch the system until its temperature is as high as the ambient temperature.

10.2 General information to maintenance / checking

The carrying out of the safety inspections as required by statutes and directives has to be made regularly. The operator of the emergency lighting system is responsible for organising and supervising this work!

The following information must be specified in writing and made available at all times:

- The nature and extent of the work
- Recording of work results
- Responsibilities and permits for carrying out the work
 - which persons may carry out which operations?
 - which persons are responsible for supervising the work?
- Duties of reporting (e. g. in the case of faults or function tests)
- Organisational measures when working on the emergency lighting system. This may include:
 - Duties of information and reporting on the start, duration and end of the work
 - Safety measures while the work is being carried out: e. g. standby lighting, power supply isolation and lock-out (e. g. removing the fuses, key-operated switch, safety signage)
 - Safety equipment for the personnel carrying out the work on the plant (e. g. suitable work clothing and personal protection equipment)
 - Safety equipment providing protection from hazards caused by adjacent plant (e. g. safety grilles, barriers, making safe or roads)

Maintenance and repair work at the emergency lighting system can be done by the customer service of CEAG Notlichtsysteme GmbH at any time. (s. enclosed Customer Service Order).

Our customer service locations can be found all over Germany, see the enclosed map „Addresses: CEAG Customer Service“.

In addition, we offer you a **Maintenance Contract for Emergency Lighting** making organisation easier to you!

This contract contains the annual checking and includes the following work:

- Mains/-battery shift-function of devices
- Visual check of electrical equipment and batteries of devices
- Mechanical check at the devices
- Checking and adjusting of charging rate
- Operational test of other electronics
- Checking of lamps only for luminaires with CG-monitoring
- Checking of rated operation time (test of capacity) of the batteries




In case of returns you need a RMA - number from us. For further information see www.ceag.de!


Appendix

Appendix A: Overview of terminal assignments

All external connections are made at the tension spring terminal blocks at the top of the switch cabinet. The terminal assignment is shown on the schedules on the front of the enclosures (for the screw push-on terminals on the module) and on the terminal blocks for the external connections.

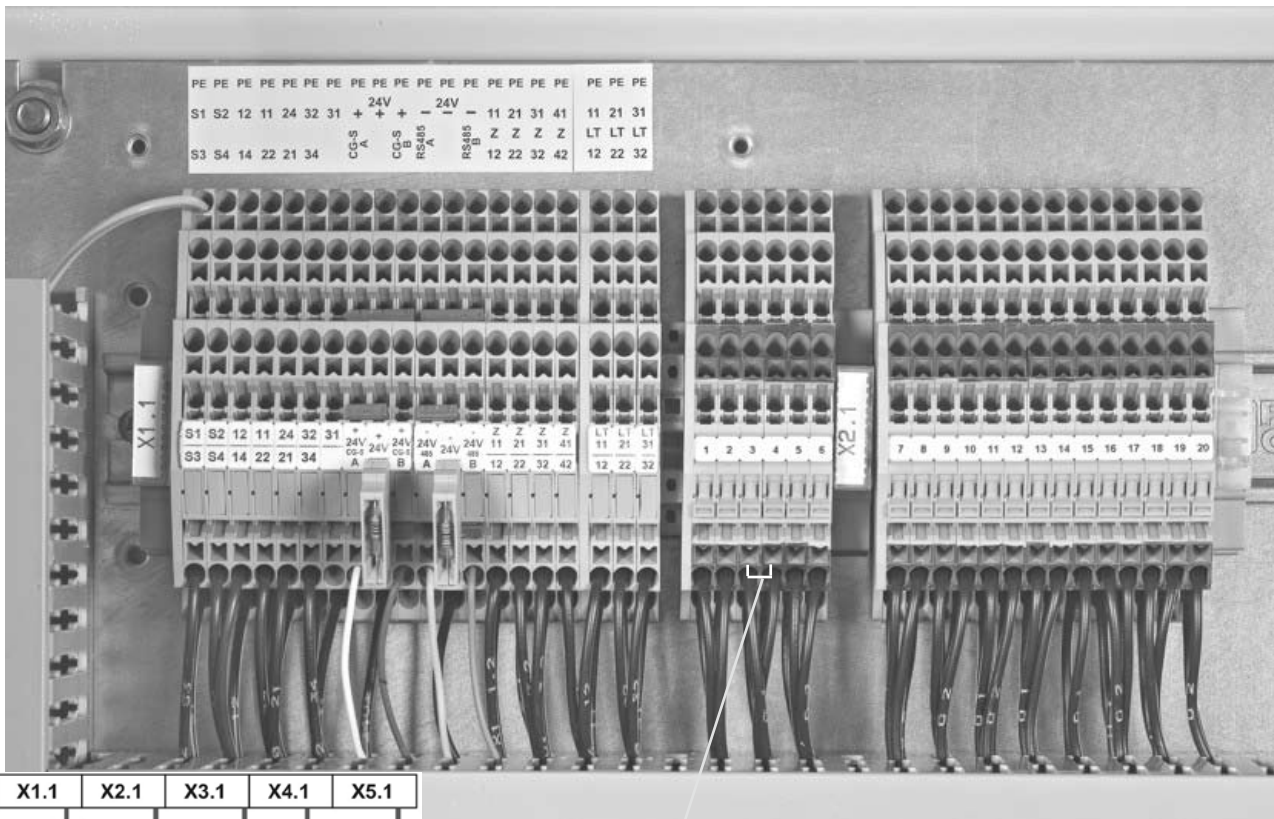

| X1.1 | X2.1 | X3.1 | X4.1 | X5.1 |
|----------------|------|------|------|------|
| 1.1 | 2.1 | 3.1 | 4.1 | 5.1 |
| BGT1 X1 | | 6.1 | 7.1 | 8.1 |
| 1.2 | 2.2 | 3.2 | 4.2 | 5.2 |
| BGT2 X2 | | 6.1 | 7.1 | 8.1 |
| 1.1 | 2.1 | 3.1 | 4.1 | 5.1 |
| BGT3 X3 | | 6.1 | 7.1 | 8.1 |
| 1.1 | 2.1 | 3.1 | 4.1 | 5.1 |
| BGT4 X4 | | 6.1 | 7.1 | 8.1 |
| 1.1 | 2.1 | 3.1 | 4.1 | 5.1 |
| BGT5 X5 | | 6.1 | 7.1 | 8.1 |

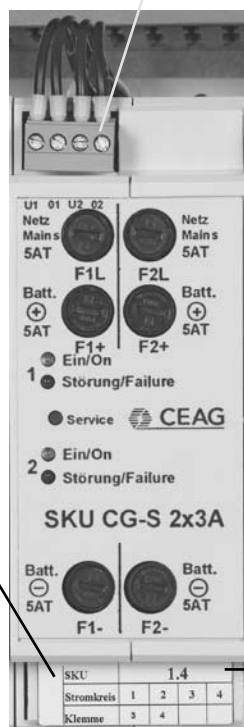

| | |
|-----------|---------------|
| Cable No. | BGT: 1 |
| | Place: 4 |
| | Terminal: 3-6 |

The assignment of the terminal blocks to subracks 1 to 5 is indicated by their arrangement from left to right



Appendix

**Appendix A:
 Overview
 of terminal
 assignments**

Anlagentyp:

ZB-S:

US-S:

| TERMINAL NUMBER | TYPE OF CABLE | DESTINATION | TERMINAL NUMBER | TYPE OF CABLE | DESTINATION |
|-----------------|---------------|-------------|-----------------|---------------|-------------|
| 1 | | | 41 | | |
| 2 | | | 42 | | |
| 3 | | | 43 | | |
| 4 | | | 44 | | |
| 5 | | | 45 | | |
| 6 | | | 46 | | |
| 7 | | | 47 | | |
| 8 | | | 48 | | |
| 9 | | | 49 | | |
| 10 | | | 50 | | |
| 11 | | | 51 | | |
| 12 | | | 52 | | |
| 13 | | | 53 | | |
| 14 | | | 54 | | |
| 15 | | | 55 | | |
| 16 | | | 56 | | |
| 17 | | | 57 | | |
| 18 | | | 58 | | |
| 19 | | | 59 | | |
| 20 | | | 60 | | |
| 21 | | | 61 | | |
| 22 | | | 62 | | |
| 23 | | | 63 | | |
| 24 | | | 64 | | |
| 25 | | | 65 | | |
| 26 | | | 66 | | |
| 27 | | | 67 | | |
| 28 | | | 68 | | |
| 29 | | | 69 | | |
| 30 | | | 70 | | |
| 31 | | | 71 | | |
| 32 | | | 72 | | |
| 33 | | | 73 | | |
| 34 | | | 74 | | |
| 35 | | | 75 | | |
| 36 | | | 76 | | |
| 37 | | | 77 | | |
| 38 | | | 78 | | |
| 39 | | | 79 | | |
| 40 | | | 80 | | |

Appendix

Appendix B: VDE requirements for telecommunication contacts and buzzers

| | Contacts: 11/12/14 | 21/22/24 | 31/32/34 |
|-----------------------------|---------------------------|---------------------|-------------------|
| Signalling status: | Group fault | Operating readiness | Battery operation |
| Operating status: | | | |
| Mains operation..... | – | X | – |
| Mains failure | X | – | X |
| Mains failure MDB | X | – | – |
| Charge fault | X | – | – |
| Circuit fault | X | – | – |
| Luminaire fault..... | X | – | – |
| Sum failure | X | – | – |
| Deep discharge protection.. | X | – | – |
| ISO failure..... | X | – | – |
| Function test..... | – | X | X |
| Battery duration test..... | – | X | X |
| Contact assignment: | | | |
| | 11/14: NO | 21/24: NO | 31/34: NO |
| | 11/12: NC | 21/22: NC | 31/32 : NC |

Note:

X = active, i. e. contacts 11/14 and 21/24 and 31/34 are closed

NO = normally open

NC = normally closed




Note:

Comply with the national regulations and guidelines for indicating and signalling when using a remote switch or remote indicator for emergency lighting systems.

The device has 3 floating signalling contacts (relay outputs) and one buzzer inside the device.

Programmable signalling contacts

each: 1 x ÛM 1 x 24V; 0,5A




**Appendix C:
Location
plan for the
luminaires**

| | |
|--------------|----------------------------|
| Date: | Device address: |
| Time: | Name of the system: |

| | | |
|------------------|----|--|
| Luminaire | 20 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 19 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 18 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 17 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 16 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 15 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 14 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 13 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 12 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 11 | |
| Switch 1 | | |
| Switch 2 | | |

| | | |
|------------------|----|--|
| Luminaire | 10 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 9 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 8 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 7 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 6 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 5 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 4 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 3 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 2 | |
| Switch 1 | | |
| Switch 2 | | |
| Luminaire | 1 | |
| Switch 1 | | |
| Switch 2 | | |



| | |
|------------------------|--|
| Circuit name: | |
| Switch 1: | |
| Switch 2: | |
| Monitoring mode: | |
| | |
| Installed wattage (W): | |
| Installed load (VA) | |

Appendix

FAX to: CEAG Central Customer Service, Fax No. +49 (0)2921 69-624

| |
|-------------------------------|
| Customer Service Order |
|-------------------------------|

| | |
|--------------|---------------------|
| From: | Request No.: |
|--------------|---------------------|

We hereby request the CEAG Notlichtsysteme Customer Service to carry out the work indicated below:

| | |
|----------------------------|----------------------------|
| Customer: | |
| Street: | |
| Postcode + Town: | |
| Contact: | |
| Phone: | Fax: |
| Customer No.: | Customer Order No.: |
| Customer signature: | |

| | |
|---------------------------------|-------------|
| Location/BV: | |
| Street: | |
| Postcode + Town: | |
| Contact: | |
| Phone: | Fax: |
| Request date/Fixed date: | |

| | |
|--|---|
| Repair: <input type="checkbox"/> | Programming and Training: <input type="checkbox"/> |
| Maintenance: <input type="checkbox"/> | Other: <input type="checkbox"/> (see remarks) |

To be filled in by CEAG only:

| | |
|---|---|
| Berechnen: <input type="checkbox"/> | Kostenpauschale: |
| Kostenfrei: <input type="checkbox"/> | Festlegung durch ZKD: <input type="checkbox"/> |

| | |
|--------------------------|--------------------|
| CEAG-Auftragsnr.: | Anlagentyp: |
| Bemerkungen: | |

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Appendix

Assembly and Operating Instructions Central Battery System ZB-S with STAR - Technology



Appendix

CEAG Notlichtsysteme GmbH

Senator-Schwartz-Ring 26
59494 Soest
Germany

Tel: +49 (0) 2921/69-870
Fax: +49 (0) 2921/69-617
Web: www.ceag.de
Email: info-n@ceag.de

Cooper Safety

Jephson Court
Tancred Close
Royal Leamington Spa
Warwickshire CV31 3RZ
United Kingdom
Tel: +44 (0) 1926 439200
Fax: +44 (0) 1926 439240
Web: www.cooper-safety.com
Email: enquiries@cooper-safety.com

300 80 001 457 (J)/XXX/07.10/WK